

**INSTALLATION INSTRUCTIONS FOR INSTALLING A SAFETY GUARD REPLACEMENT KIT IN
A NATIONAL VENDORS®, CROWN SEVENTY TWO®, SERIES OR GOLDEN FURNITURE LINE 21CE-72
AND MODULINE, SERIES 21CE ELECTRIC CANDY MERCHANDISER**

These instructions cover the procedure for installing a Safety Guard Replacement Kit in a Crown Seventy Two, Series or Golden Furniture Line 21CE-72 and Moduline, Series 21CE Electric Candy Merchandiser.

Read these instructions carefully and thoroughly before installing the Kit. Retain these instructions for part number and installation information.

Kit, Part Number 127-1096, contains the following parts:

Part Number	Description	Quantity
127-7016 Δ	Empty Switch Cover	4
9900-129 *	No.4-24 x 1/4 PHS S/T Screw	2
127-1095	Safety Guard	1
110-6656 *	No.8-32 x 5/16 Carriage Bolt	2
9900-033 *	No.8 External Tooth Lockwasher	2
9900-034 *	3/8 x .170 x .032 Steel Washer	2
9900-031 *	No.8-32 Wing Nut	2
127-0028	Switch Covers Label Assortment	1
127-1097	Installation Instructions	1
	* * *	

Δ In envelope stamped 127-0035

* In envelope stamped 127-0036

TO INSTALL THE KIT

WARNING

To prevent a possible shock hazard be sure the three Selector Switch Terminal Covers which cover the switches on the three Selector Panel Assemblies are in place. Selector Switch Terminal Covers, Part Number 121-2034, can be ordered from National Vendors.

A. PARTS REMOVAL

1. Disconnect the Merchandiser's electrical Service Cord from the wall receptacle.
2. Unlock and open the Cabinet Door.
3. Remove four No.8-32 Wing Nuts, four No.8 External Tooth Lockwashers, four 3/8 x .170 x .032 Steel Washers, four No.8-32 x 5/16 Carriage Bolts and the Anti-Pilferage Guard from the Merchandiser. Destroy the Anti-Pilferage Guard.
4. Swing out the No.1 (bottom) Tray and remove the No.4-24 x 1/4 Pan Head Self Tapping Screws and the two Empty Switch Covers from the bottom of the No.1 Tray.

5. Repeat Step A-4 for the No.3 (third from bottom) Tray.

B. INSTALLATION OF THE KIT

1. Install two Empty Switch Covers, Part Number 127-7016, included in the Kit, on the bottom of the No.1 Tray, as shown in Figure 1, using the No.4-24 x 1/4 Pan Head Self Tapping Screws removed in Step A-4. Tighten the Screws. Two No.4-24 x 1/4 Pan Head Self Tapping Screws are included in the Kit.
2. Repeat Step B-1 for the No.3 Tray.
3. Swing the Trays back in the Merchandiser.
4. Install the replacement Safety Guard, Part Number 127-1095, included in the Kit.
 - a. Place four No.8-32 x 5/16 Carriage Bolts, Part Number 110-6656, removed in Step A-3, through the four holes in the Safety Guard as shown in Figure 1. Two Carriage Bolts are included in the Kit.
 - b. Place tape over the heads of the Carriage Bolts to hold the Bolts in place.
 - c. Attach the Safety Guard to the "U" Shaped Channel using four No.8 External Tooth Lockwashers, Part Number 9900-033, four 3/8 x .170 x .032 Steel Washers, Part Number 9900-034, and four No.8-32 Wing Nuts, Part Number 9900-031, which were removed in Step A-3. Two Lockwashers, Steel Washers and Wing Nuts are included in the Kit. Place the External Tooth Lockwashers next to the "U" Shaped Channel and place the Steel Washers between the External Tooth Lockwashers and the Wing Nuts as shown in Figure 1.
 - d. Remove the tape from the Carriage Bolts.
 - e. Adjust the Safety Guard by sliding the largest item to be vended down the Delivery Chute. Lower the Safety Guard to the minimum height which will allow the item to drop into the Delivery Pan. Tighten the Wing Nuts.
5. Peel one Switch Safety Cover Warning Label off the Switch Covers Label Assortment, Part Number 127-0028, included in the Kit, and attach it to the front of the No.1 Tray as shown in Figure 2.

6. Peel the other Switch Safety Cover Warning Label off the Switch Covers Label Assortment, included in the Kit, and attach it to the front of the No.3 Tray as shown in Figure 2.
7. Peel the Selector Switch Cover Warning Label off the Switch Covers Label Assortment, included in the Kit, and attach it to the Display Frame Assembly Lower Horizontal Spacer as shown in Figure 2.
8. Peel the Shock Hazard Label off the Switch Covers Label Assortment, included in the Kit, and attach it to the lower Selector Switch Terminal Cover as shown in Figure 2. See Warning below.
9. Close and lock the Cabinet Door.
10. Connect the Merchandiser's electrical Service Cord to a properly polarized wall receptacle.
11. Test vend the Merchandiser.

WARNING

- | | |
|--|--|
| <ol style="list-style-type: none">1. If the lower Selector Switch Terminal Cover is missing from the Door, remove one of the upper Covers and attach the Shock Hazard Label to that Cover. Install the Cover over the Lower Selection Switch Assembly.2. If one or more Selector Switch Terminal Covers are missing, order the required number of Covers, Part Number 121-2034, from National Vendors | <p>Parts Department at once. Install the Covers on each Selection Switch Assembly that may be missing a Cover.</p> <ol style="list-style-type: none">3. National Vendors recommends that any 21CE or 21CE-72 Merchandiser that does not have a Selector Switch Terminal Cover over the lower Selection Switch Assembly be taken out of service until the Selector Switch Terminal Cover is installed properly. |
|--|--|

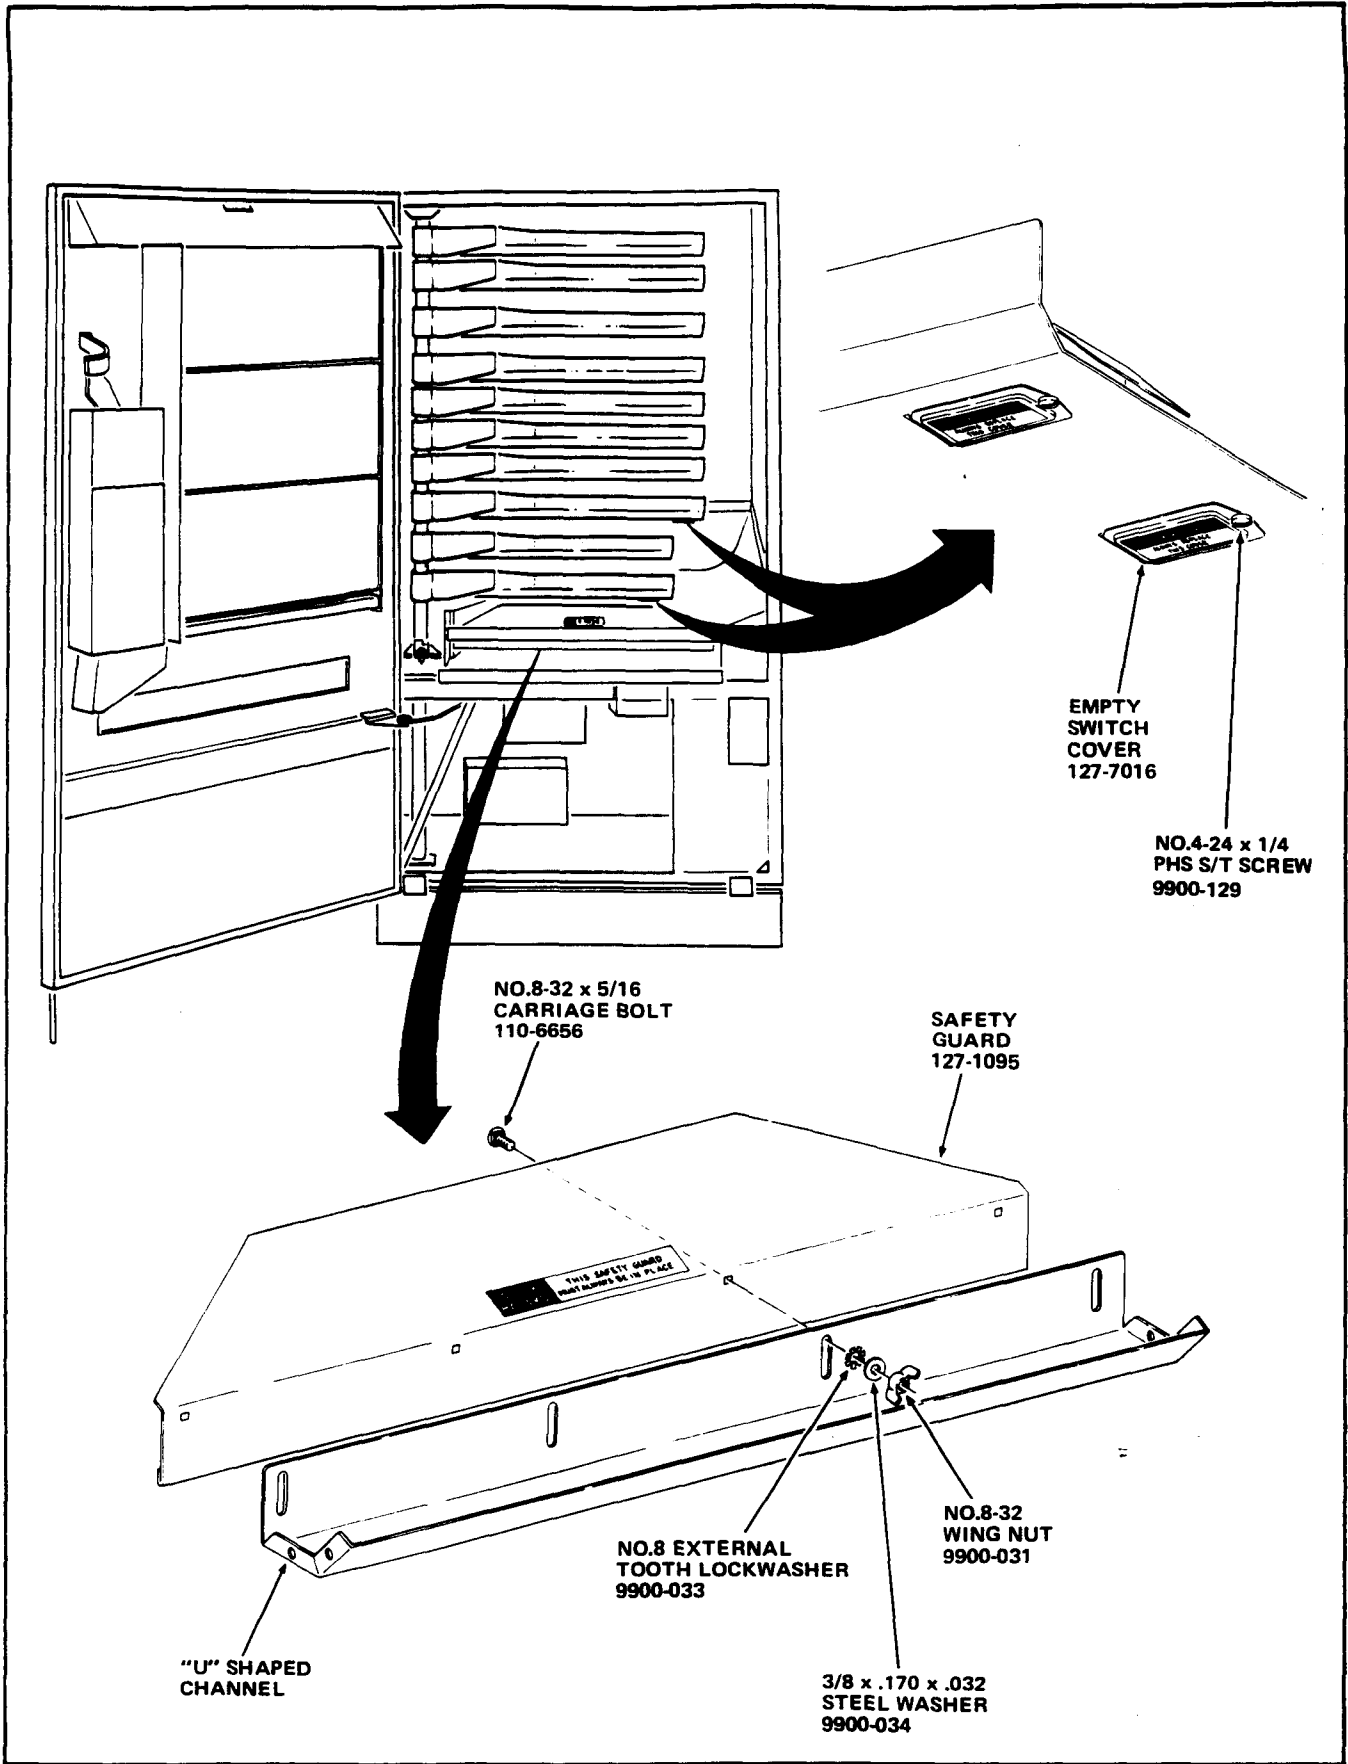


FIGURE 1

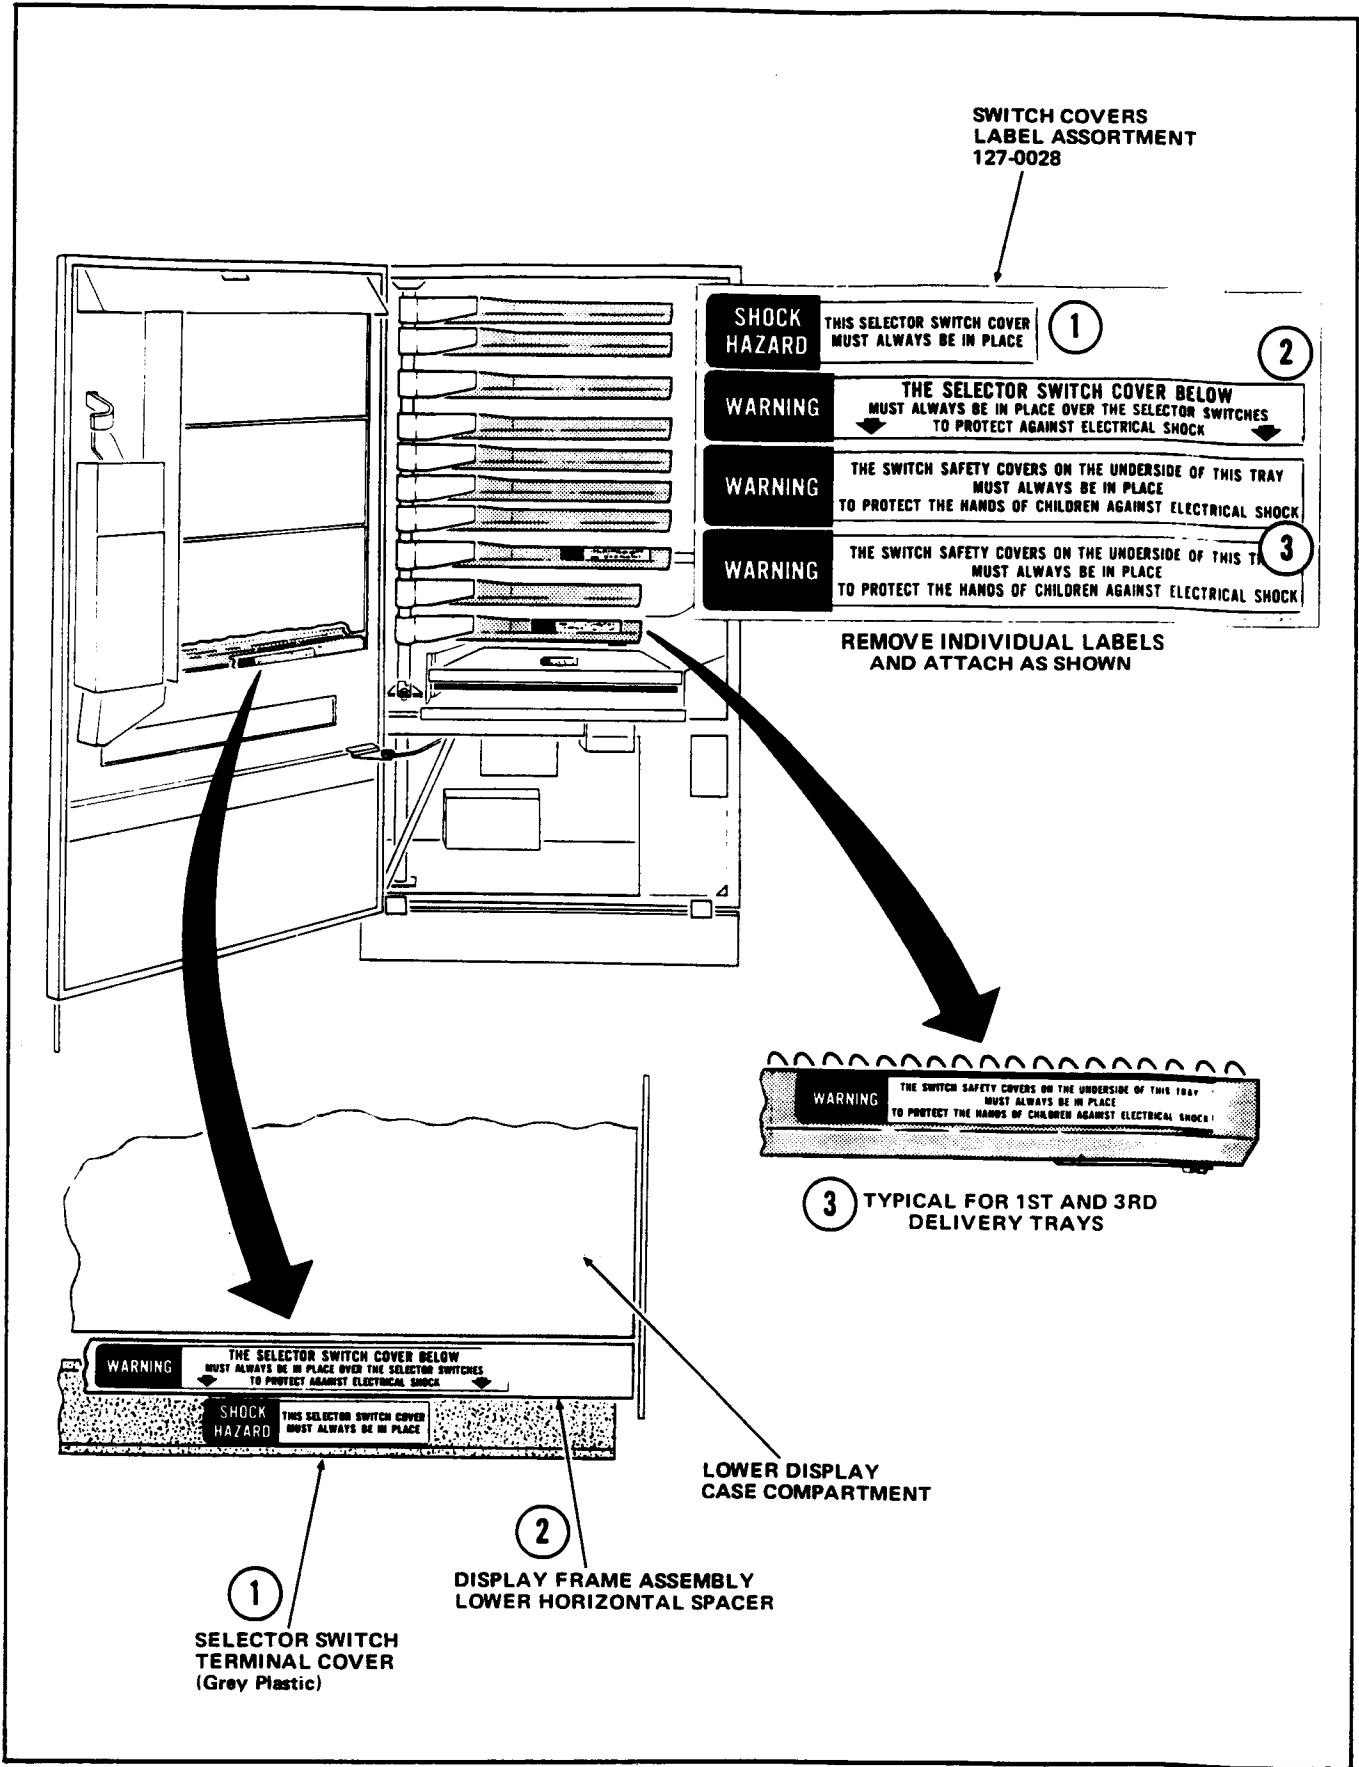


FIGURE 2