

INSTRUCTIONS FOR INSTALLING A 5 PRICE OR 10 PRICE PRICE BOARD AND TAPE ASSEMBLY REPLACEMENT KIT IN A NATIONAL VENDORS®, CROWN SEVENTY TWO®, SERIES OR GOLDEN FURNITURE LINE 140 SHOWCASE 20, 24, 27, OR 30 SNACK/CANDY MERCHANDISER

These instructions cover the procedure for installing a 5 price or 10 price Price Board and Tape Assembly Replacement Kit in a Crown Seventy Two, Series or Golden Furniture Line 140 Showcase 20, 24, 27, or 30 Snack/Candy Merchandiser.

Read these instructions carefully and thoroughly before installing the Kit. Retain these instructions for part number and installation information.

Two Kits are covered in these instructions. To determine the Kit that you have received, refer to Figure 1. Compare the Price Board and Tape Assembly contained in the Kit with the Price Board and Tape Assembly shown in Figure 1.

The 5 price Price Board Replacement Kit, Part Number 140-1220, contains the following parts:

Part Number	Description	Quantity
140-1217	5 price Price Board and Tape Assembly	1
140-1105	1-15 Price Board Tape	1
140-1106	16-30 Price Board Tape	1
140-1219	Installation Instructions	1

The 10 price Price Board Replacement Kit, Part Number 140-1221, contains the following parts:

Part Number	Description	Quantity
140-1218	10 price Price Board and Tape Assembly	1
140-1105	1-15 Price Board Tape	1
140-1106	16-30 Price Board Tape	1
140-1219	Installation Instructions	1

TO INSTALL THE KIT

A. PARTS REMOVAL

NOTE

Retain all screws removed during the PARTS REMOVAL Section in containers marked for proper identification and use during the installation of the Kit.

1. Unlock and open the Cabinet Door.

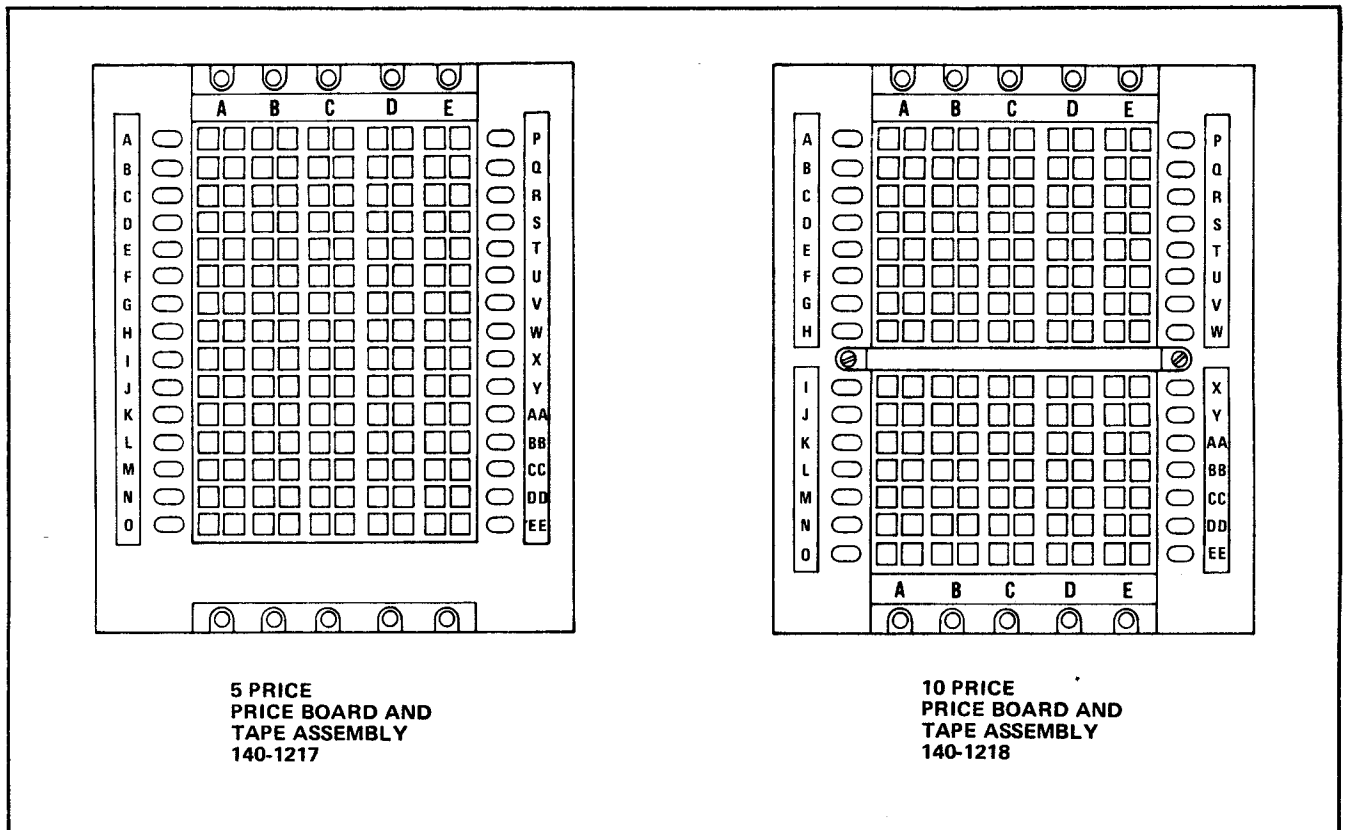


FIGURE 1

Printed in U.S.A.

WARNING

When working on electrical components within the Merchandiser there is the danger of electrical shock.

2. Disconnect the Merchandiser Electrical Service Cord from the Wall Receptacle.
3. Locate the Price Board Cover and the Price Board. They are to be found in the upper right hand corner of the Merchandiser. See Figure 2.
4. Remove the two Round Head Screws that attach the Price Board Cover to the Cabinet. See Figure 3.
5. Disconnect all the Connector Lead Wires that are attached to the Price Board.
6. Remove the four Round Head Screws that attach the Price Board to the Cabinet. See Figure 3.
7. The Price Board is now hanging by the Connector Lead Wires. To free the Price Board, push the wire and the attached connector thru the rectangular opening in the Price Board. Do this for each Connector Lead Wire.

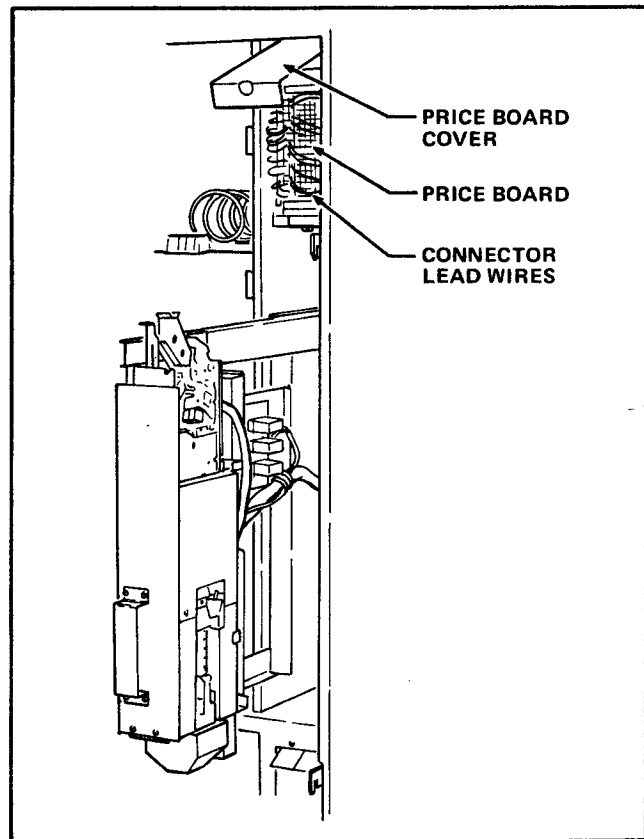


FIGURE 2

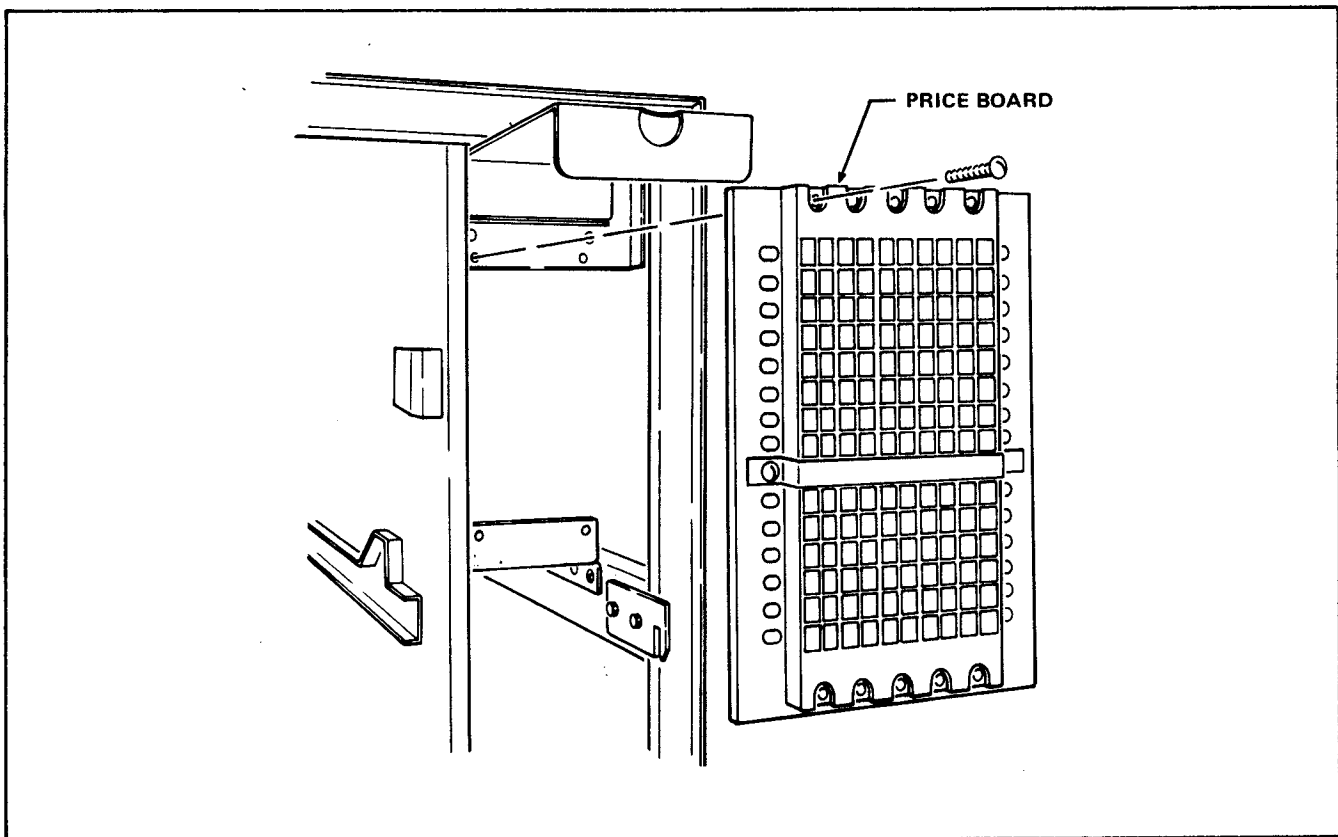


FIGURE 3

B. INSTALLATION OF THE KIT

NOTE

Step 1 and 2 apply only to the 5 price Price Board.

1. Peel the backing strip from the 1-15 Price Board Tape, Part Number 140-1105, included in the Kit, and align the numeral 1 next to the first rectangular opening at the top-left of the 5 price Price Board and Tape Assembly, Part Number 140-1217, included in the Kit. Position the 1-15 Price Board Tape directly over the letter A and fix it firmly in place.
2. Repeat the procedure of Step 1 with the 16-30 Price Board Tape, Part Number 140-1106, included in the Kit, fixing it over the letter 'P'.

NOTE

Steps 3, 4 and 5 apply only to the 10 price Price Board.

3. Using a scissors or some other tool, cut the 1-15 Price Board Tape, Part Number 140-1105, included in the Kit, between the numbers 8 and 9. Similarly, cut the 16-30 Price Board Tape, Part Number 140-1106, included in the Kit, between the numbers 23 and 24.
4. Peel the backing strip from the 1-8 Price Board Tape and align the numeral 1 next to the first rectangular opening at the top-left of the 10 price Price Board and Tape Assembly, Part Number 140-1218, included in the Kit. Fix the Tape firmly in place directly over the letter A.
5. Repeat with the 9-15 Tape, fixing it over the letter I. Also the 16-20 and 24-30 tapes. Fix them over the letter P and X respectively. See Figure 4.

NOTE

The procedure for installing the Price Board in the Merchandiser is the same for the 20, 24, 27 and 30 selection models.

6. Install the Price Board in the Merchandiser by attaching the lettered Connector Lead Wires to their respective receptacles on the back of the Price Board. On the 5 price Price Board Connect A, B, C, D, and E. On the 10 price Price Board Connect A thru E and F, G, H, J, and K.
7. Insert the numbered Connector Lead Wires thru their respective rectangular openings in the Price Board.
8. Attach the Price Board to the Cabinet with the four Round Head Screws removed in Step 6, Part A, Parts Removal Section.
9. Attach the Connector Lead Wires to the correct Price Setting Receptacles.
10. Attach the Price Board Cover to the Cabinet with the two Round Head Screws removed in Step 4, Part A, Parts Removal Section.

C. CHECKS AND ADJUSTMENTS

1. Close and lock the Cabinet Door.
2. Connect the Merchandiser Electrical Service Cord to the Wall Receptacle.
3. Use coins to test vend each selection.
 - a. Use exact change to check the price setting.
 - b. If the Coin Mechanism returns change, use coins totaling more than the vending price to check the change return.
 - c. Use coins totaling less than the vending price of each item and attempt to make a purchase. The merchandiser should not vend.
4. If the Merchandiser fails to vend properly, recheck the connections made in Step 9, Part B, Installation of the Kit.
5. When the operation of the Merchandiser is satisfactory, place the products that were vended into their proper spirals. Close and lock the Cabinet Door. The Merchandiser is ready for vending.

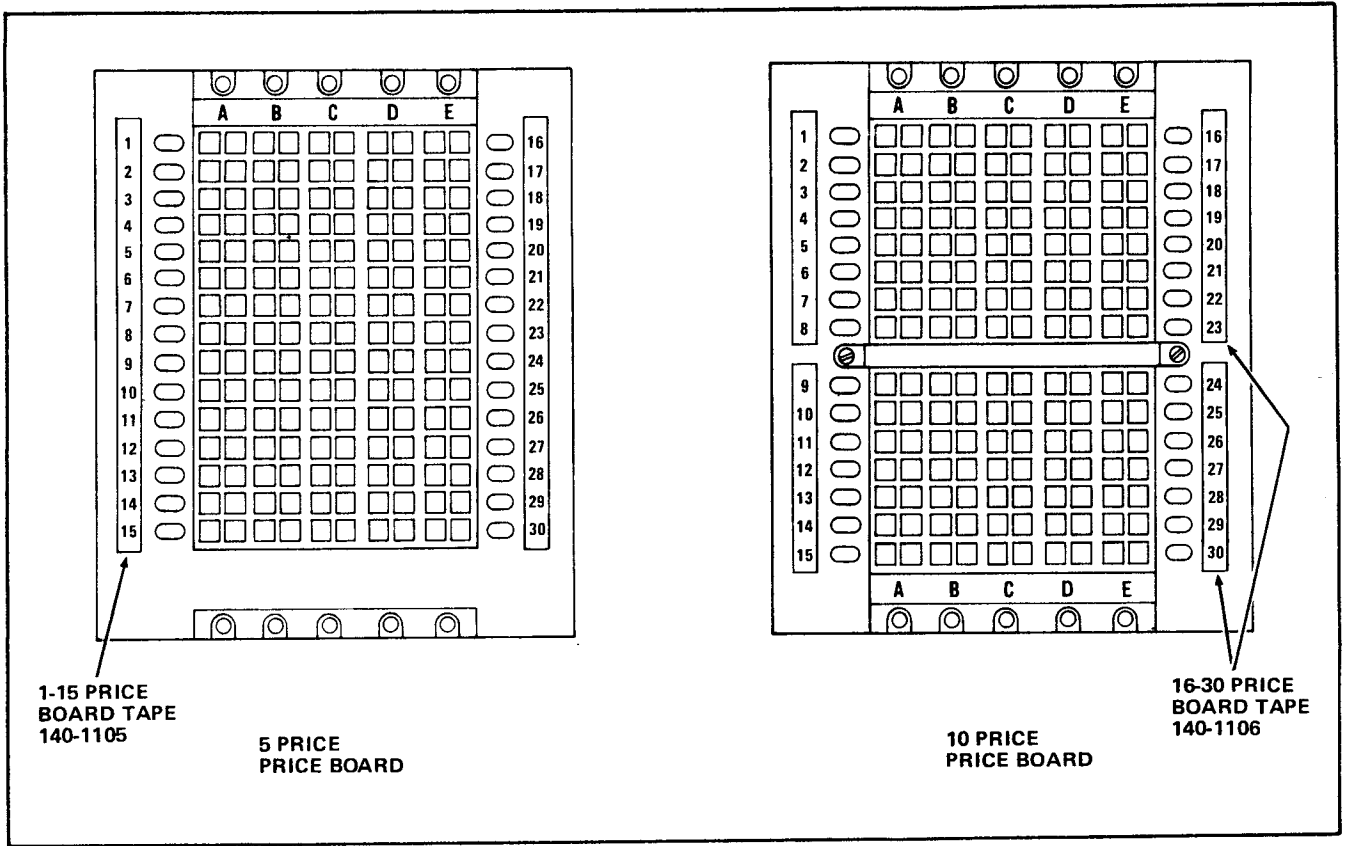


FIGURE 4