

TOTAL COUNT: 46 ; No      OVERSIZE ART  
**AVOID MAKING MARKS ON THIS PAGINATION GUIDE.**  
**PLEASE RETURN THIS GUIDE WITH ARTWORK!**

FRONT SIDES	BACK SIDES
Front Cover	Instructions
1	2
3	4
11	12
13	14
15	16
17	18
18A	18B
18C	18D
27	28
35	36
- 37 - <i>bin 39</i>	38
39 <i>bin 25</i>	40
41 <i>bin 25</i>	42
43	44
45	46
47	48
49	50
55	56
57	58
65	66
67	68
69	70
105	106
107	108

**P/N 1470053**

**INCORPORATE THIS SUPPLEMENT**

**IN**

**The 147/148 PROGRAMMING GUIDE**

**(Part Number 1470059 Rev. D)**

**INSTRUCTIONS FOR INCORPORATING  
THIS SUPPLEMENT  
IN YOUR 147/148 - 474/475/476 - 461/462  
PROGRAMMING GUIDE**

<b>REMOVE THESE PAGES FROM YOUR GUIDE:</b>	<b>REPLACE THEM WITH THESE PAGES FROM THE SUPPLEMENT PACKAGE:</b>
1 through 4	1 through 4
11 through 18	11 through 18
18A and 18B	18A and 18B
18C and 18D	18C and 18D
27 and 28	27 and 28
35 through 50	35 through 50
55 through 58	55 through 58
65 through 70	65 through 70
105 through 108	105 through 108

THE PROCEDURES IN THIS PROGRAMMING GUIDE  
ARE FOR USE WITH:

MODEL 147, 148, 461, 462, AND 474 SOFTWARE VERSION

**RCE-1**

MODEL 465 AND 476 MAIN CONTROLLER SOFTWARE VERSION

**RCE-1**

MODEL 475: FRESH BREW HOT DRINK MODULE SOFTWARE VERSION

**503B0**

MODEL 476: FREEZE DRY HOT DRINK MODULE SOFTWARE VERSION

**503B0**

Complete the Software Version retrieval procedure on page 94 of this PROGRAMMING GUIDE.

The version number/numbers in the display should be the same as the version number listed above.

If the version number in the display is **NOT** the same as the version number listed above, contact National Vendors' Service Department at 1-800-325-8811.


FUNCTION	IF YOU WANT TO...		COMPLETE THIS PROCEDURE	ON THIS PAGE		
CODE	Access functions/procedures reserved for the supervisor		P0-1	26		
	Assign a new Master User Code		P0-3	29		
PRINTER	Print the data list or the price list		P0-2	27		
LIQUID PRODUCT	Water Time		P0-4	30		
DRY PRODUCT	Steep Time		P0-6	32		
	Air Compressor Time		P0-7	33		
PRICE	Price an individual selection		P1-1	35		
	Set a tray to one price		P1-2	36		
	Set entire machine to one price		P1-3	37		
	Check the price of an individual selection		P1-1	35		
DATA	COUNTS (Volume)	TOTAL VENDS	For the machine	P2-1	38	
			For a tray	P2-1	38	
			For a selection	P2-1	38	
		FREE VENDS	For the machine	P2-2	39	
			For a tray	P2-2	39	
			For a selection	P2-2	39	
		TEST VENDS	For the machine	P2-3	40	
			For a tray	P2-3	40	
			For a selection	P2-3	40	
		WIN VENDS	For the machine	P2-4	41	
			For a tray	P2-4	41	
			For a selection	P2-4	41	
		DISCOUNT VENDS	For the machine	P2-5	42	
			For a tray	P2-5	42	
			For a selection	P2-5	42	
	SALES (Value)	TOTAL SALES	For the machine	P2-6	43	
			For a tray	P2-6	43	
			For a selection	P2-6	43	
		FREE VEND SALES	For the machine	P2-7	44	
			For a tray	P2-7	44	
			For a selection	P2-7	44	
		WIN SALES	For the machine	P2-8	45	
			For a tray	P2-8	45	
			For a selection	P2-8	45	
		DISCOUNT SALES	For the machine	P2-9	46	
			For a tray	P2-9	46	
			For a selection	P2-9	46	
		Validator stacker bill inventory			P2-10	47
		Cash Box inventory			P2-11	47
		Rinse Cycle count since category was last cleared			P2-12	48
View the number of failure messages from the serial validator			P2-13	48		
View the last time and date the health control was set			P2-14	49		
View the last time and date the machine was powered down			P2-15	49		
FREE VEND	Put the merchandiser on free vend		P3-1	50		
	Take merchandiser off free vend		P3-2	51		

FUNCTION	IF YOU WANT TO...	COMPLETE THIS PROCEDURE	ON THIS PAGE	
CONFIGURE	Lock or unlock functions - MASTER USER ONLY	P4-000	52	
	Clear all resettable data (RAM Clear) - MASTER USER ONLY	P4-0000	54	
	Identify the type of coin mech being used	P4-1	56	
	Select language to be used in display messages	P4-2	57	
	Set the message scrolling speed	P4-3	58	
	Identify the trays being used	P4-4	59	
	Couple or uncouple two positions of a tray	P4-5	60	
	Define the bill validator being used	P4-6	61	
	Select denomination of bills to be accepted	P4-15	61	
	Set the validator for escrow or no escrow	P4-8	63	
	Activate or de-activate the declining balance feature	P4-9	64	
	Activate or de-activate the winner feature	P4-10	65	
	Set the basic configuration for the machine	P4-11	66	
	Compressor cycle temperature for can unit	P4-12	67	
	Chilled candy target air temperature	P4-12	67	
	Cup size/default water and ingredient settings	P4-13	68	
	Rinse cycle frequency	P4-16	70	
	Ratio - Percent chocolate ingredient in Cappuccino drink	P4-17	71	
Whipped coffee drinks - default settings	P4-18	72		
PAYOUT	A single coin	Quarter	P5-1	73
		Dime	P5-2	74
		Nickel	P5-3	75
	Inventory of an entire tube	Quarter	P5-4	76
		Dime	P5-5	77
		Nickel	P5-6	78
	All coins in all tubes	P5-7	79	
SET TIME	Set day and time for internal clock	P6-1	80	
	Set month, date and year for internal clock	P6-2	81	
	Set inhibit vending controls	P6-3	82	
	Set free vending controls	P6-4	85	
	Set discounted vending controls	P6-5	88	
	Set custom message controls	P6-6	91	
SERVICE	Retrieve the software version number	P7-1	94	
	Check operation of the display elements	P7-2	95	
	Test for faults	P7-3	96	
	Put all of the motors in the home position/run all motors	P7-4	97	
	Last can vending	P7-5	98	
	Check communication with the coin mech	P7-6	99	
	Check communication with the bill validator	P7-7	101	
	Cup drop	P7-8	103	
	Whipper motor test	P7-9	104	
	Air compressor test	P7-10	105	
	Brewer mechanism test	P7-11	106	
	Brewer rinse test	P7-12	106	
	Bowl rinse test	P7-13	107	

FUNCTION	IF YOU WANT TO...	COMPLETE THIS PROCEDURE	ON THIS PAGE
SERVICE (Continued)	Food door test	P7-14	107
	Delivery door lock solenoid test	P7-15	108
	Food unit temperature display	P7-16	108
TEST VEND	A single selection without establishing credit	P13-1	109
	A single selection after establishing EXACT credit	P13-2	110
	A single selection after establishing LESS credit than required	P13-3	111
	A single selection after establishing MORE credit than required	P13-4	112


(PAGE 9 IS THE NEXT PAGE IN THIS DOCUMENT)

# OVERALL PROGRAMMING MATRIX

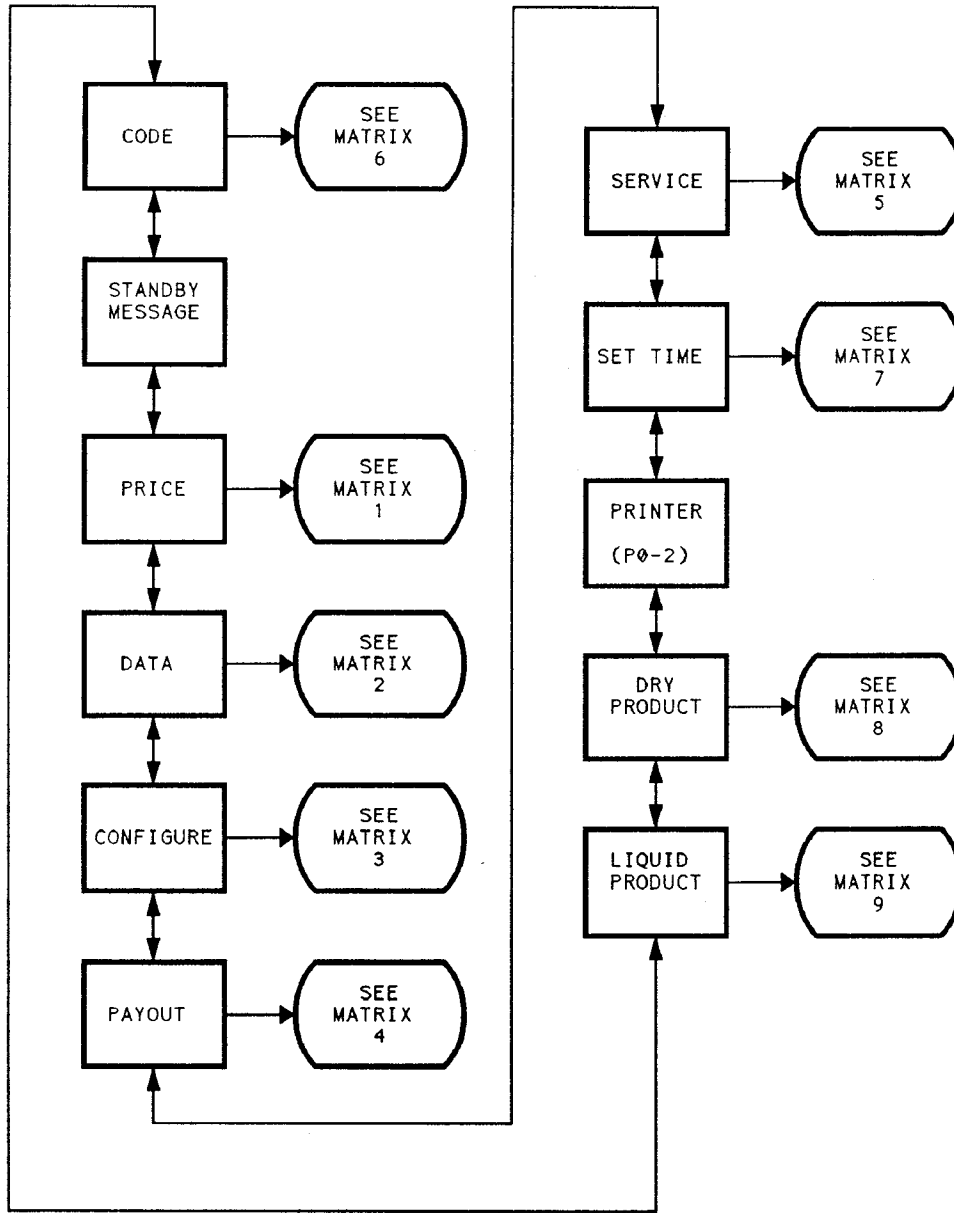





# PRICE PROGRAMMING MATRIX

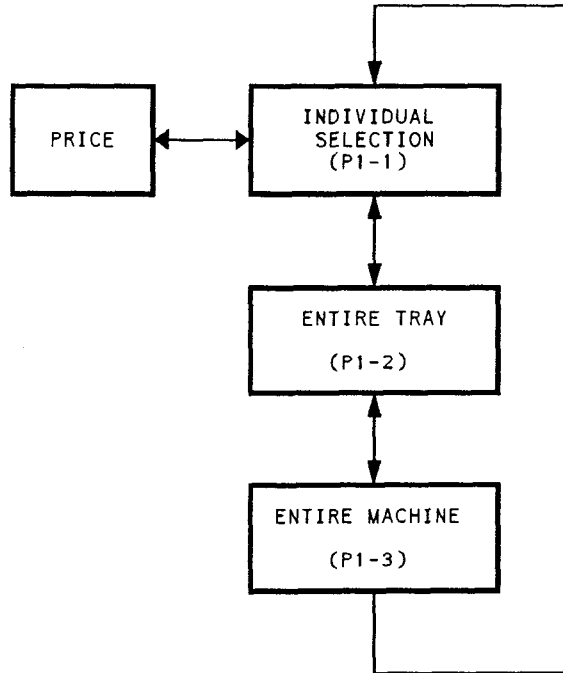


# DATA PROGRAMMING MATRIX

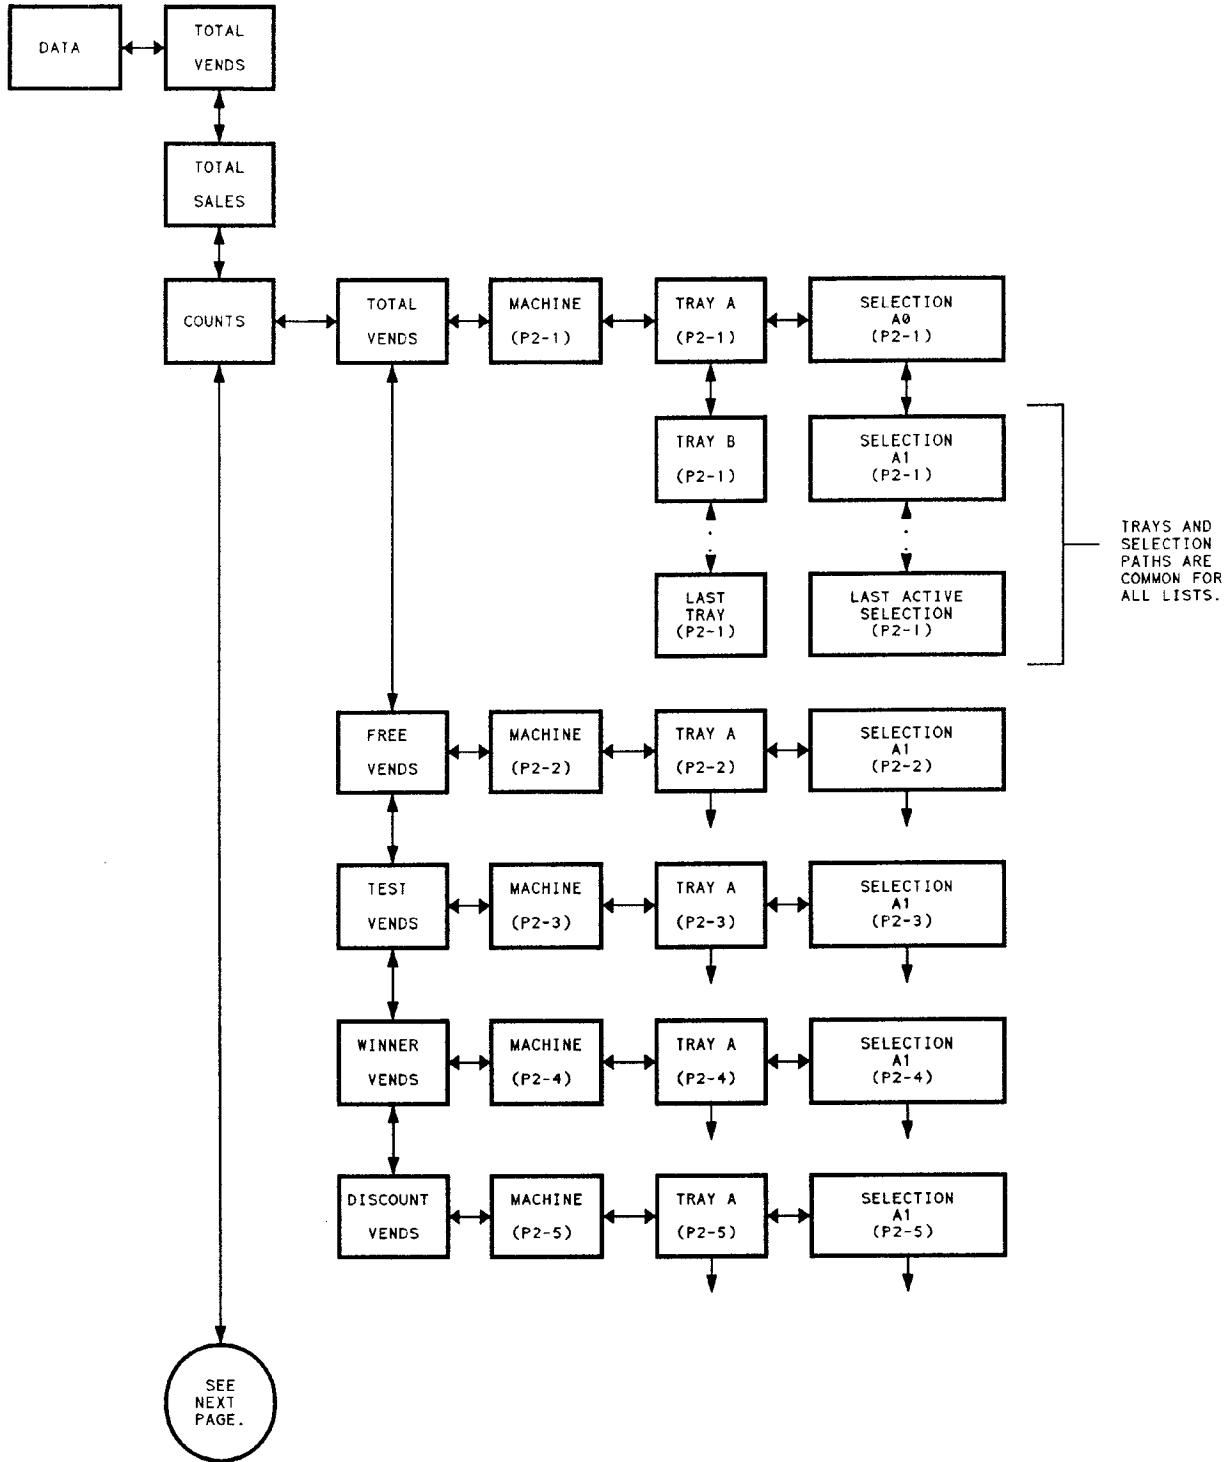


# DATA PROGRAMMING MATRIX (Continued)

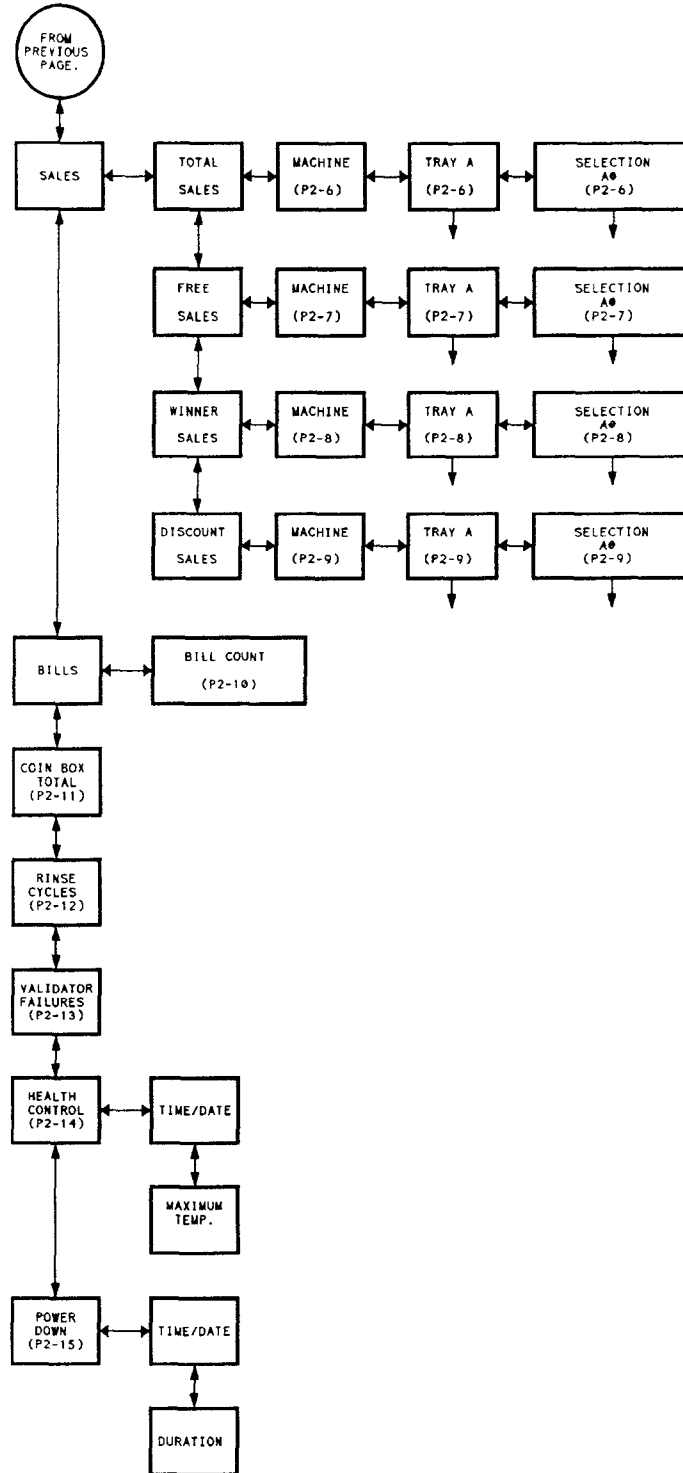


# CONFIGURE PROGRAMMING MATRIX

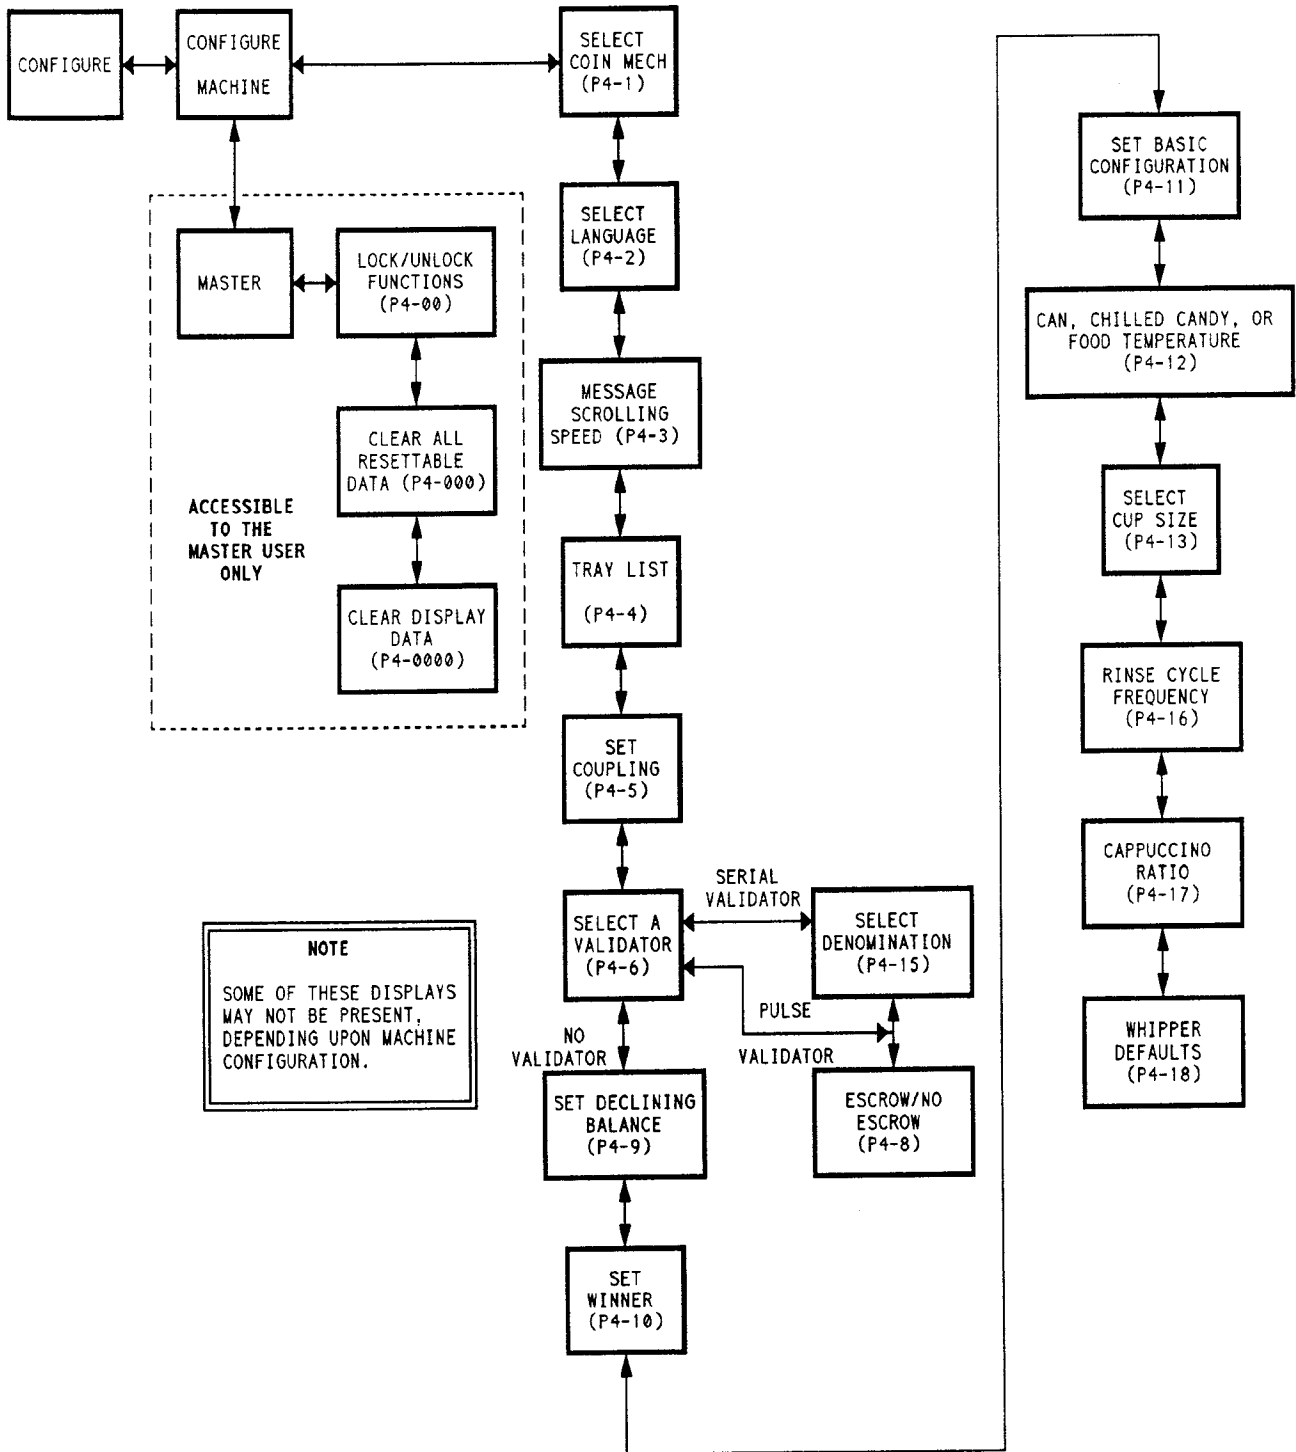


### PAYOUT PROGRAMMING MATRIX

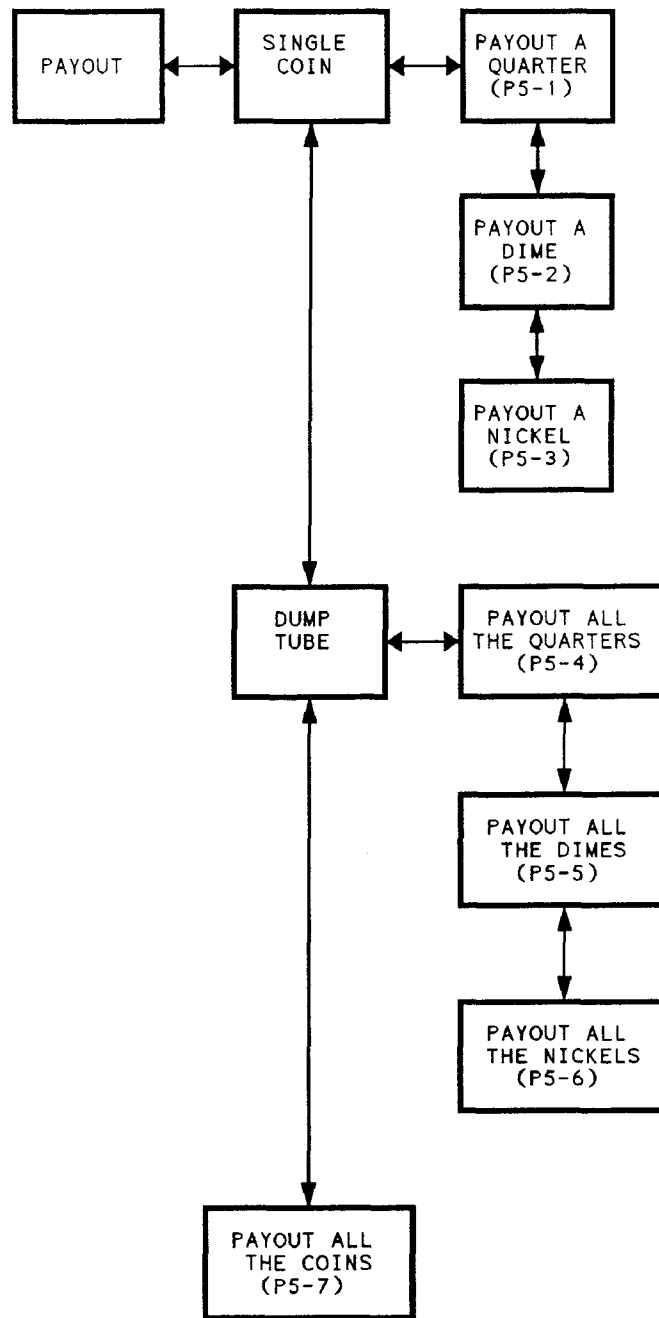


# SERVICE PROGRAMMING MATRIX

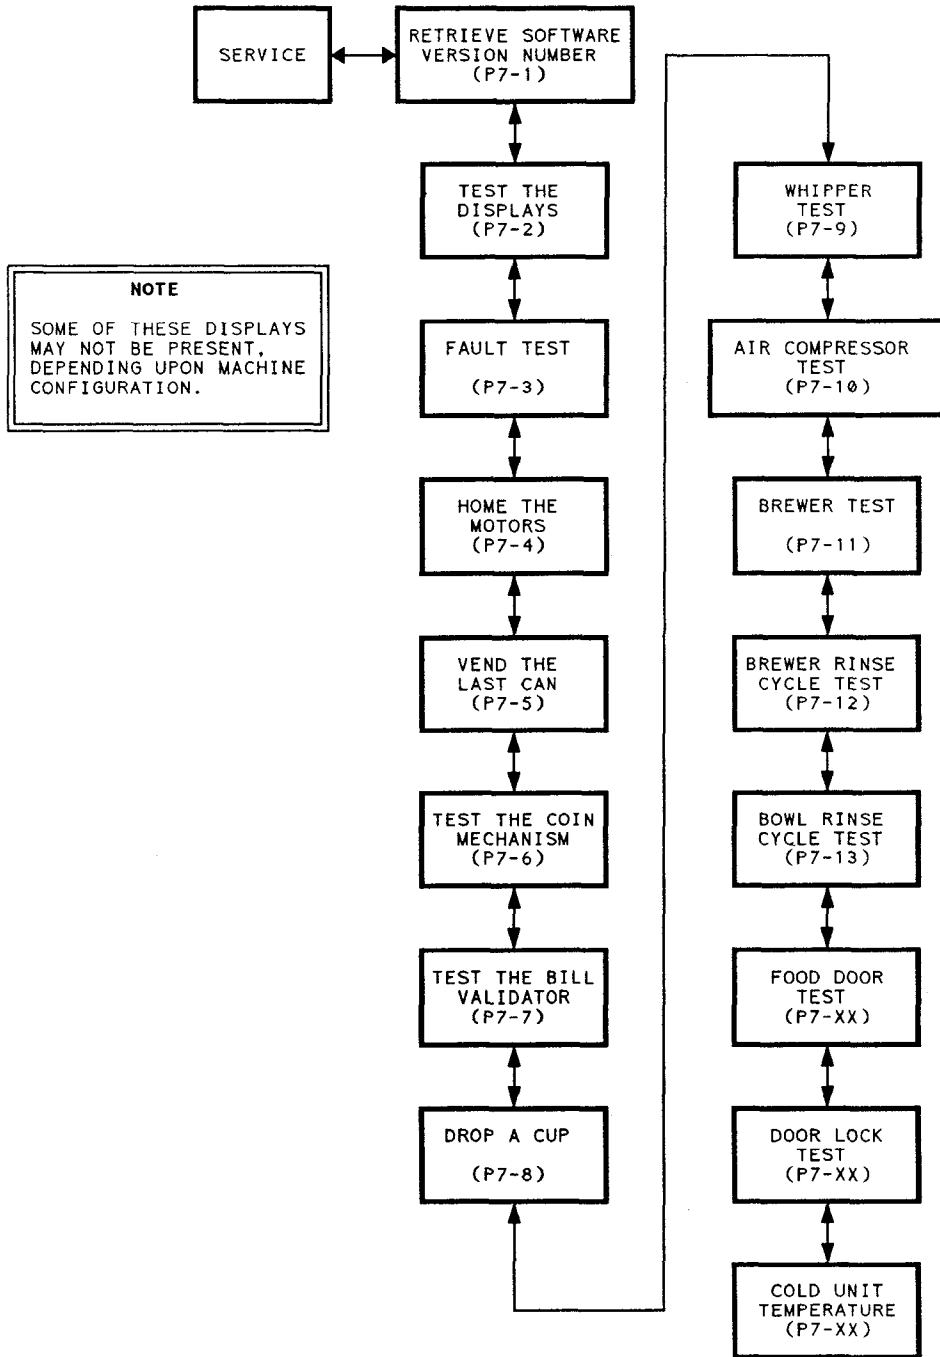

# CODE PROGRAMMING MATRIX

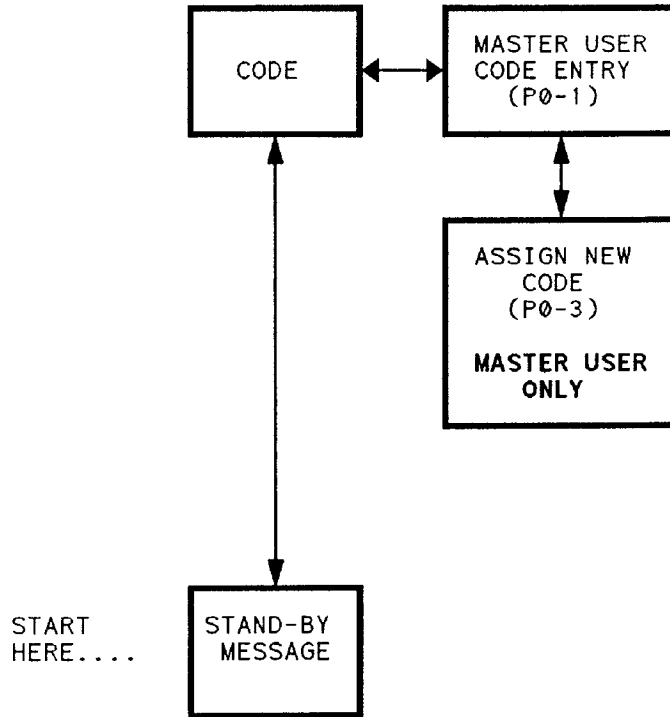


# TIME OF DAY PROGRAMMING MATRIX

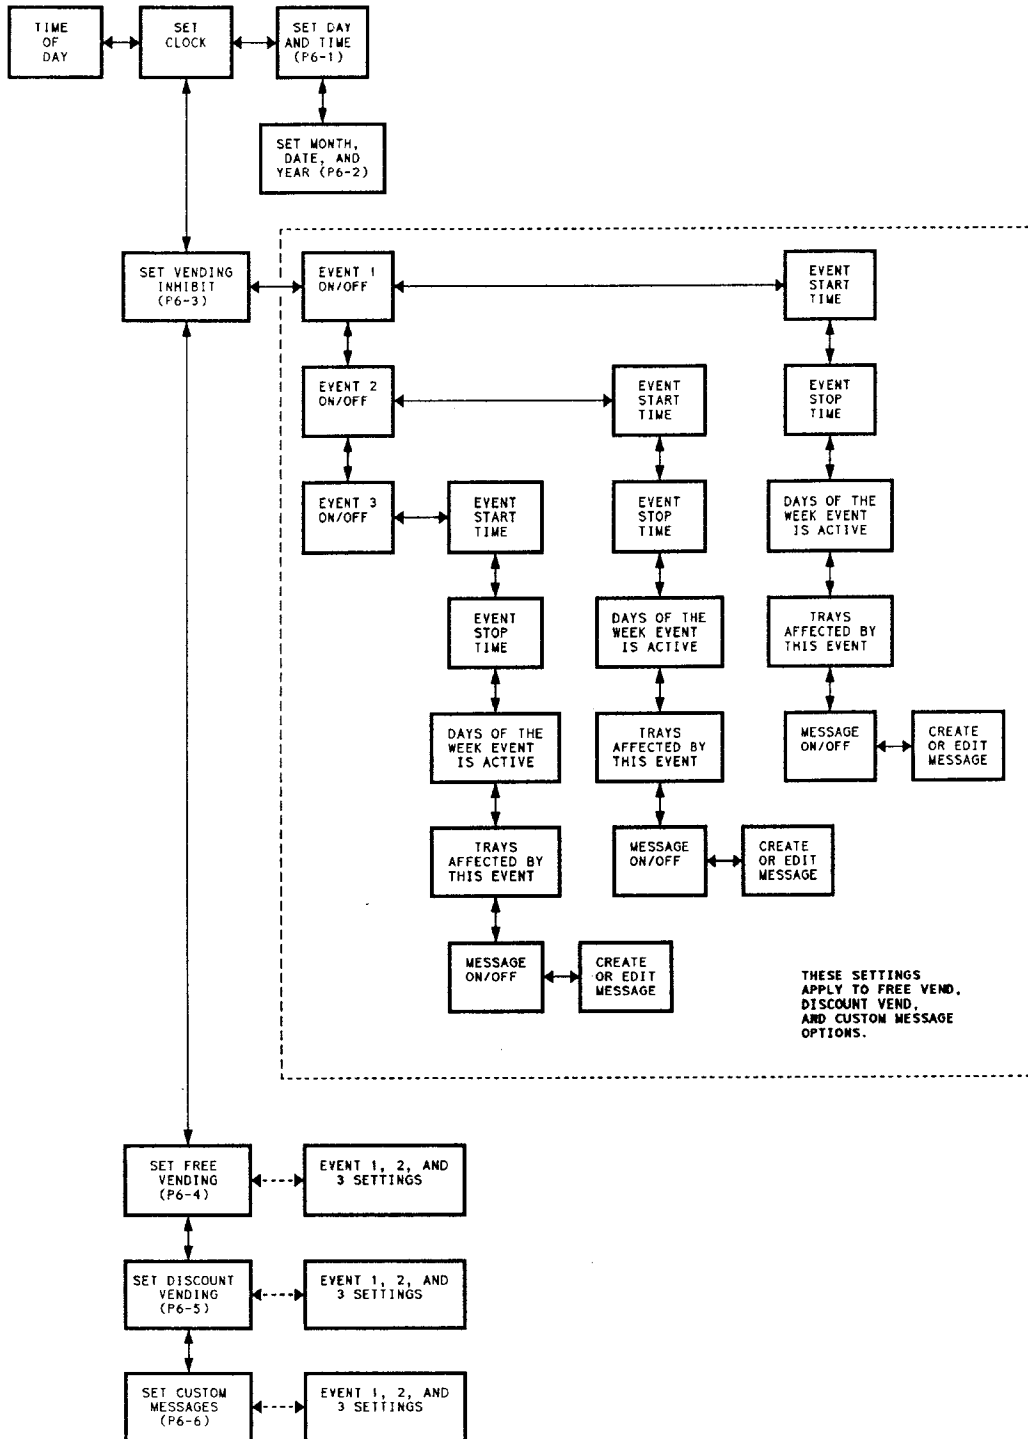




# DRY PRODUCT PROGRAMMING MATRIX

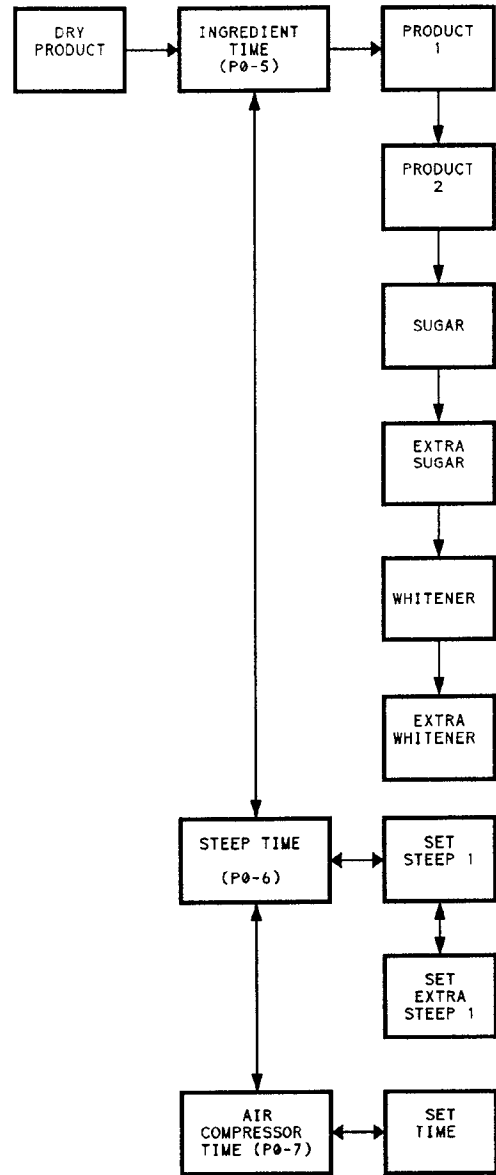

# LIQUID PRODUCT PROGRAMMING MATRIX

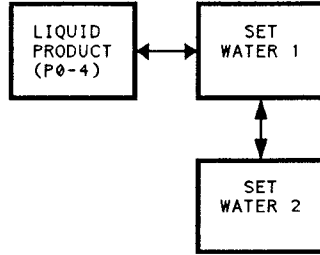

**THIS PAGE INTENTIONALLY LEFT BLANK**

An optional printer is available for recording price and data information as shown in the display.

1. Locate the printer connector inside the machine.
2. Plug the connector into the receptacle in the front of your printer.
3. Turn the printer ON.
4. Follow the steps in the table on the next page.

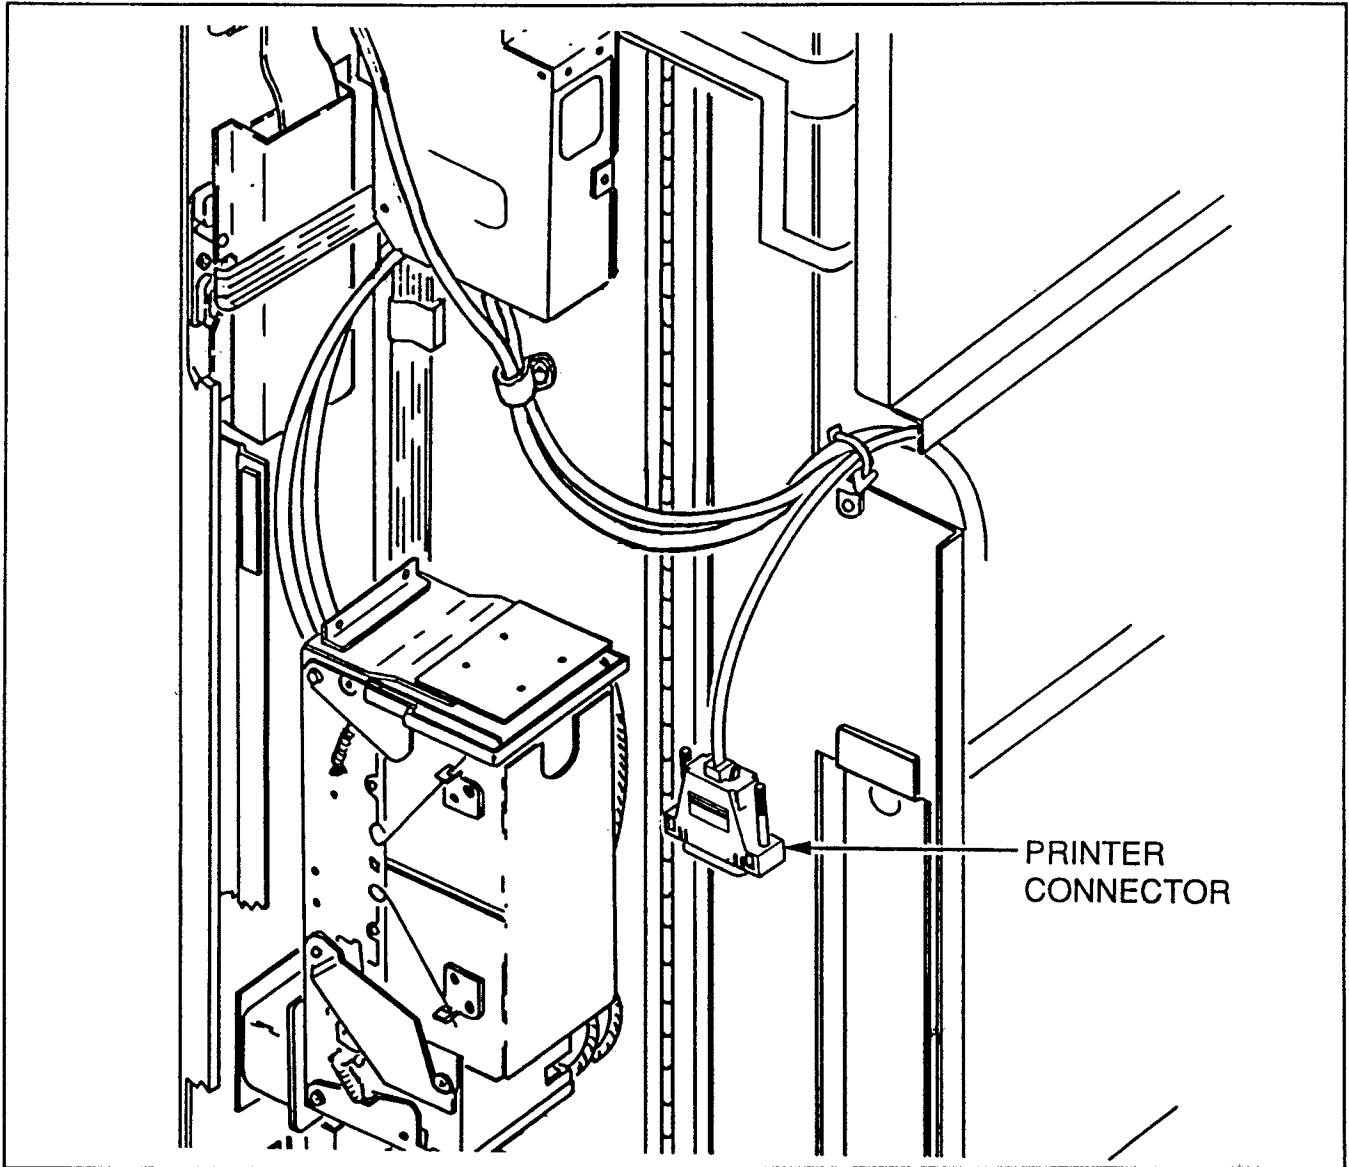









Figure P0-2

PRINT THE DATA LIST OR THE PRICE LIST:






STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SET TIME	
2		PRINTER XYZ	Where XX = baud rate: 12 = 1200 baud 24 = 2400 baud 48 = 4800 baud 96 = 9600 baud  Y = Printer busy: 0 = 0 signal 1 = + signal  Z = Which level of data to print: 0 = Tray level 1 = Selection level
3	Appropriate selection switch panel keys	The display changes	
4	O P T I O N S  		The data list will print on the printer and be displayed on the screen at the same time.
			The price list will print on the printer and be displayed on the screen at the same time.

NOTE: Step 3 only works while PRINTER X is displayed. If printer mode is not selected, normal data and price lists will show on the display.







PRICE AN INDIVIDUAL SELECTION:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS	
1		PRICE	Price setting mode entered	
2		SELECT LVL	Allows pricing for an individual selection	
3		TC PR XX.XX	TC = Selection ID T = Tray ID (options: A B C D E F G H J) C = Column position (options: 0 1 2 3 4 5 6 7 8 9) XX.XX = The currently set price	
	O P T I O N S		Proceed to the next step if you want to price this selection.	
			Enter the ID for another selection that you want to price	Use the selection switch panel to make the entry.
4	Use the selection switch panel to enter a new price for the selection		The new price is displayed.	
5	Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options	

PRICE A TRAY TO ONE PRICE:









STEP	ENTER THIS KEYSTROKE...		AND THE DISPLAY INDICATES	COMMENTS
1			PRICE	Price setting mode entered
2			SELECT LVL	
3			TRAY LVL	Allows pricing for the whole tray
4			T* PR XX.XX	T = Tray ID (options: A B C D E F G H J) XX.XX = The currently set price
	O P T I O N S	Proceed to the next step if you want to price this tray.		
		Enter the ID for another tray that you want to price		Use the selection switch panel to make the entry.
5	Use the selection switch panel to enter a new price for the tray			The new price is displayed.
6	O P T I O N S		TRAY LVL	The amount you entered is now in effect for that tray. ALL PRIOR PRICES FOR SELECTIONS IN THIS TRAY HAVE BEEN REPLACED BY THE NEW PRICE!
		Continue		The previous price that was shown in step 4 is still in effect.  Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

PRICE THE ENTIRE MACHINE TO ONE PRICE:










STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		PRICE	Price setting mode entered
2		SELECT LVL	
3		TRAY LVL	
4		MACH LVL	Allows pricing for the whole machine
5		** PR XX.XX	XX.XX = The currently set price
6	Use the selection switch panel to enter a new price for the tray		The new price is displayed.
7	<div style="display: flex; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold; margin-right: 5px;">O P T I O N S</div> <div style="border: 1px solid black; padding: 5px; margin-right: 5px;">  </div> </div>	MACH LVL	The amount you entered is now in effect for the whole machine. ALL PRIOR PRICES FOR SELECTIONS OR TRAYS HAVE BEEN REPLACED BY THE NEW PRICE!
			The previous price that was shown in step 5 is still in effect.
			Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options












RETRIEVE TOTAL VENDS:

BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	Allows retrieval of count data.
				TOT VENDS	Allows retrieval of total vend counts.
				**CT XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE ..</b> CT is a reminder that you are looking at CounTs.
				T*CT XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZCT XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options




 

 



RETRIEVE TOTAL FREE VENDS:

BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	Allows retrieval of count data.
				TOT VENDS	
				FREE CNT	Allows retrieval of free vend counts.
				**FV XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> FV is a reminder that you are looking at Free Vends.
				T*FV XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZ FV XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options




 





RETRIEVE TEST VENDS:

BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	Allows retrieval of count data.
				TOT VENDS	Allows retrieval of total vend counts.
			 two times	TEST VENDS	Allows retrieval of test vend counts.
				**TV XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> TV is a reminder that you are looking at Test Vends.
				T*TV XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZTV XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options










RETRIEVE WINNER VENDS:

BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	Allows retrieval of count data.
				TOT VENDS	Allows retrieval of total vend counts.
			 three times	WIN CNT	Allows retrieval of winner counts.
				**W XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> W is a reminder that you are looking at Winner vendes.
			 Enter the ID for the tray you want to see	T*W XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray. Use the selection switch panel to make the entry.
			 Enter the ID for the selection you want to see	TZW XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray. Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options











RETRIEVE DISCOUNT VENDS:

BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	Allows retrieval of count data.
				TOT VENDS	Allows retrieval of total vend counts.
			 four times	DISC COUNT	Allows retrieval of discount vend counts.
				**DC XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> DC is a reminder that you are looking at DisCount vends.
				T*W XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZW XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options





 





RETRIEVE TOTAL SALES

BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	
				SALES	Allows retrieval of sales data.
				TOT SALES	Allows retrieval of total sales data.
				**\$ XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> \$ is a reminder that you are looking at sales.
				T*\$ XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZ\$ XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

RETRIEVE FREE VEND SALES











BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	
				SALES	Allows retrieval of sales data.
				TOT SALES	Allows retrieval of total sales data.
				FREE SLS	Allows retrieval of free vend sales data.
				**F\$ XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> F\$ is a reminder that you are looking at Free vend sales.
				T*F\$ XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZF\$ XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

RETRIEVE WINNER VEND SALES




BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	
				SALES	Allows retrieval of sales data.
				TOT SALES	Allows retrieval of total sales data.
			 two times	WIN SLS	Allows retrieval of winner vend sales data.
				**W\$ XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> W\$ is a reminder that you are looking at Winner vend sales.
				T*W\$ XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZW\$ XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options






RETRIEVE DISCOUNT VEND SALES

BY:			ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
SELECTION	TRAY	MACHINE			
				DATA	Data mode entered.
				**CT XXXXX	XXXXX is the non-resettable total machine VEND COUNT.
				**\$ XXXXX	XXXXX is the non-resettable total machine SALES COUNT.
				COUNTERS	
				SALES	Allows retrieval of sales data.
				TOT SALES	Allows retrieval of total sales data.
			 three times	DISC SLS	Allows retrieval of discount vend sales data.
				**D\$ XXXXX	XXXXX is the resettable total vend count for the machine. <b>NOTE</b> D\$ is a reminder that you are looking at Discount vend sales.
				T*D\$ XXXXX	T = Tray ID (options: A B C D E F G H J) XXXXX is the total vend count for the tray.
			Enter the ID for the tray you want to see		Use the selection switch panel to make the entry.
				TZD\$ XXXXX	T = Tray ID (options: A B C D E F G H J) Z = Column ID (options: 0 1 2 3 4 5 6 7 8 9) XXXXX is the total vend count for the tray.
			Enter the ID for the selection you want to see		Use the selection switch panel to make the entry.
			Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options




VIEW THE TOTAL VALUE OF BILLS IN THE BILL STACKER:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		DATA	Data mode entered
2		**CT XXXX	
3	 four times	BIL\$ XX	XX is the value of all the bills in the bill stacker.
4	Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options




VIEW THE TOTAL VALUE OF COINS IN THE COIN BOX:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		DATA	Data mode entered
2		**CT XXXX	
3	 five times	CBX XX.XX	XX.XX is the value of all the coins in the coin box.
4	Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options






VIEW THE NUMBER OF RINSE CYCLES COMPLETED SINCE THE COUNTERS WERE LAST CLEARED:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		DATA	Data mode entered
2		**CT XXXX	
3	 six times	RINSE XX	XX = The number of times a rinse cycle was initiated since the last time this category was cleared.
4	Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options






VIEW THE NUMBER OF FAILURE MESSAGES FROM THE SERIAL VALIDATOR:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		DATA	Data mode entered
2		**CT XXXX	
3	 seven times	VAL FL XX	XX = The number of failure messages from the serial validator.
4	Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

VIEW THE LAST TIME AND DATE THE HEALTH CONTROL REMOVED THE MACHINE FROM SERVICE:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		DATA	Data mode entered
2		**CT XXXX	
3	 eight times	HEALTH CTL	The health control mode is entered.
5		MM/DD HH.MM	If the temperature in the food module rises above a preset limit, all vending from the food module is inhibited until the machine is serviced again. The date and time of that occurrence is shown here. Where: MM = month DD = day HH = hour MM = minute
6		MAX ZZ	ZZ is the maximum temperature inside the food module since the health control was set.
7	Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

VIEW THE LAST TIME AND DATE THE MACHINE WAS POWERED DOWN




STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		DATA	Data mode entered
2		**CT XXXX	
3	 nine times	POWER DOWN	
4		MM/DD HH.MM	The date and time of the last power down is displayed. Where: MM = month DD = day HH = hour MM = minute
5		FOR DD.HH.MM	The duration of the power down is displayed. Where: DD = days HH = hours MM = minutes
6	Continue		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

PUT THE MERCHANDISER ON FREE VEND:





STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1	FREE VEND	NO MONEY / REQUIRED	Free vend mode entered
2	CONTINUE		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options



DEFINE THE COIN MECH BEING USED:








STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS	
1		CONFIGURE	Configure mode entered	
2		CNFG MACH		
3		Current coin mech option is displayed	Option	Use
			DUMB MECH DUMB/DEBIT EXEC MECH NO COIN MK	US + Canada Europe
4	ENTER/ACTION		Scroll through the list of coin mech options until the type you want to use is displayed.	
	CONTINUE		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options	

DEFINE THE LANGUAGE USED IN THE CUSTOMER DISPLAYS:








STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		CONFIGURE	Configure mode entered
2		CNFG MACH	
3		Current coin mech option is displayed	
4		The defined language is displayed	Options: ENGLISH GERMAN FRENCH SPANISH (Mexican Spanish) SPANISH 2
5	ENTER/ACTION		Scroll through the list of language options until the one you want to use is displayed.
6	CONTINUE		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options







 SET THE MESSAGE SCROLLING SPEED

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS	
1		CONFIGURE	Configure mode entered	
2		CNFG MACH		
3		Current coin mech option is displayed		
4	 twice	MSG SPEED		
5		The alphabet scrolls across the display.		
6	O P T I O N S	 to decrease the speed	The alphabet scrolls at a reduced speed.	All messages will scroll at the same speed.
		 to increase the speed	The alphabet scrolls at an increased speed.	
		Do nothing to keep the present speed	The scrolling speed is not changed.	
7	CONTINUE		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options	

SET THE WINNER FEATURE ON OR OFF:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		CONFIGURE	Configure mode entered
2		CNFG MACH	
3		Current coin mech option is displayed	
4	 seven times	WINNER OFF	The WINNER feature is currently turned OFF.
		WIN XXXX	The WINNER feature is currently turned ON.  XXXX is the number of vends that must be completed before a winner takes place.  Use the selection switch panel to enter a new winner number if desired. Range: 5 - 9999
5	O P T I O N S	 to change from WINNER OFF to WIN XXXX.	WIN XXXX
		 to change from WIN XXXX to WINNER OFF.	WINNER OFF
		 once to select the trays from which WINNER selections can come.  - THEN -  Press the tray ID letter to switch between ON and OFF.	The ID letters from which WINNER selections can come are displayed.
6	O P T I O N S	Repeat the prior step.	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

SET THE BASIC CONFIGURATION:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		CONFIGURE	Configure mode entered
2		CNFG MACH	
3		Current coin mech option is displayed	
4	 eight times	CNFG XXXX	The current configuration is displayed. See the table below.
5	Use the selection switch keys to enter the desired configuration.	The new configuration is displayed.	<b>CAUTION</b> Do not enter a configuration code that differs from the machine's true configuration. Unreliable machine operation will result.
6	CONTINUE		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

Configuration Codes and Descriptions







CODE	DESCRIPTION
1000	Snacks
1001	Snacks/Fresh Brew Coffee
1002	Snacks/Fresh Brew Coffee, Espresso
1003	Snacks/Fresh Brew Coffee, Espresso, Cappuccino
1004	Snacks/Freeze Dry Coffee
1005	Snacks/Freeze Dry Coffee, Espresso
1006	Snacks/Freeze Dry Coffee, Espresso, Cappuccino
1007	Snacks/Cans
1008	Snacks/Cans/Fresh Brew Coffee
1009	Snacks/Cans/FB Coffee, Espresso
1010	Snacks/Cans/FB Coffee, Espresso, Cappuccino
1011	Snacks/Cans/Freeze Dry Coffee
1012	Snacks/Cans/FD Coffee, Espresso
1013	Snacks/Cans/FD Coffee, Espresso, Cappuccino
1014	Chilled Snacks
1015	Chilled Snacks/Fresh Brew Coffee
1016	Chilled Snacks/FB Coffee, Espresso
1017	Chilled Snacks/FB Coffee, Espresso, Cappuccino

CODE	DESCRIPTION
1018	Chilled Snacks/Freeze Dry Coffee
1019	Chilled Snacks/Freeze Dry Coffee, Espresso
1020	Chilled Snacks/FD Coffee, Espresso, Cappuccino
1021	Snacks over Cans
1022	Snacks over Cans/Fresh Brew Coffee
1023	Snacks over Cans/Fresh Brew Coffee, Espresso
1024	Snacks over Cans/FB Coffee, Espresso, Cappuccino
1025	Snacks over Cans/Freeze Dry Coffee
1026	Snacks over Cans/Freeze Dry Coffee, Espresso
1027	Snacks over Cans/FD Coffee, Espresso, Cappuccino
1028	Snacks/Fresh Food
1029	Snacks/Fresh Food/Fresh Brew Coffee
1030	Snacks/Fresh Food/Fresh Brew Coffee, Espresso
1031	Snacks/Fresh Food/FB Coffee, Espresso, Cappuccino
1032	Snacks/Fresh Food/Freeze Dry Coffee
1033	Snacks/Fresh Food/Freeze Dry Coffee, Espresso
1034	Snacks/Fresh Food/FD Coffee, Espresso, Cappuccino
1035 & UP	RESERVED

NOTE

This procedure is only available if your machine configuration code is 1007 through 1020 (see P4-11).







SET THE CAN UNIT COMPRESSOR CYCLE OFF TEMPERATURE OR SET THE CHILLED CANDY TARGET AIR TEMPERATURE:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		CONFIGURE	Configure mode entered
2		CNFG MACH	
3		Current coin mech option is displayed	
4	 nine times	<div style="display: flex; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold; margin-right: 10px;">O P T I O N S</div> <div style="text-align: center;"> <p>C-----W</p> <p>.</p> <p>.</p> <p>C            W</p> </div> </div>	<p>The display shows the steps between colder and warmer. (The closer the dashes are to W, the warmer the temperature.)</p> <p>You can:</p> <p>Set the temperature at which the cold can unit turns OFF (the temperature at which the unit turn ON is fixed),</p> <p style="text-align: center;">- OR -</p> <p>Set the cabinet air temperature which the chilled candy unit will try to maintain.</p>
5	<div style="display: flex; flex-direction: column;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold; margin-right: 5px;">O P T I O N S</div> <div style="margin-bottom: 5px;">Press  to lower the shut-off temperature.</div> <div style="margin-bottom: 5px;">Press  to raise the shut-off temperature.</div> <div>Keep the current temperature.</div> </div>		
6	CONTINUE		<p>Options:</p> <ol style="list-style-type: none"> <li>1. Close monetary door</li> <li>2. Press another function switch</li> <li>3. See advanced programming section for other options</li> </ol>

NOTE





If power to the compressor is interrupted by software, three minutes must pass before the compressor will power up again. This also applies whenever you are switching from one basic configuration to another. Power-up due to power line drop or main power switch will not cause the 3 minute delay.

SELECT THE CUP SIZE LOADED IN THE HOT DRINK UNIT:





STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS	
1		CONFIGURE	Configure mode entered	
2		CNFG MACH		
3		Current coin mech option is displayed		
4	 until one of these displays are shown	O P T I O N S	5 OZ CUP	
			7 OZ CUP	
			8 OZ CUP	
			9 OZ CUP	
5	O P T I O N S	Press  to scroll through the cup sizes.		
		Go to the next step to keep the cup size shown in the display.		
6	O P T I O N S	Repeat the prior step if necessary.		
		Press  to choose the default product times for this size cup.	The beeper sounds and the display flashes <b>PRESET...TIME...USED</b>  - THEN - The current cup size returns to the display.	Individual default times can be overridden, if desired.
		CONTINUE		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options



SET THE RINSE CYCLE FREQUENCY:





STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		CONFIGURE	Configure mode entered
2		CNFG MACH	
3		Current coin mech option is displayed	
4	 until this display is shown	RINSE XX	XX = The number of hours between the most recent vend and the next rinse cycle. Range: 2 - 10 hours in 1 hour increments
5	O P T I O N S	Enter a new frequency using the selection switch panel.	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

TEST THE OPERATION OF THE AIR COMPRESSOR:





STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SERVICE	Service mode entered
2		VR XXXX	
3	 until this display is shown	AIR COMPR	Allows testing the operation of the air compressor.
4			The air compressor operates for one cycle.
5	O P T I O N S	Repeat the previous step to test the air compressor again.	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options







TEST THE OPERATION OF THE BREWER MECHANISM:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SERVICE	Service mode entered
2		VR XXXX	
3	 until this display is shown	BREWER	Allows testing the operation of the brewer mechanism.
4			The brewer mechanism operates for one cycle.
5	O P T I O N S	Repeat the previous step to test the brewer mechanism again.	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options





TEST THE OPERATION OF THE BREWER RINSE SYSTEM:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SERVICE	Service mode entered
2		VR XXXX	
3	 until this display is shown	BREW RINSE	Allows testing the operation of the brewer rinse system.
4			The brewer rinse system operates for one cycle.
5	O P T I O N S	Repeat the previous step to test the brewer rinse system again.	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options


 


TEST THE OPERATION OF THE BOWL RINSE SYSTEM:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SERVICE	Service mode entered
2		VR XXXX	
3	 until this display is shown	BOWL RINSE	Allows testing the operation of the bowl rinse system.
4			The bowl rinse system operates for one cycle.
5	O P T I O N S	Repeat the previous step to test the bowl rinse system again.	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options





TEST THE OPERATION OF THE FOOD DOOR:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SERVICE	Service mode entered
2		VR XXXX	
3	 until this display is shown	FOOD DOOR	Allows testing the operation of the food door.
4			The food door opens (if closed), or closes (if open).
5	O P T I O N S	Repeat the previous step to test the food door again. (Make sure the door is closed before you leave this test.)	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

TEST THE OPERATION OF THE DELIVERY DOOR LOCK SOLENOID:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SERVICE	Service mode entered
2		VR XXXX	
3	 until this display is shown	DOOR LOCK	Allows testing the operation of the delivery door lock solenoid.
4			The delivery door lock solenoid energizes (if deenergized), or deenergizes (if energized).
5	O P T I O N S	Repeat the previous step to test the delivery door lock solenoid again.	
		CONTINUE	Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options

VIEW THE FOOD MODULE TEMPERATURE:

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1		SERVICE	Service mode entered
2		VR XXXX	
3	 until this display is shown	TEMP XX YY	Allows viewing the temperature of the food module (YY). XX is the time remaining on the health control timer, if it was activated.
4			
5	CONTINUE		Options: 1. Close monetary door 2. Press another function switch 3. See advanced programming section for other options