

## INSTRUCTIONS FOR INSTALLING A BASE PLATE ASSEMBLY

#### CHECK THE PARTS RECEIVED IN THE ACCESSORY WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTSDEPARTMENT IMMEDIATELY.

If the instructions in your set-up manual are different from these instructions, ignore the instructions in the set-up manual.

Read these instructions carefully before installing the accessory. Keep these instructions for part numbers and for future reference.

LOOSE PARTS BAG **BASE PLATE** ACCESSORY NUMBER INSTRUCTION ASSEMBLY ASSEMBLY 1571085 1571111 1571087 2271408 1581022 1571111 1571087 1581023 4251218 1571111 4250037 4251205 4311065 1571111 4311066 2271408 4851035 1571111 1571087 4111091

These accessories contain the following:

### PARTS INCLUDED IN THE LOOSE PARTS BAG ASSEMBLIES

|                       | LOOSE PARTS BAG ASSEMBLY |         |         |         |
|-----------------------|--------------------------|---------|---------|---------|
| LOOSE PARTS           | QTY                      | 1571087 | 4311066 | 4250037 |
| Base plate bracket    | 2                        | 6231087 | 4311071 | 4311071 |
| Base plate slide - RH | 1                        | 1411194 | 4301511 | 1411194 |
| Base plate slide - LH | 1                        | 1411195 | 4301512 | 1411195 |
| Cotter pin            | 2                        | 9900098 | 9900098 | 9900098 |



#### INSTALLING A BASE PLATE ACCESSORY ASSEMBLY ON ALL MODELS EXCEPT: FOOD SERVICE CABINET, FOOD TRON, SHOPPERTRON

Refer to the figure on the next page while completing the following procedure:

#### WARNING

DO NOT MOVE THE CABINET WHILE HEX HEAD SCREWS AND/OR CARRIAGE BOLTS ARE LOOSENED. THE CABINET WOULD BECOME UNSTABLE AND LIKELY TO TIP AND CAUSE INJURY.

#### NOTE

#### For model 411, begin with step 4.

- 1. Remove the pail(s) from the inside of the merchandiser.
- 2. Remove the floor liner from the inside of the merchandiser.
- 3. Remove the two caps as shown.
- 4. Loosen the left leg assembly carriage bolts and nuts to allow mounting a base plate bracket.
- 5. Secure one of the base plate brackets to the leg assembly using the two carriage bolt. Tighten the carriage bolts and nuts.
- 6. Loosen the right leg assembly hex head screws to allow mounting the other base plate bracket.
- 7. Secure the other base plate bracket to the right leg assembly using the two hex head screws. Tighten the hex head screws.
- 8. Insert the short arms of the slides into the hinged tabs of the base plate. Position the slide so the notch near the short arm is on the bottom side.
- 9. Insert the long arms of the slides into the base plate brackets.
- 10. Insert and secure a cotter pin through the hole in the back of each of the slides.
- 11. Push the base plate toward the merchandiser cabinet. The front tabs of the base plate brackets should seat in the notches in the long arms of the slides.
- 12. Replace the caps, liner, and pail(s) removed previously.



# INSTALLING A BASE PLATE ACCESSORY ASSEMBLY ON FOOD SERVICE CABINET, FOODTRON, SHOPPERTRON, MODELS 839, 431, 425

Refer to the figure below while completing the following procedure:

#### WARNING

#### DO NOT MOVE THE CABINET WHILE HEX HEAD SCREWS ARE LOOS-ENED FROM THE LEG ASSEMBLIES. THE CABINET WOULD BECOME UNSTABLE AND LIKELY TO TIP AND CAUSE INJURY.

- 1. Loosen the inner pair of hex head screws from one of the front cabinet leg assemblies.
- 2. Secure one of the base plate brackets to the leg assembly. Tighten the hex head screws.
- 3. Secure the other base plate bracket by repeating steps 1 and 2.
- 4. Insert the short arms of the slides into the hinged tabs of the base plate. Position the slide so the notch near the short arm is on the bottom side.
- 5. Insert the long arms of the slides into the base plate brackets.
- 6. Insert and secure a cotter pin through the hole in the back of each of the slides.
- 7. Push the base plate toward the merchandiser cabinet. The front tabs of the base plate brackets should seat in the notches in the long arms of the slides.

