



KIT PART NUMBER 3126145

INSTRUCTIONS FOR INSTALLING A MAIN SWITCH REPLACEMENT KIT IN A NATIONAL VENDORS CROWN SEVENTY TWO HOT BEVERAGE MERCHANDISER, COLD DRINK MERCHANDISER, HCDM-360 HOT/COLD DRINK MERCHANDISER, GG-424 GRAND GOURMET FOOD MERCHANDISER, LSV-350 COLD DRINK UNIT OR LSV-650 HOT BEVERAGE UNIT

CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTS DEPARTMENT IMMEDIATELY.

Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.

This kit contains the following:

INDEX	PART NUMBER	DESCRIPTION	QUANTITY
1	9984616	SWITCH DPST - 20 AMP	1
2	9900003	SCREW #6-32 X 1/4 RHS	2
3	3126146	INSTALLATION INSTRUCTIONS - MAIN SWITCH	1

WARNING

Disconnect the service cord from the wall receptacle before continuing. Dangerous voltages are present!

If your merchandiser is presently equipped with the old type main switch, follow steps 1 through 4 to install a replacement switch. If your merchandiser has the new type switch, simply remove the defective switch and replace with the new switch included in the kit.

1. Remove the old main switch from the merchandiser control box assembly.
2. The four ring terminals which were connected to the defective main switch must be enlarged to accommodate the #10 terminal screws on the new switch. Do either of the following two procedures:
 - a. Use a metal cutting tool, cut the ends of the four ring terminals, converting them into spade terminals as shown in figure 2. **Remove only enough metal from the terminals to allow them to slip around the terminal screws.**
 - b. Using a $\frac{3}{16}$ " (.187) drill bit, ream the ring terminals **BY HAND**, enlarging them to accommodate the terminal screws on the new switch.
3. Attach the reworked terminals to the replacement switch (1).
4. Install the switch in the merchandiser control box, securing it with two screws (2).

