



KIT PART NUMBER 3622113

INSTRUCTIONS FOR INSTALLING A NEW STYLE POINT-OF-PURCHASE DISPLAY TO A TWINTRON MERCHANDISER

CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTS DEPARTMENT IMMEDIATELY.

Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.

This kit contains the following:

INDEX	PART NUMBER	DESCRIPTION	QUANTITY
1	3162032	DISPLAY PANEL ASSEMBLY	1
2	3162029	PLEXIGLASS DISPLAY PANEL	1
3	3612175	P.O.P. PHOTO - DISPLAY - TWIN	1
4	3162052	INSERT - SEL - COCA-COLA CLASSIC	1
	3162053	INSERT - SEL - SPRITE	1
	3162063	INSERT - SEL - PEPSI COLA	1
	3162067	INSERT - SEL - 7-UP	1
	3162085	INSERT - SEL - COLA - FRENCH	1
	3162087	INSERT - SEL - MENTHE - FRENCH	1
	3162088	INSERT - SEL - BOISSON AROME - CITRON - FRENCH	1
	3162094	INSERT - SEL - BOISSON AROME - ORANGE - FRENCH	1
	3162095	ORANGINA - FRENCH	1
	3622111	FD COF/FD TEA	1
	3622112	COLD WATER - FRENCH	1
	6232112	HIGH PRICE LABEL - FRENCH	1
	6232509	LABEL - PRICE RANGE - 1.00 TO 2.35	1
	3612155	LABEL - SELECTION NUMBERS - TWIN	1
	3622116	LABEL - SOUP - ALT. CHOICES - FR.	1
	3622117	INSERT - SELECTION - SOUP - FR.	1
3622118	INSERT - SELECTION - HOT CHOCOLATE - FR.	1	
5	3162038	PRODUCT I.D. FRAME	1
6	9900204	SCREW - #8-32 x 5/8 RHS-S/T	3
7	3162039	LABEL DISPLAY PLATE	1
8	2302053	CUP SPACER	4
9	3162037	DISPLAY CABLE PROTECTOR	1
10	3622114	INSTALLATION INSTRUCTIONS	1



Proceed as follows:

1. Unplug your machine from its electrical supply.
2. Remove the display assembly from your machine.
3. See figure 1. From your old display assembly, remove and retain the following (keep all mounting hardware):

DOOR CONTROLLER COVER
DATA ACCESS LOCKOUT
PCB DISPLAY ASSEMBLY
DOOR CONTROLLER ASSEMBLY
PUSHBUTTON GRID ASSEMBLY
4. See figure 2. Assemble the display panel assembly (1), plexiglass display panel (2), and the P.O.P. photo - display - twin (3), as shown.
5. See figure 1. Select which labels (4) you want to attach to the product ID frame (5). Mount the product ID frame (4) to the display panel assembly (1). Secure with two screws (6).
6. See figure 1. Mount the label display plate (7) to the display panel assembly:
7. See figure 1. Mount the display cable protector (9) to the display panel assembly. This item will be secured by the door controller assembly you removed in step 3.
8. See figure 1. Mount the following items to the display panel assembly in the order given:

DOOR CONTROLLER ASSEMBLY
DOOR CONTROLLER COVER
PCB DISPLAY ASSEMBLY - secure with cup spacers (8)
PUSHBUTTON GRID ASSEMBLY
DATA ACCESS LOCKOUT
9. Install the display panel assembly in your machine.
10. Restore electrical power to your machine.



FIGURE 1.



FIGURE 2.