



4110059

PROGRAMMING DIRECTORY

TABLE TITLE	PAGE
TABLE 1. SETTING THE MERCHANTISER CONFIGURATION	27
To Define The Coin Mechanism.	27
To Define The Language.....	27
To Set The Message Speed.	27
To Define The Validator.	28
To Set Declining Balance.	29
To Set Winner Option.	30
To Enter Machine ID Number.	31
To Adjust Temperature and Select °F or °C Display.	31
To Set Belt Canister Quantity.	31
To Set the Number of Defrost Cycles Per Day	31
TABLE 2. TURNING FREE VEND ON AND OFF.	32
TABLE 3. TEST VEND WITHOUT USING MONEY.	33
TABLE 4. TEST VEND USING MONEY.	34
TABLE 5. SET OR REVIEW TIME, DAY AND DATE.	35
To Set Time.	35
To Set Date.	36
To Set Inhibit List.	37
To Set Free Vend List.	41
To Set Discount List.	42
To Set Message List.	42
TABLE 6. PAYOUT.	43
TABLE 7. SET PRICES.	45
TABLE 8. DATA RETRIEVAL.	46
To View Machine Count Totals.	46
To View Machine Sales Totals.	47
To View Validator Failure Messages Total.	47
To View Health Control.	48



4110059

PROGRAMMING DIRECTORY

TABLE TITLE	PAGE
TABLE 9. DIAGNOSTICS.	50
To Run Diagnostic Tests.	50
TABLE 10. FULL LOADING OF ALL MERCHANTISER CONVEYORS.	54
To Load By Advancing One Canister At A Time	54
To Load While Conveyor Continuously Advances	55
TABLE 11. PARTIAL LOADING OF MERCHANTISER CONVEYORS.	56
TABLE 12. SUPERVISOR CODE AND FUNCTIONS.	58
To Enter The Supervisor Mode	58
To Assign A New Supervisor Code Number	58
To Lock or Unlock Functions	59
To Clear All Resettable Counters.....	60
To Clear Data From A Specific Category	60





4110059

Table 1. Setting The Merchandiser Configuration.

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
28.	Press *	WIN ----	

TO ENTER MACHINE ID NUMBER...

29.	Press #	ID -----	The current machine ID number is displayed.
30.	Use the selection switch panel to enter a new machine ID number.	(The new ID number is displayed.)	Options: 1. Numbers only. 2. Up to 6 digits.

TO ADJUST TEMPERATURE AND SELECT °F OR °C DISPLAY...

31.	Press #	C-----W	This display shows the temperature adjustment scale.
32.	Pressing 4 repeatedly		Lowers the temperature in the cabinet.
33.	Pressing 6 repeatedly		Raises the temperature in the cabinet.
34.	Press #	TMP DSP °F/°C	Press 0 to toggle between °F or °C for temperature display.

TO SET BELT CANISTER QUANTITY...

35.	Press #	BELT 1 XX (Quantity of canisters not product is displayed)	Press 0 to toggle between 33 or 66. XX=Canister Qty.
36.	Repeat Step 35 for the remaining selection conveyors.		

TO SET THE NUMBER OF DEFROST CYCLES PER DAY ...

37.	Press #	CYCS/DAY-N	N = number of defrost cycles per day (4, 5, 6, 7, or 8)
38.	Press 0 to toggle through the possible choices.	Your choice.	
39.	To exit the configuration mode...	READY	...press another function key or the door switch.



4110059

Table 2. Turning FREE VEND On and Off.

STEP	ENTER THIS KEYSTROKE...	AND THE DISPLAY INDICATES	COMMENTS
1.		NO MONEY REQUIRED	Free vend mode turned on. Free vending occurs.
2.		READY	Free vend mode exited. Free vending turned off.
3.	To exit the free vend mode...	READY	...press another function key or the door switch.





SUPPLEMENT

4110063

Insert this supplement into your ice cream operator's manual (4110059) as follows:

Remove	Insert
25/26	25/26
31/32	31/32

