KIT PART NUMBER 4750066 INSTRUCTIONS FOR REPLACING YOUR NATIONAL VENDORS HOT WATER VALVE (P/N 4751243) WITH HOT WATER VALVE, P/N (4751256)

CHECK THE PARTS RECEIVED IN THIS KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING CONTACT THE CRANE MERCHANDISING SYSTEMS' PARTS DEPARTMENT AT 1-800-621-7278.

Read these instructions carefully before installing the kit. Keep these instructions for part numbers and for future reference.

THIS KIT CONTAINS THE FOLLOWING:

PART NUMBER	DESCRIPTION	QTY
4750067	INSTRUCTIONS - KIT 4750066	1
4751256	VALVE ASSEMBLY - HOT WATER TANK	1
4751272	SPACER - 475 - VALVE	1
9900170	SCREW - #10-32 X 1/2"PHIL.PAN	1

!WARNING - Electrical Shock Hazard - Unplug machine power cord at wall receptacle.

Failure to do so could result in fatal electrical shock.

REPLACING THE HOT WATER VALVE

- 1. Disconnect power from the machine.
- 2. Remove the necessary covers to obtain clear access to the valves.
- 3. Shut off the water at the water inlet shut-off valve.
- 4. Drain the water from the hot water tank.
- 5. Disconnect the valve harness from the valve you are replacing.
- 6. Remove the screw securing the valve assy to the hot water tank. Remove the valve.
- 7. Install the replacement valve supplied in the kit as follows (see figure 1 on page 2):
 - a. Assemble the spacer to the valve using the screw supplied. Insert the screw through the mounting bracket of the valve assembly. Using a wrench to hold the spacer, thread the screw into the spacer.
 - b. Attach the valve with the spacer and screw to the hot water tank.
 - c. Re-connect the valve harness you removed in step 5.
- 8. Open the water inlet shut-off valve.
- 9. Reinstall all covers that you removed in step 2.
- 10. Connect power to the machine.
- 11. Fill the hot water tank by following the standard fill procedures detailed in the setup or operator guides supplied with your machine.

