

CRANE



A Crane Co. Company



# Optipay™ RC

## RC-10 Bill Recycler

This document contains information for installing and configuring the optional Optipay™ RC-10 Bill Recycler. The RC-10 is designed for use with a DBV-301 and an A-66 Coin Changer combination set.




**NOTE:** The RC-10 Recycler can only be used with the DBV-301 Bill Validator and an A-66 Coin Changer!

The RC-10 contains the following features:

- A ten (10) note modular recycler
- Last bill in; first bill out operation
- Returns bill payments to the customer
- LED field diagnostics
- Provides auto load features
- Recycles \$1, \$5, or \$10 notes (bills)

### PRIMARY OPTIPAY™ RC BILL RECYCLER COMPONENTS

Figure 1 illustrates the primary component parts of an RC-10 Recycler.

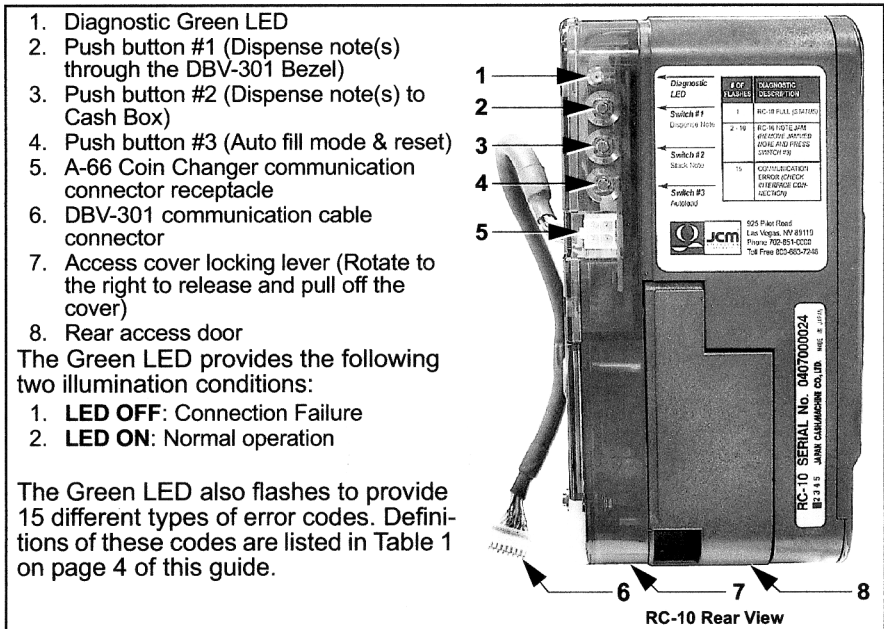


**Figure 1 Primary RC-10 Component Parts**

## INSTALLATION & REMOVAL

To install or remove the RC-10 follow the steps outlined in Figure 2.

### 1. Remove the DBV-301 Cash Box.


 **NOTE:** The Cash Box MUST be removed in order to proceed!

### 2. Lever #1 is used to remove the Cash Box following installation.

- a) Press down on the lever to release the Cash Box and pull the Cash Box up and out.

### 3. Lever #2 is used to install and remove the RC-10.

- a) To install/remove the RC-10 press/rotate the lever down to the left, holding it down while sliding the unit in or out.


 **NOTE:** During installation or removal, always unplug the communications connector from the side of the DBV-301 and RC-10 then reconnect it when finished.

### 4. Replace the Cash Box.

### 5. Connect the 4-pin A-66 Coin Changer communications harness to the rear of the RC-10 (See Figure 1).

### 6. Connect the loose end 16-pin female connector RC-10 Communications Cable to the mating 16-pin male receptacle on the DBV-301. Listen for a click when pressing the connector into the receptacle. Gently tug on the connector to ensure it is locked firmly into place.

To remove a connector from its receptacle, gently squeeze the sides of the plug and pull the plug loose from the receptacle.

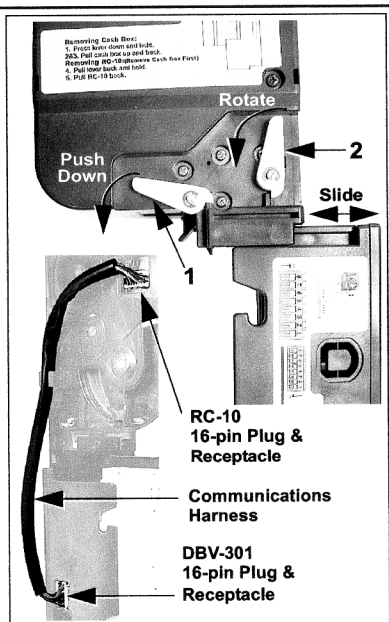

RC-10 Right Side Bottom View & Connection



**Warning! DO NOT** pull on the wires to remove the 16-pin plug

Figure 2 RC-10 Right Side Installation Component Functions

## BILL LOADING INSTRUCTIONS

To load the RC-10 Recycler, perform the following steps:

- Press Button #3. LEDs on the front of the DBV-301 will begin flashing rapidly if the unit is not full of bills (banknotes).
- Insert bills.

When the DBV-301 LED's stop flashing the RC-10 is full, the Green LED on the RC-10 will flash single flashes and it will not accept any more bills.



**NOTE:** Not all bills will be accepted by the Recycler. Bills in poor condition (i.e., worn, torn, defaced, etc.) may be sent to the Cash Box.



**NOTE:** A machine credit will occur if a bill is inserted after the DBV-301 Bezel LEDs stop flashing. The RC-10 LED status should be checked after an auto fill mode has occurred. If the LED is ON (lit) solid, the RC-10 requires bills (Repeat steps 1-3). If the LED is constantly flashing one flash at a time, the RC-10 is full.



## DIP SWITCH SETTINGS & PUSH BUTTON FUNCTIONS

To use the functions provided by the four RC-10 DIP Switches, refer to the JCM Web-Site under the "Customer Service pull-down menu".

The access cover release lever function and the external communications cable to the DBV-301 are also indicated in Figure 3.

1. Four position DIP Switch Block.
2. Access cover locking lever (Rotate the release lever counter clockwise and raise the access door).
3. RC-10 to DBV-301 Communication Cable.

To use the functions provided by the four RC-10 DIP Switches, refer to the software specifications listed for the specific DBV-301 software presently being used. They can be found at the JCM Web-Site at [www.jcm-american.com](http://www.jcm-american.com) under the **Customer Service/Technical Information/Software Information** pull-down menu.

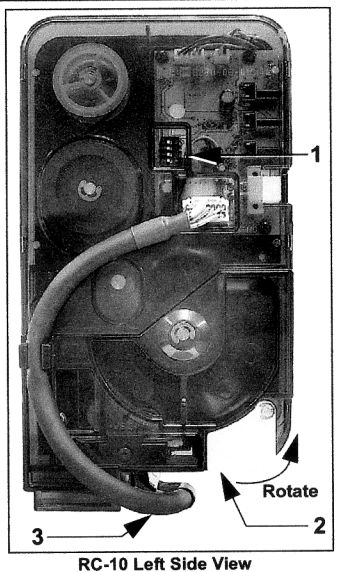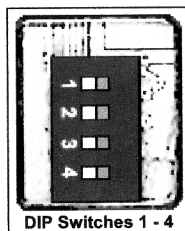


**Figure 3** RC-10 Left Side Installation Component Functions

### PUSH BUTTON FUNCTIONS

The three push buttons shown in Figure 4 provide the following functions:

1. Push button #1 (Top) when pressed will dispense a bill through the DBV-301.
2. Push button #2 (Middle) when pressed will send a bill to the Cash Box. If it is held down it will keep sending bills to the Cash Box until released.
3. Push Button #3 (Bottom) when pressed will begin a fill mode through the DBV-301 Bill Acceptor. This button is also used to reset the unit.

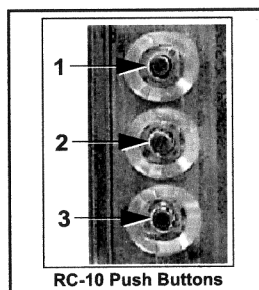

**Figure 4** Push Buttons

### ERROR CODES & CONDITIONS

Table 1 on page 4 lists the LED Error Code flash definitions displayed by the RC-10 front panel LED indicator.



**NOTE:** Press Button #3 to reset unit prior to trouble shooting.

**Table 1 Green LED Error Code Flash Definitions**

Flashes	Error Indicated	Flashes	Error Indicated
0	Standby mode (Bill is ready to be accepted)	8	Recycler Sensor Failure (Empty)
1	Recycler Full	9	Recycler Sensor Failure (Full)
2	Recycler Jam (During initialization)	10	Recycler Jam (Pusher mechanism zone)
3	Recycler Jam (During bill dispensing)	11	Reserved
4	Recycler Jam (During bill loading)	12	Reserved
5	Recycler Motor Speed Error	13	Reserved
6	Recycler Motor Lock	14	Reserved
7	Recycler Sensor Failure (Entrance)	15	Communication Failure to Changer

## OPERATIONAL CHECK

Once the unit is installed, perform the following steps to ensure the RC-10 is in its operational mode.

1. When the RC-10 has been filled with bills, press Button #1 to dispense a note through the DBV-301 then,
2. Press Button #2 to send the bill(s) to the Cash Box.



*NOTE: A US \$5 bill can be inserted and a product selection made to cause the RC-10 to dispense bills as change.*

3. Press the  +  Button on the A-66 Coin Changer twice to reset all counters.

If additional information for interconnecting an A-66 to a DBV-301 Optipay™ RC-10 combination unit is required, refer to the Optipay™ System Interconnection Guide (Part No. 960-000114) to ensure a proper installation.

If further detailed instruction is necessary, refer to the primary RC-10 Service Manual (Part No. 960-000104).

JCM is a registered trademark of JCM American Corporation. All other product names mentioned herein may be registered trademarks or trademarks of their respective companies. Furthermore, ®, © and ™ are not always mentioned in each case throughout the publication.

**CRANE**



CMS  
12955 Enterprise Way  
Bridgeton, Missouri 63044-1200

A Crane Co. Company

(800) 621-7278  
www.CraneMS.com