

# Special Instructions for Service Display PCB Assembly, Part Number 6806004 When Installed in a Café III

## NOTICE

To avoid possible damage to electrostatic discharge sensitive parts, handle this circuit board assembly by its edges.

If you have ordered this part for a Café III, you will need to remove the top LED:

1. Grasp the top LED shown. Bend it back and forth until the leads snap apart. DO NOT pull or twist it from the circuit board.
2. Install the PCB assembly in the normal manner.

