
KIT PART NUMBER: 9985048


INSTRUCTIONS FOR EXTECH PRINTER INSTALLATION

**Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.**


THIS KIT CONTAINS THE FOLLOWING :

PART NUMBER	DESCRIPTION	QUANTITY
9985045	HARNESS EXTECH PRINTER	1
9985046	PRINTER - SER - EXTCH 7711811	1
9985047	KIT INSTRUCTIONS	1

1. Open the monetary door.


2. Using the SERVICE KEYPAD, press , then enter the 4 digit code (default code is 0000) to enter into the Supervisor Mode. The display should say UNLOCKED.


3. Press  and  to TALK ON/TALK OFF. Press  to choose TALK OFF if needed. Press .

4. Press  to go through the DEX/Printer options: DEX ONLY, DEX + CLEAR, DEX NR, PRINTER. Display should be on PRINTER.


5. If machine is set on DEX NR you will need to clear your machine's programming.
1. Press EXIT. 2. Press and hold EXIT and push the UP ARROW once. Release both buttons. The Version number of your software will display. 3. Press DOWN ARROW to Clear All. 4. Press and hold CODE/CLEAR button until CLEAR then FINISHED is displayed. 5. Reprogram machine per the instructions in your set up manual. Refer back to the beginning of these instructions to program the machine for the printer.

6. Press .

7. Press F2 to display BAUD rates. Press  to BAUD 9600.

8. Press . The printer can now receive data from the vending machine.

9. Plug the printer into the DEX port and turn ON. The machine display should read "PRINTER".

10. To print, press : Selections and paid sales.

11. To print, press : Sales summary totals.

12. To print, press : Cash in and cash out.

13. To load new roll of paper: Lift the top of the case by pushing in on either side of the top as marked by the ridges. Lift the lid. Drop a new roll of paper in - being sure that the paper rolls out from the bottom towards the front of the printer. Thread the paper through the two slots, then close the top.

