



KIT PART NUMBER 9989747

INSTRUCTIONS FOR REPLACING PCB ASSEMBLY 9989743 OR 9989722 WITH PCB ASSEMBLY 9989744

CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTS DEPARTMENT IMMEDIATELY.

Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.

This kit contains the following:

INDEX	PART NUMBER	DESCRIPTION	QUANTITY
1	9989744	PCB ASSEMBLY - GPL - MAIN CONTROL BOARD	1
2	9989507	SHUNT - 2 PIN	1
3	9989748	KIT INSTALLATION INSTRUCTIONS	1

NOTE

This kit is intended to be used on all model 170 and 171 GPL snack machines and model 427 FoodKing machines.

For models 170/171 GPL snack:

1. Discard the two pin shunt (9989507), because it is not used on your machine.
2. Remove PCB assembly 9989743 from your machine.
3. Install the new PCB assembly (9989744) furnished with this kit.

NOTE: It may be necessary to replace and/or install the EPROM. Locate the reference designator "U3" and proceed accordingly.

For model 427 FoodKing:

1. Remove PCB assembly 9989722 from your machine.
2. Install the 2 pin shunt onto the new PCB assembly (9989744) at JP1, as shown.
3. Install the new PCB assembly into your machine.

NOTE: It may be necessary to replace and/or install the EPROM. Locate the reference designator "U3" and proceed accordingly.

