

### SERVICE INFORMATION

M 137.0

**MODELS AFFECTED**: All BevMax 4 Models

Date: 02/11/15 MODEL NUMBERS: DN5800-4, DN3800-4

RE: BevMax 4 Lock Bar Guide Bushing Field Replacement



Reason: To provide instructions on removal and replacement of existing Lock Bar Guide(s) if defective in the field.

Order: See list of parts required:

Description	Part Number	QTY
10-32 X 1/4" Shoulder Screw	90020203	1
Lock Bar Spacer	80120197	1
10-32X3/8 Phil Truss Head Screw	80020265	1
.191ID.50ODX .054T Flat Washer	80070152	1
.260 ID X .687 OD Flat Washer	90070122	1
Installation Instructions	M137.x	1

#### **Tools Required:**

Phillips screw driver 3/16" drill bit

Thread Locking Liquid


Common screw driver



## SERVICE INFORMATION

#### Removal/Installation Instructions - Failed Latch Bar Guide:

- 1. Remove power to the vender.
- 2. Drill out existing Latch Guide as shown with 3/16" Drill Bit as shown.

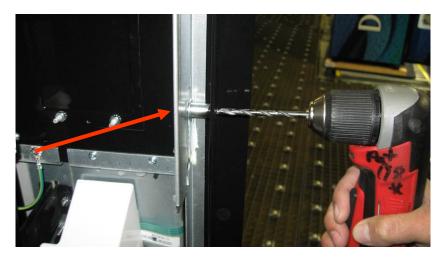

- 3. Discard old parts.
- 4. Install new parts in order as shown below in position as shown below.



5. Pre assembly parts as shown below.




**NOTE:** Install Liquid Thread Locker on threads of two screws before final installation.



# CRANE MERCHANDISING SYSTEMS

## SERVICE INFORMATION

Install in door assembly as shown below and tighten.

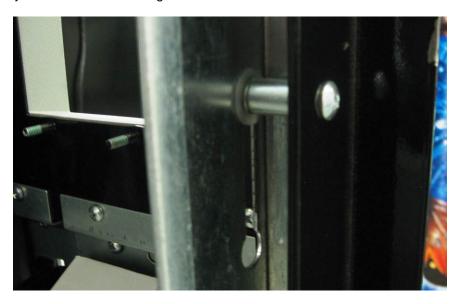

7. Completed Assembly see below.



Plug in vender and test for proper operation with the door open.

CAUTION: BE SURE TO TEST WITH DOOR OPEN FOR PROPER OPERATION BEFORE CLOSING AND LOCKING DOOR.