

# M041.3

## Dixie-Narco Pepsi-Cola High Visibility Vender Electronic Door Lock Operating Instructions

**Important:** Venders shipped from Dixie-Narco have the lock programmed to “P1” or “D00”. You will need to contact TriTeq Lock & Security to purchase key FOB’s prior to receiving your venders.

### How to Open the Venders serialized 0001-6730BZ and higher

- 1** Plug the vender into a properly powered outlet.



- 2** Hold the Key FOB 0 to 3 inches to the right side of select button #10 and press the button on the key FOB.  
Note: The wide end of the FOB should face the door.



- 3** The lock will begin releasing the door. The display will indicate:  
**Door Opening**

After the motor has stopped running, you can pull the door open. The display will indicate:

**Door Unlocked**

### How to Close the Vender

- 1** To close the vender, **DO NOT SLAM THE DOOR!** Push the door to the cabinet until the lock motor starts.

The display will indicate:

**Door Closing**

- 2** Continue to push the door for approximately 2 to 3 seconds after the lock motor starts. The lock will pull the door closed tightly.

- 3** When the lock motor stops the door will be locked and the display will indicate:

**Door Locked**

Before leaving the vender, ensure that the door is locked.

# Dixie-Narco Pepsi-Cola High Visibility Vender Electronic Door Lock Operating Instructions

## How to Open the Venders serialized prior to 0001-6730BZ

**1** Plug the vender into a properly powered outlet.



**2** Hold the Key FOB 0 to 3 inches near the upper right corner of the port and depress the button for 3 seconds.  
Note: The wide end of the FOB should face the door.



**3** The lock will begin releasing the door. The display will indicate:  
**Door Opening**

After the motor has stopped running, you can pull the door open. The display will indicate:

**Door Unlocked**

---

## How to Close the Vender

**1** To close the vender, **DO NOT SLAM THE DOOR!** Push the door to the cabinet until the lock motor starts.  
The display will indicate:

**Door Closing**

**2** Continue to push the door for approximately 2 to 3 seconds after the lock motor starts. The lock will pull the door closed tightly.

**3** When the lock motor stops the door will be locked and the display will indicate:  
**Door Locked**  
Before leaving the vender, ensure that the door is locked.