

M044.0

DN 5000 Encapsulated Temperature Sensor Installation Instructions

8-20-02 Models Affected: DN5000 beginning serial number 0001-8152BA

Reason: To introduce a more robust design, and eliminates the mechanical connection to the sensor's electronic board.

Parts required per vender: 1 – 804,919,66X.X1 Encapsulated Temperature Sensor

To remove the existing Temperature Sensor Board Assembly:

- 1. Remove power by switching the power switch to OFF.
- 2. Unplug the temperature sensor harness connection from the Machine Controller. (P8 connector located on the lower right corner of the Machine Controller.) See Figure 2.
- 3. Remove product from the E9 position.
- 4. Feed the harness through the dividing wall separating the Service area and the Refrigerated cabinet.
- 5. Locate the two screws on the Temp Sensor Board assembly.
- 6. Unscrew the Temperature sensor board assembly from the cabinet using a Philips screwdriver.

To install the Encapsulated Temperature Sensor:

- 1. Insert the two tabs of the encapsulated temperature sensor between the third and fourth horizontal tubes of the evaporator as shown in photo below. See Figure 1.
- 2. Feed the harness through the dividing wall and plug into the P8 connector on the Machine Controller.
- 3. Reapply power by switching the power switch to the ON position.



Figure 1



