

DIXIE-MARCO, INC.
SERVICE BULLETIN #141

Date: 5/24/72

MODELS: All Brookwood IV - With Hansen Valves
All Bonanza IV - With Hansen Valves
All Bonanza 450 - With Hansen Valves

SUBJECT: Installation of:

- a. 300-016 Flow Regulator (clear plastic).
- b. 300-008 Flow Adjustor (less projection).
(with "O" ring, 300-120).



Flow Regulator



Flow Adjustor

REASON: To replace the Flow Regulators in those valves which have regulators that stick.

The Flow Adjustors must be replaced at the same time since the projection on the inside of the original adjustor can interfere with the Flow Regulator.

TO INSTALL, DO THIS:

1. Remove Faucet Housing Assembly.
 - a. Remove Flow Regulator and replace with clear plastic Flow Regulator.
 - b. Remove Flow Adjustor by turning Adjustor clockwise and replace with new Flow Adjustor.
2. Reassemble Faucet Housing to Dispensing Valve.