

FOR 1 VENDER: MODEL - DN330/189-5 ORDER AS: BM251,010,000.04
 DN330/189-6
 DCB318/183-6
 DNCB330/189-5 & -6

KIT CONSISTS OF: 1 C172,011,500.03 Bottle Chute
 3 C231,070,500.03 Bottle Guides (Narrow)
 3 C164,070,331.23 Bottle Guides (Standard)

FOR 1 VENDER: MODEL - DN520/184-7 ORDER AS: BM240,010,100.04
 DN520/184-8
 DCB504/176-8
 DNCB320/184-7 & -8

KIT CONSISTS OF: 1 C164,012,800.03 Bottle Chute
 4 C240,070,100.03 Bottle Guides (Narrow)
 4 C172,070,130.33 Bottle Guides (Standard)

FOR 1 VENDER: MODEL - DN368/216-7 ORDER AS: BM239,010,000.04
 DN368/216-8
 DCB352/208-8
 DNCB368/216-7 & -8

KIT CONSISTS OF: 1 C164,012,800.03 Bottle Chute
 4 C239,070,100.03 Bottle Guides (Narrow)
 4 C165,070,331.03 Bottle Guides (Standard)

FOR 1 VENDER: MODEL - DN440/252-7 ORDER AS: BM231,010,300.04
 DN440/252-8
 DCB424/244-8
 DNCB440/252-7 & -8

KIT CONSISTS OF: 1 C164,012,800.03 Bottle Chute
 4 C231,070,500.03 Bottle Guides (Narrow)
 4 C164,070,331.23 Bottle Guides (Standard)

FOR 1 VENDER: MODEL - DNCB360/210-5 & -6 ORDER AS: BM165,011,000.14

KIT CONSISTS OF: 1 C164,012,800.03 Bottle Chute
 6 C165,070,331.03 Bottle Guide

FOR 1 VENDER: MODEL - DNCB432/246-5 & -6 ORDER AS: BM164,012,600.14

KIT CONSISTS OF: 1 C164,012,800.03 Bottle Chute
 6 C164,070,331.23 Botte Guide

TO INSTALL
DO THIS:

1. Adjust the Vending Cam, so that there are two (2) notches showing. Vend Motor-Standard Column and one (1) notch showing, Vend Motor - Narrow Column.
2. Adjust Bottle/Can Discharge Port area to dispense the 10 oz. NR Pre Labeled Bottle. Before making this adjustment, dispense the "Bottle." It can be removed by the customer but not as easily as if the adjustment were made. Thus, it becomes a matter of preference.
3. Place the Rear Bottle Guide Assy. all the way forward in the last adjustment slot of the column.
4. Remove original Bottle/Can Chute and replace with the Bottle/Can Chute provided with the kit. When installed, the rear end of the chute will rest on the flange at rear of stack. Exercise care as chute is placed in position so as not to loosen the foam pad on underside of chute -- pad secured by pressure sensitive adhesive. Pad controls cold air direction.

*SHIMMING:

1. No Shims are required in any of the columns.
2. Remove the Can Shim from the left side of the Narrow column. All Dual Venders are shipped with this can shim installed.

LOADING THE BOTTLES: IMPORTANT:

1. In all standard width columns (approx. 5" wide) on Dual Adaptables, for good vending results, the bottles should be loaded "heel to cap." That is: Load one bottle with heel towards you, the next bottle with cap towards you, then heel, then cap etc...
2. In narrow columns on Dual Adaptables bottles are loaded in normal manner. That is: all heels towards you.

