

Technical Bulletin

Bulletin Number: 326 Revision Number: R-01 Release Date: October 1, 1987 Revision Date: January 4, 1999

SUBJECT: INNER TANK

MODELS AFFECTED: All DNCB Models.

BEGINNING SERIAL NUMBERS: 3108-6500BW and higher Sealed Inner Tank

0001-2989BL and higher Metal at bottom front of inner tank is

hemmed.

For any vender prior to 3108-6500BW which is leaking water but the drain pan is dry. To seal the lower inner tank seams to prevent condensation build-up from leaking to lower compartment or floor and facilitating condensation flow to drain tube in condensate pan.

ORDER: 903,600,49x.x1 Clear Sealant (10.3 oz. tube) *Note: One tube will do several venders.

INSTALLATION INSTRUCTIONS:

- 1. Remove the front cabinet stiffener plate.
- 2. On E-model venders serialized prior to 0814-6452 remove the mullion extension and foam extensions.
- 3. Remove the can/bottle chute. Note: If there is a front duct, remove it also.
- 4. Remove the refrigeration system.
- 5. With a caulking gun, install sealant across the back, both sides, and along the front bottom inner tank seams. Ensure all seams are filled with sealant.
- 6. Install the refrigeration system.
- 7. Install the can/bottle chute.
- 8. On E-model vender serialized prior to 0814-6452 install the mullion extension and foam extensions.
- 9. Install the front duct if one is used.
- 10. Install the front cabinet stiffener plate.

