

## E-MODEL PRODUCT LOADING S026.0

### INITIAL LOADING


Oscillators must be in the extreme left or right position to insure proper loading. When loading wide columns, the first row of cans should be loaded on the bottom bar of the oscillator. The second row of cans must be loaded on the top bar of the oscillator. Always load complete rows, do not load only to the back or only to the front of the column. Rotors must be in the "cup" position to receive the first cans. When loading narrow columns lay the rows in the column until the column is full.

Do not fill the columns to the top of the cabinet. Allow about three inches at the top of the column because the can stack will move up and down in the column during the vend cycle. Correct loading will prevent service calls and insure proper vending.


After loading a vender for the first time, test-vend each selection with money until the first can is delivered. This will ensure that the vender is loaded and working properly.

**Note: To insure proper airflow through the evaporator, DO NOT place cans (or other foreign objects) in the bottom of the tank.**


---

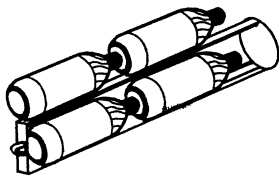

**Oscillator Loading**

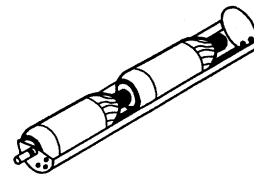

**Rotor Loading**

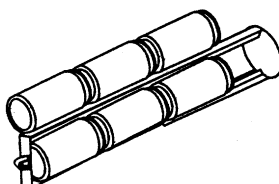

Rod in position "B"

