

LIFT HANDLE LOCK ASSEMBLY SECURITY UP-GRADING KIT - FOR A NATIONAL VENDORS®, CROWN SEVENTY TWO®, 21CE-72, 22M-72, CM-72, FM-72, MM-72, PM-72, ECM-72, EPM-72, HCM-72, HCM-72C, AND SC-140 MERCHANDISERS

This Instruction covers the procedure for installing a Lift Handle Lock Assembly Security Up-Grading Kit, in a Crown Seventy Two, 21CE-72, 22M-72, CM-72, FM-72, MM-72, PM-72, ECM-72, EPM-72, HCM-72, HCM-72C, or SC-140 Merchandiser which is equipped with a Lift Handle Lock. Some of the information given in this Instruction pertains only to the FM-72 Merchandisers and is so designated.

Figure 1 is provided as an aid in identifying the contents of the Kit.

Read this Instruction carefully and thoroughly before installing the parts of this Kit. Retain the Instruction for reference and future part number identification.

Kit, part number 130-2328, contains the following parts:

Part Number	Description	Quantity
121-7161	Screw/Lockwasher, No.10-32 x 1/2" Rd. Hd.	2
130-2290	Lower Latch Lock	1
130-2324	Door Latch Catch	1
9900-067	Flat Steel Washer, 7/16" x .203" x .062"	1
130-2326	Latch Shield	1
130-2325	Lock Shock Absorber	1
130-2327	Installation Instruction * * *	1

INSTALLATION OF KIT PARTS:

A. PREPARATION OF MERCHANDISER FOR INSTALLATION OF PARTS IN KIT.

1. Open the Cabinet Door or in the case of the FM-72, the Monetary Compartment.
2. If the Lock in the Lift Handle Lock Lever is the short-cylinder type Lock, remove the Lock Cylinder from the Lift Handle Lock Lever. The Lock-pin of a short-cylinder type Lock is up when installed in the Lock Lever. The Lock-pin of a long-cylinder type Lock is down. Do not remove the long-cylinder Lock.
3. Remove the 2 Screws/Lockwasher and the Cup Spacers which attach the upper Latch Assembly, the Lower Latch Assembly, and the Lift Handle Lock Lever to the Cabinet Door or Monetary Compartment and remove the upper Latch Assembly and Lower Latch Assembly. See Figure 2; view "A" for Merchandisers other than the FM-72 or view "B" for the FM-72 Merchandiser.

B. INSTALLATION OF THE REPLACEMENT PARTS IN THE KIT.

1. Install the Lower Lock Latch, part number 130-2290 and the Door Latch Catch, part number 130-2324, (both of which are included in the Kit) on the Door or Monetary Compartment. See Figure 3. Attach the parts with the Flat Steel Washer, part number 9900-067 and the remaining Screw/Lockwasher, part number 121-7161, both of which are included in the Kit. See Figure 4 for the proper space adjustment of the Lower Lock Latch.
2. Install the Latch Shield, part number 130-2326 included in the Kit and attach the Door Latch Catch (step B-1) and the Latch Shield with the remaining Screw/Lockwasher included in the Kit. See Figure 3.

NOTE

1. *If the Lift Handle Lock Lever contained a short-cylinder type Lock, which was removed per step A-2, follow all the remaining steps of the procedure.*
2. *If the Lock in the Lift Handle Lock Lever is a long-cylinder type Lock, it should not have been removed from the Lift Handle Lock Lever.*

3. If the Lock to be used is a short-cylinder Lock, pull the Lift Handle Lock Lever out of the Lever Base and install Lock Shock Absorber, part number 130-2325, included in the Kit. Push the Shock Absorber into the back of the Lock Lever lock retaining cylinder. See Figure 5. The Shock Absorber fills the space between the short-type Lock Cylinder and the Door Latch Catch when the Lock Lever is in the locked position.
4. Insert the Lock Cylinder into the Lift Handle Lock Lever, Lock-pin up. See Figure 6.

NOTE

If the spring loaded Lock-pin of the Lock Cylinder fails to snap into place in the Lift Handle Lock Lever, use the Key to rotate the Lock Cylinder until the spring loaded Lock-pin snaps into place.

5. Close and lock the Cabinet Door or Monetary Compartment.

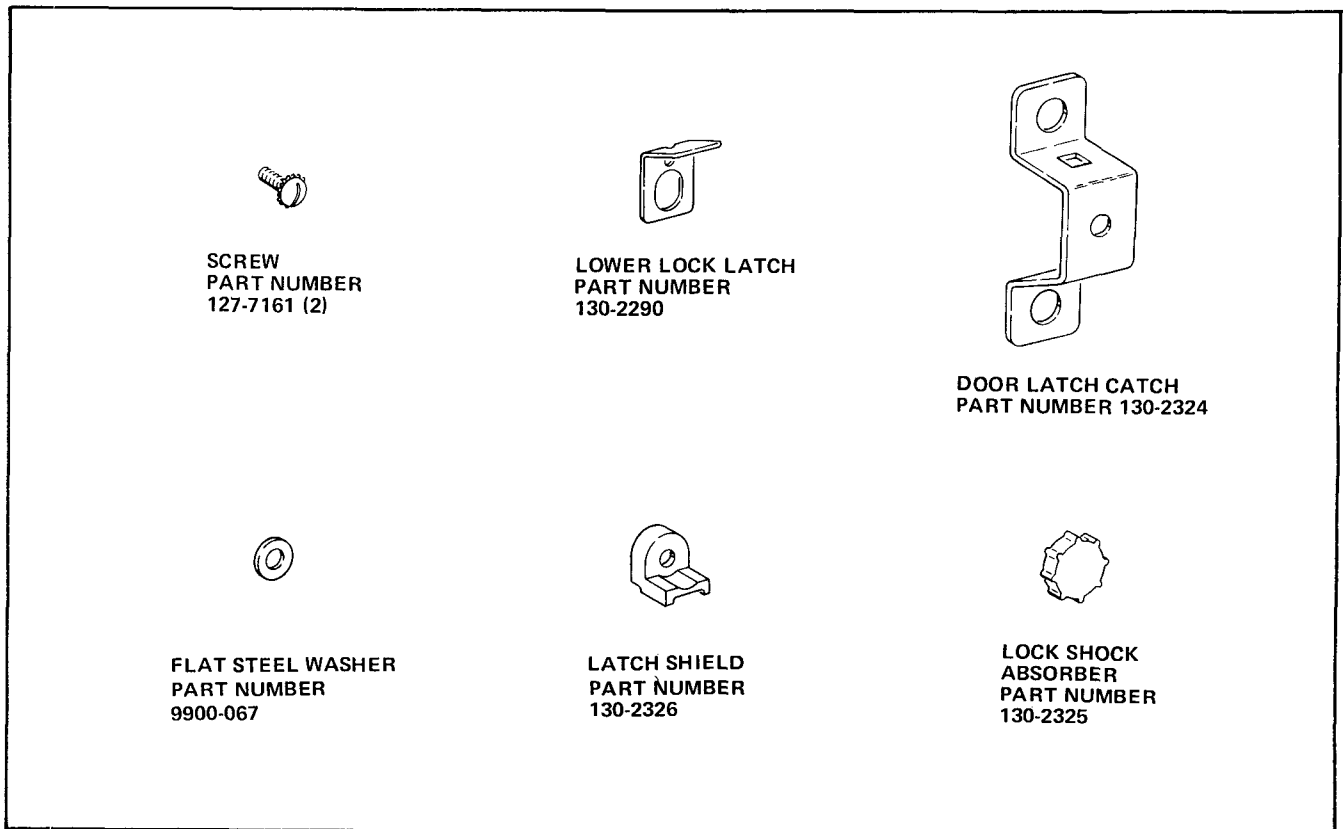


FIGURE 1

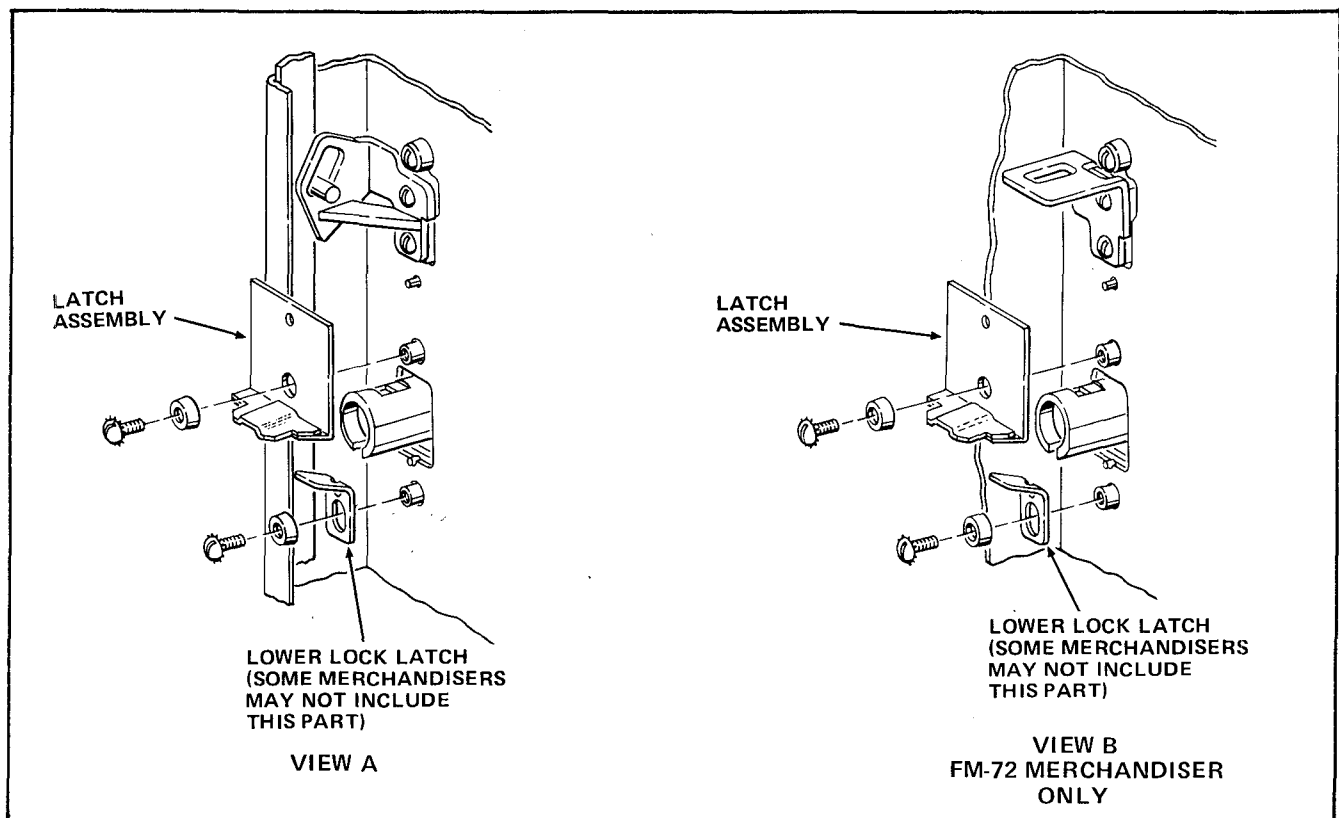


FIGURE 2

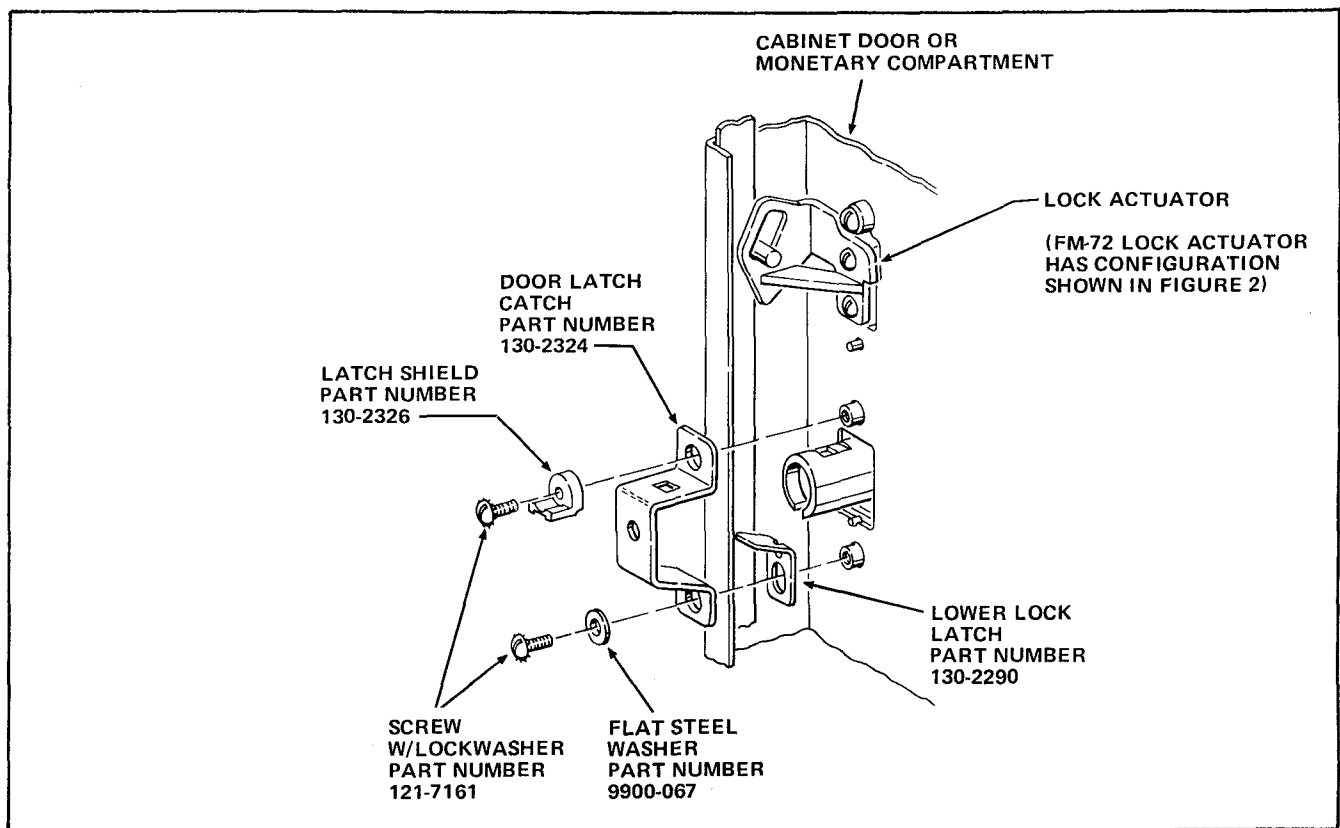


FIGURE 3

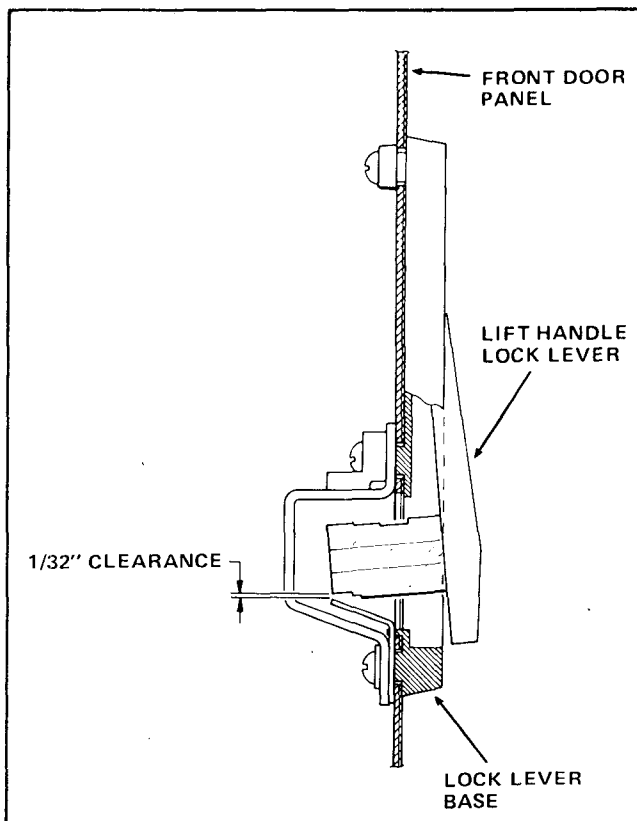


FIGURE 4

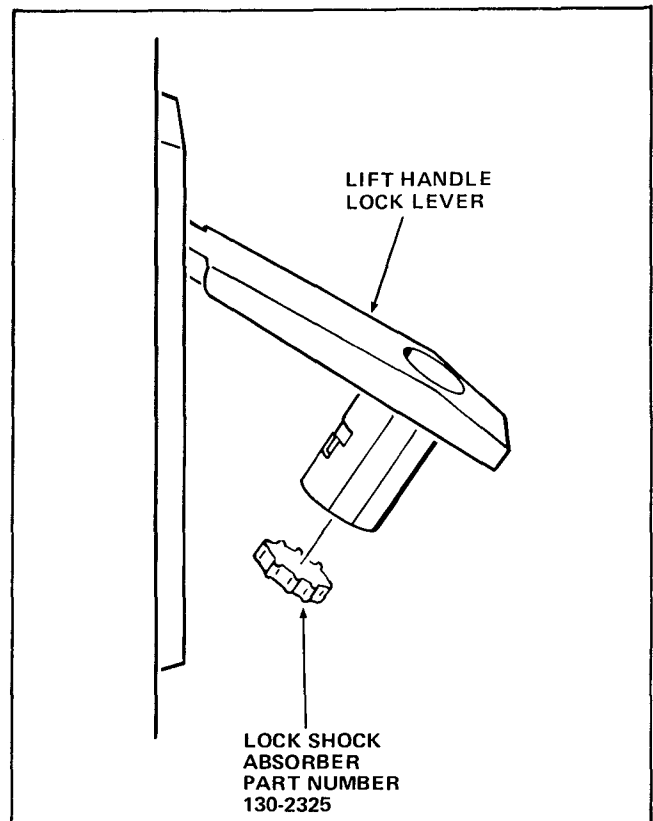


FIGURE 5

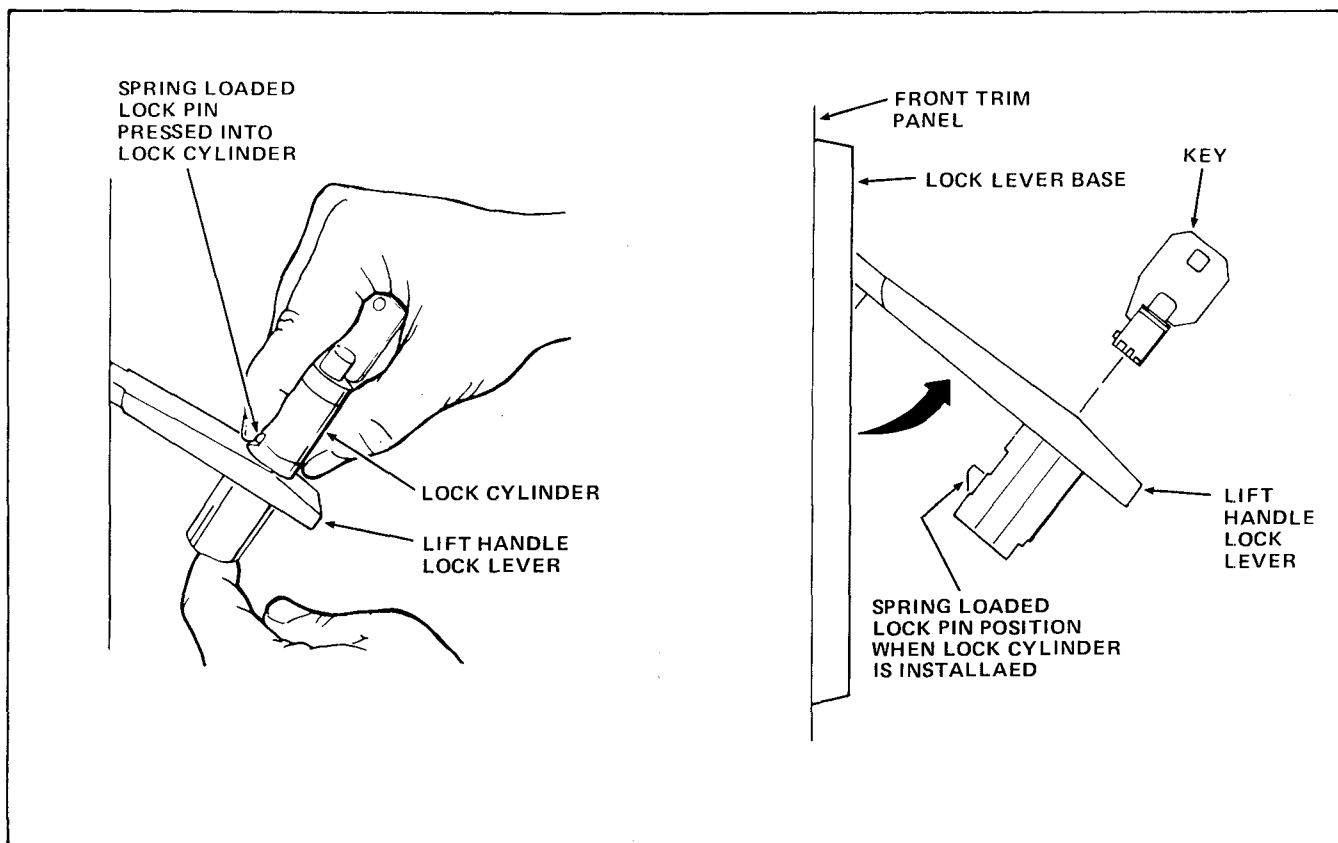


FIGURE 6