

**INSTRUCTIONS FOR INSTALLING THE PARTS OF A FILLER PLATE KIT ON A NATIONAL VENDORS<sup>®</sup>, CROWN SEVENTY TWO<sup>®</sup>, SERIES OR GOLDEN FURNITURE LINE, ECM-72 ELECTRIC CANDY MERCHANDISER (SNACK VERSION) OR EPM-72 ELECTRIC PASTRY MERCHANDISER**

Filler Plate Kit, part number 139-6050, consists of the following parts:

Part Number	Description	Quantity
139-6048	Left Filler Plate	1
139-6049	Right Filler Plate	1
9900-046	No. 8-32 x 1/4" RHS	
	Self Tap Screw	2
139-6051	Installation Instruction	1
	* * *	

The installation of the parts in the Kit will prevent the possibility of bag hang-up in the left and right hand outside Columns of an EPM-72 Electric Pastry Merchandiser or in the right hand Column of a ECM-72 Electric Candy Merchandiser - Snack version.

The flange of some Delivery Mechanism Sidewalls are pre-drilled for attaching a Filler Plate other Sidewalls will have to be drilled.

The EPM-72 Electric Pastry Merchandiser will require the installation of both the left and right Filler Plate and the ECM-72 Electric Candy (Snack version) Merchandiser only the Right Filler Plate. The ECM-72 Electric (Snack version) Merchandiser must not have a Left Filler Plate installed and the (full Candy version) must not have either Filler Plate installed.

**TO INSTALL THE FILLER PLATES**


- A. Unlock and open the Merchandiser Cabinet Door.
- B. Open the Delivery Mechanism Door.

**NOTE**

1. *If the Merchandiser is an EPM-72 Electric Pastry Merchandiser which does not have a pre-drilled hole at the bottom of the Delivery Mechanism Sidewall flanges, follow steps C through H.*
2. *If the EPM-72 Merchandiser has pre-drilled hole at the bottom of the Left Sidewall flanges, follow step C, E, F, and H.*
3. *If the Merchandiser is an ECM-72 (Snack version) Merchandiser which does not have a pre-drilled hole at the bottom of the Delivery Mechanism Right Sidewall flange, skip to step F and follow steps F through H. The Left Filler Plate is not to be used on these Merchandisers.*

4. *If the ECM-72 Merchandiser has a pre-drilled hole at the bottom of the Right Sidewall flange, skip to step F and follow steps F through H.*

- C. Place the Left Filler Plate on the Left Sidewall. See Figure 1.

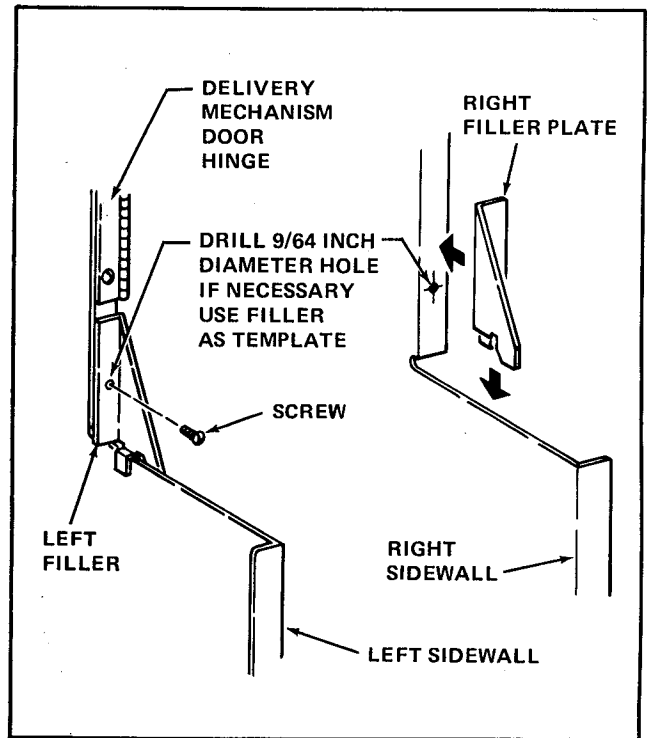

**FIGURE 1**

- D. If there is no hole in the flange of the Sidewall for the Filler Plate attaching Screw, hold the Filler Plate square against the Sidewall, use the Plate as a template, and drill a 9/64 inch diameter hole in the Sidewall flange.
- E. Attach the Filler Plate to the Sidewall with one of the No. 8-32 x 1/4" Self tapping Screws included in the Kit.
- F. Place the Right Filler Plate on the Right Sidewall See Figure 1.
- G. If there is no hole in the flange of the Sidewall for the Filler Plate attaching Screw, hold the Filler Plate square against Sidewall, use the Plate as a template, and drill a 9/64 inch diameter hold in the Sidewall flange.
- H. Attach the Filler Plate to the Sidewall with one of the No.8-32 - 1/4" Self-tapping screws included in the Kit.