

**INSTRUCTIONS FOR INSTALLING A DELIVERY DOOR GUARD KIT IN A NATIONAL VENDORS[®]
CROWN SEVENTY TWO[®] SHOWCASE 141 ELECTRIC SNACK/CANDY MERCHANDISER**

**CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST
IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT
NATIONAL VENDORS' PARTS DEPARTMENT IMMEDIATELY.**

These instructions cover the procedure for installing a Delivery Door Guard kit in a Crown Seventy Two Showcase 141 Snack/Candy Merchandiser.

Read these instructions carefully and thoroughly before installing the Kit. Retain these instructions for part number and installation information.

Kit, Delivery Door Guard, part number 141-2125, contains the following parts:

Part Number	Description	Quantity
141-2127	Left Delivery Door Guard	1
141-2128	Right Delivery Door Guard	1
141-2129	No.10-24 x 1.00 Carriage Bolt	2
110-6656	Delivery Guard Carriage Bolt	2
230-6487	No.10 Ext. Tooth Lockwasher	2
9900-152	No.10-24 Nut	2
9900-081	No.8-32 Nut W/Lockwasher	2
141-2126	Installation Instructions	1
	* * *	

Special Tools Required:

- Portable Drill
- 3/16" (.187) Drill Bit
- Center Punch
- No. 8 Nut Driver

TO INSTALL THE KIT

NOTE

The two Delivery Door Guards included in the Kit are marked for identification. The Left Guard is marked with a L; the Right Guard with a R.

1. Unlock and Open the Cabinet Door.
2. Remove both the left and right Product Deflectors from the Light Shield Assemblies inside the Cabinet Door.

3. Fit the Left Delivery Door Guard included in the Kit, part number 141-2127, on the Cabinet Door so that the Guard is positioned over the left end of the Delivery Door opening as shown in Figure 1.
4. Mark through the two square holes in the Left Delivery Door Guard to locate for drilling and then remove the Left Delivery Door Guard from the Door. See Figure 1.
5. Using a center punch and 3/16" (.187) drill bit, center punch and drill two holes through the locations marked in Step 4. See Figure 2.
6. Again fit the Left Delivery Door Guard on the Cabinet Door.

NOTE

The lower Nut attaching the Delivery Door Guard must be installed by reaching through the Delivery Door and turning Nut with a No. 8 nut driver.

7. Insert one short Carriage Bolt, part number 110-6656, through the Delivery Door Guard and the LOWER hole drilled in Step 5 and attach with a No.8 Nut W/Lockwasher, part number 9900-081. Both parts are included in the Kit. See Figure 2.
8. Insert one long Carriage Bolt, part number 141-2129, through the Delivery Door Guard and the UPPER hole drilled in Step 5 and attach with a Lockwasher, part number 230-6487, and a No.10 Nut, part number 9900-152. All parts included in kit. See Figure 2.
9. Follow Steps 3 through 8 to install the Right Delivery Door Guard, part number 141-2128, on the Merchandiser.
10. Install the right and left Product Deflectors on the Light Shield Assemblies.
11. Close and lock the Cabinet Door.

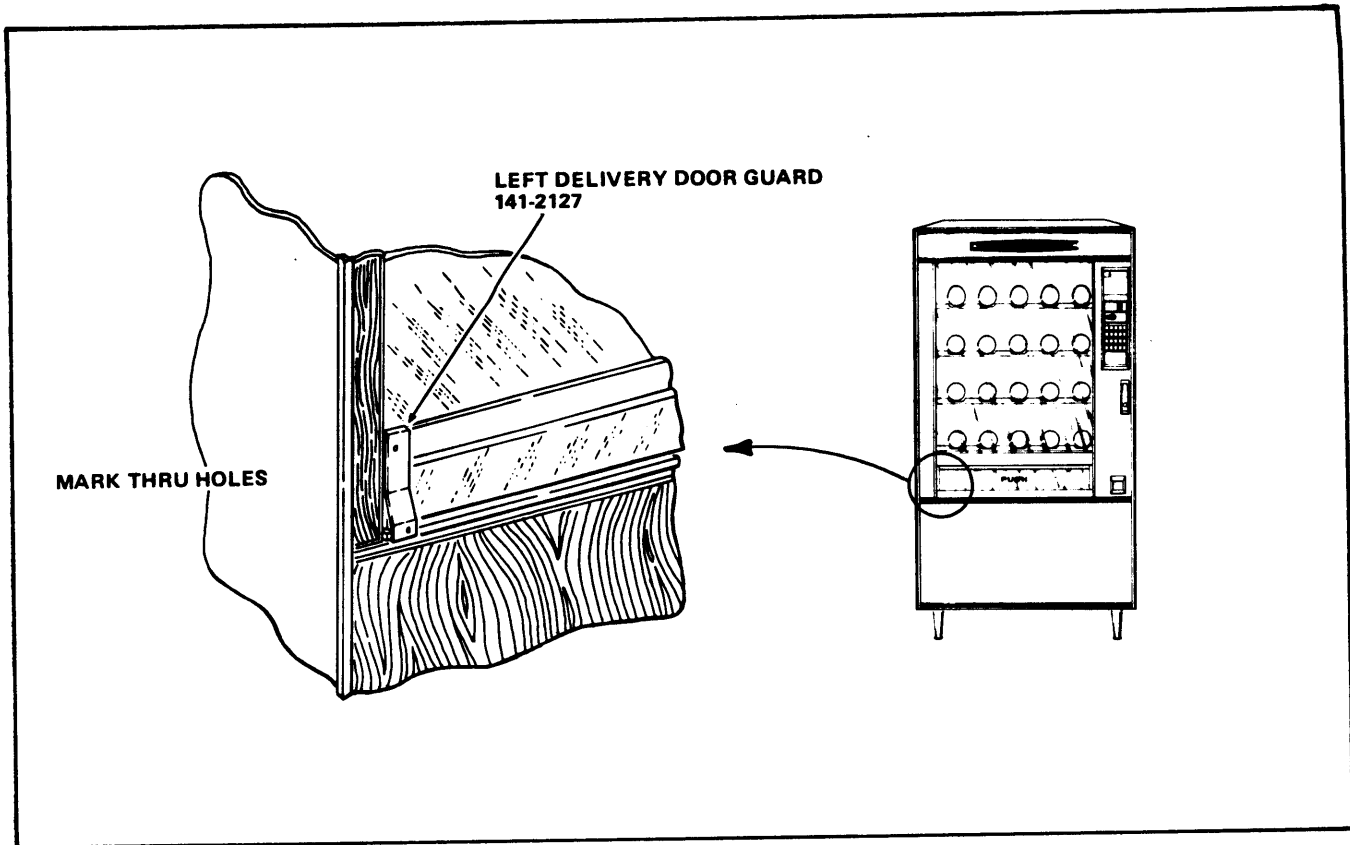


FIGURE 1

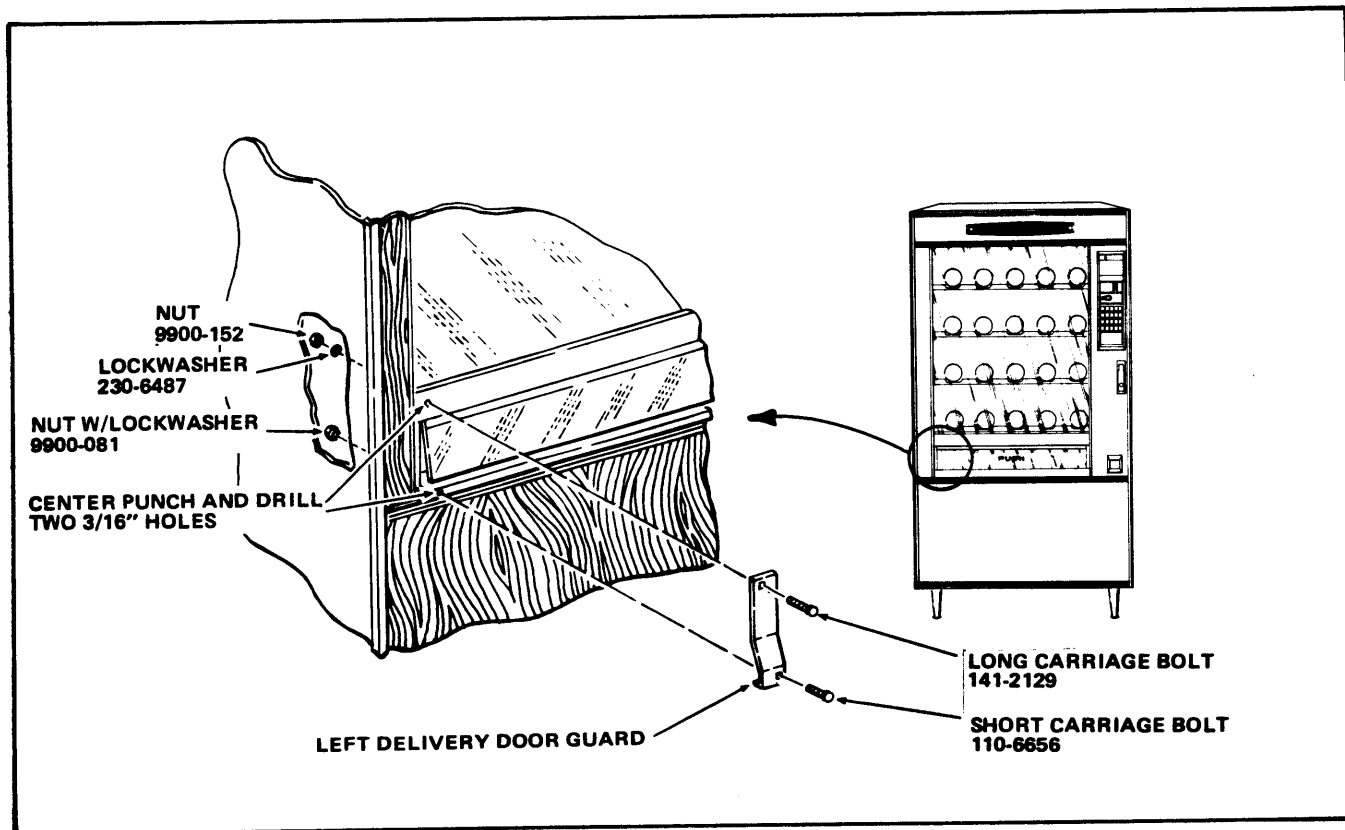


FIGURE 2