

**INSTRUCTIONS FOR INSTALLING A CANISTER RETAINER KIT, P/N 6207006,
IN A NATIONAL VENDORS HBM-615, 619, HOTTRON 620, OR 621**

**CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST
IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT
NATIONAL VENDORS' PARTS DEPARTMENT IMMEDIATELY.**

This kit contains the following:

Part No.	Description	Quantity
6207003	Retainer-Canister R.H.	4
6207004	Retainer-Canister L.H.	2
6207005	Installation Instructions	1

REMOVAL AND INSTALLATION

1. Canister must be removed to install retainer.
2. Left hand and right hand retainer to be installed as follows:
 - A. "S" end of retainer is inserted into hole in shelf under each canister area that is closest to canister locator. (See View A, Figure 1). (Right hand shown left hand opposite).
 - B. When "S" end of retainer is inserted into hole, the retainer must be leaned backwards over top of the shelf in order to manipulate it into position. (See View B, Figure 2)
 - C. Replace canister. The end of the retainer with the circle end will now snap over the nozzle as you swing it up. (See View C, Figure 1)

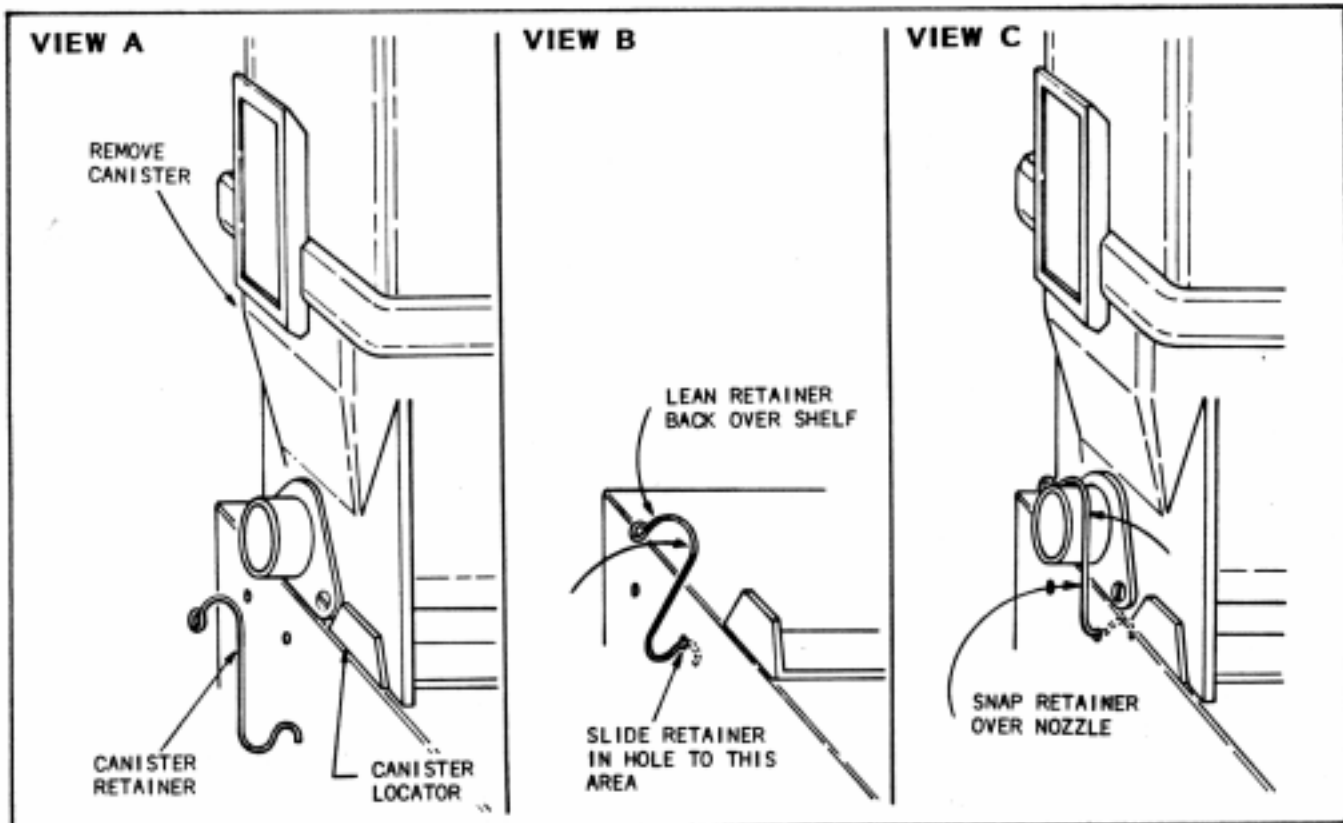


FIGURE 1