
KIT PART NUMBER 7212207
**INSTRUCTIONS FOR INSTALLING A LEXAN GUARD KIT IN AN OUT-
DOOR SNACK ATV**

CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTS DEPARTMENT IMMEDIATELY.

**Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.**

This kit contains the following :

PART NUMBER	DESCRIPTION	QUANTITY
7212179	INNER GUARD	2
7212180	OUTER GUARD	2
2221908	CARRIAGE BOLT BASE PLATE	14
PYO2317	LOCKNUT, 10-24, UNC	14

1. From both sides of the inside of the door, remove the existing baffles and spacers (see figure 1).
2. Mount the inner guards (7212179) as shown.
3. Reinstall the existing baffles and spacers.
4. Using the inner guard as a template, drill 7 holes, 13/64" in diameter, per side.
5. Mount the outer guards with the carriage bolts and locknuts.

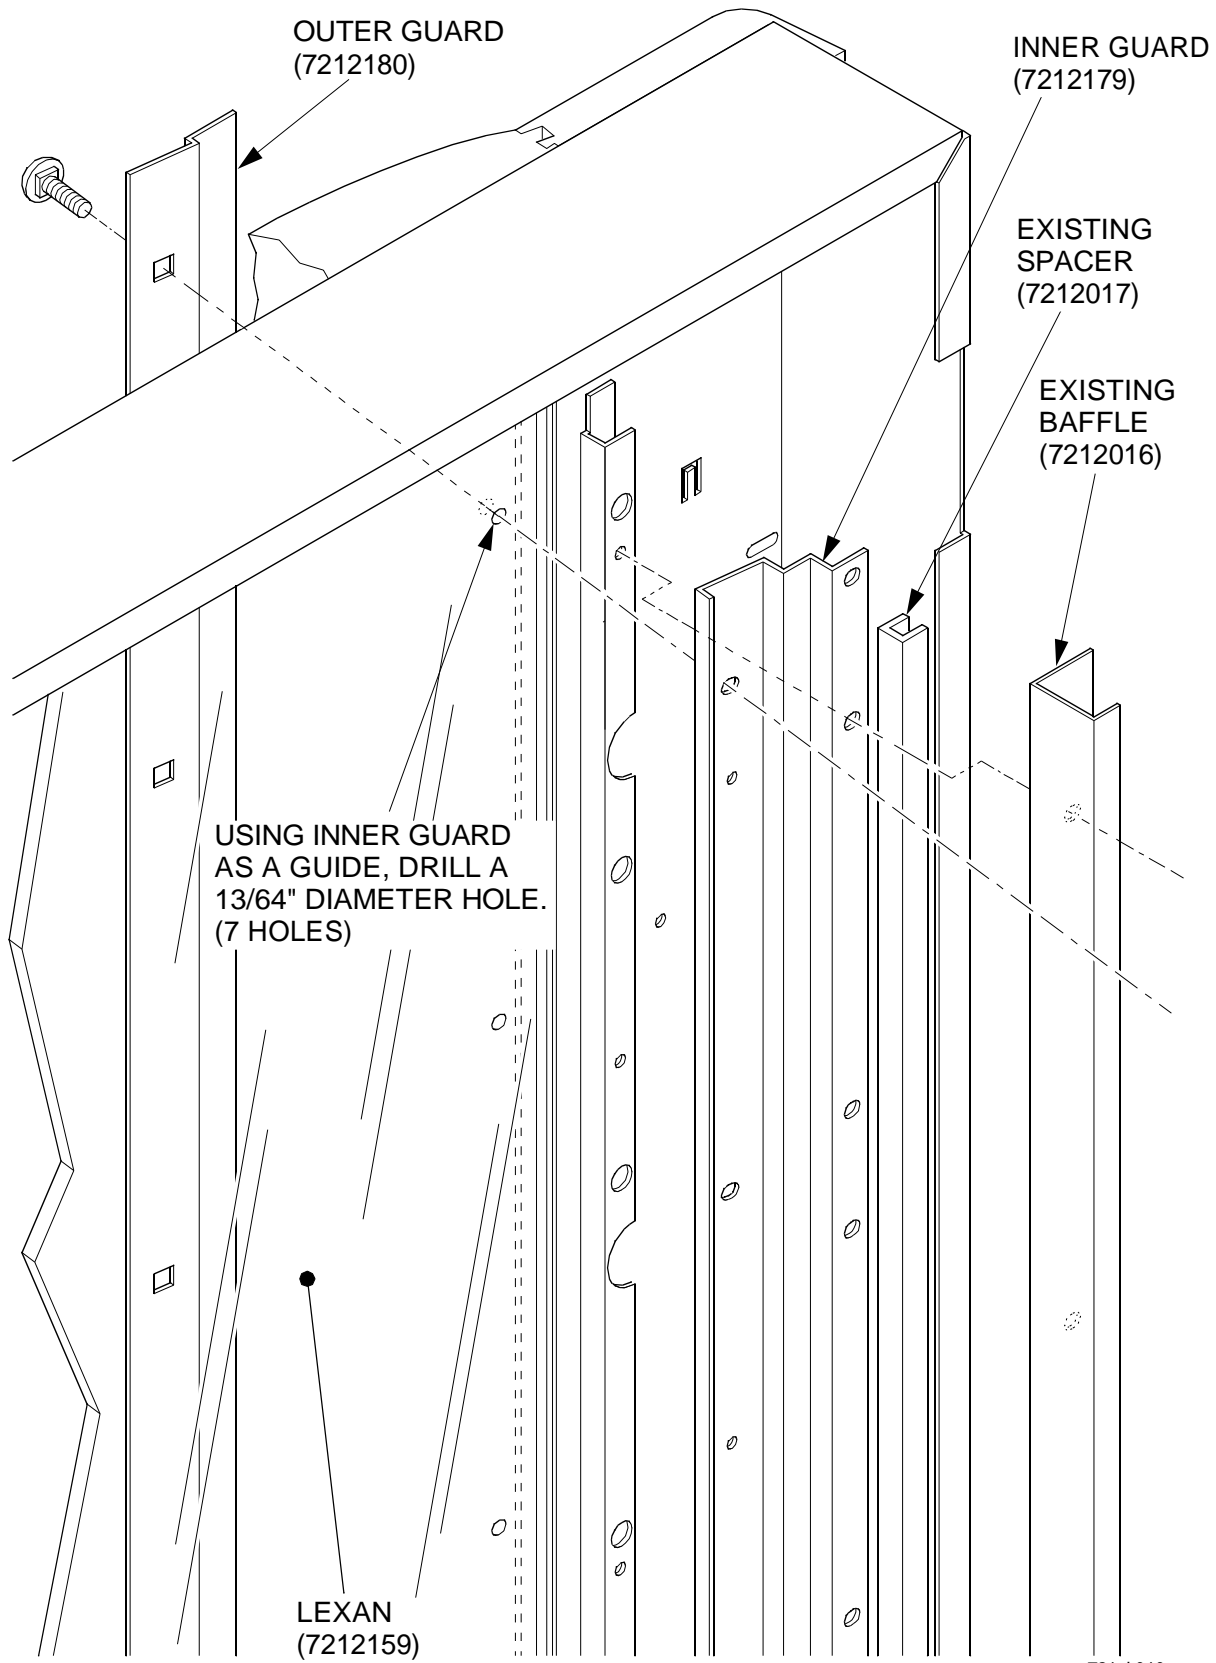


Figure 1