
KIT PART NUMBER 7800015

INSTRUCTIONS FOR INSTALLING THE DUAL ZONE KIT VERSION II DUCT SYSTEM

CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTS DEPARTMENT IMMEDIATELY.

Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.


THIS KIT CONTAINS THE FOLLOWING :

PART NUMBER	DESCRIPTION	QUANTITY
1451097	SCREW-#8-32X.31 HEX HD.TF-BLK.	2
4241148	INSULATION-ROD-.50	25 IN
7801159	RAIL-LH-THERMAL BARRIER	1
7801181	RAIL-RH-THERM BARRIER W/STANDO	1
7801158	DIVIDER SHELF ASSY	1
7800016	KIT INSTRUCTION	1

FOR A TWO OR THREE TRAY CONFIGURATION FOLLOW INSTRUCTIONS BELOW:
(REFER TO FIGURE 1)

1. You must first remove all trays from your merchandiser.
2. Remove the right tray rail guide for tray A shelf.
3. For steps 4-8 substitute third tray for second tray if configuring machine for three tray configuration.
4. Remove the tray rail board and the tray shield from the second tray guide rail in the machine.
5. Re-attached the tray shield to the second tray rail.
6. Mount the tray rail board to the right side of the barriers mounting rail standoffs.
7. Remove the temperature sensor bracket mounted to the left hand side of the cabinet. Do not unplug the sensor, let it hang down the left hand side of the cabinets wall.
8. Position the barrier inside the cabinet just below the second trays rails. Make sure that the third tray rail connector plug is left underneath the barrier. You will need to remove the left hand side tray rails underneath the barrier in order to position the barrier.
9. Mount the barriers mounting rails to the sides of the machine using one screw for each rail.
10. Move the barrier to the back right corner of the cabinet leaving a gap on the left hand side of the barrier.

11. Place the 1/2" by 1/2" piece of foam rope on the left side of the cabinet in between the barrier and the cabinet where you have left the gap.
12. Re-mount all tray rails and re-connect all rail connections.
13. Replace all snack and candy trays. You may have to adjust the tray rails underneath the barrier to provide adequate spacing for your trays.
14. Re-mount the temperature probe underneath the barrier in the holes provided on the left inside wall of the cabinet.

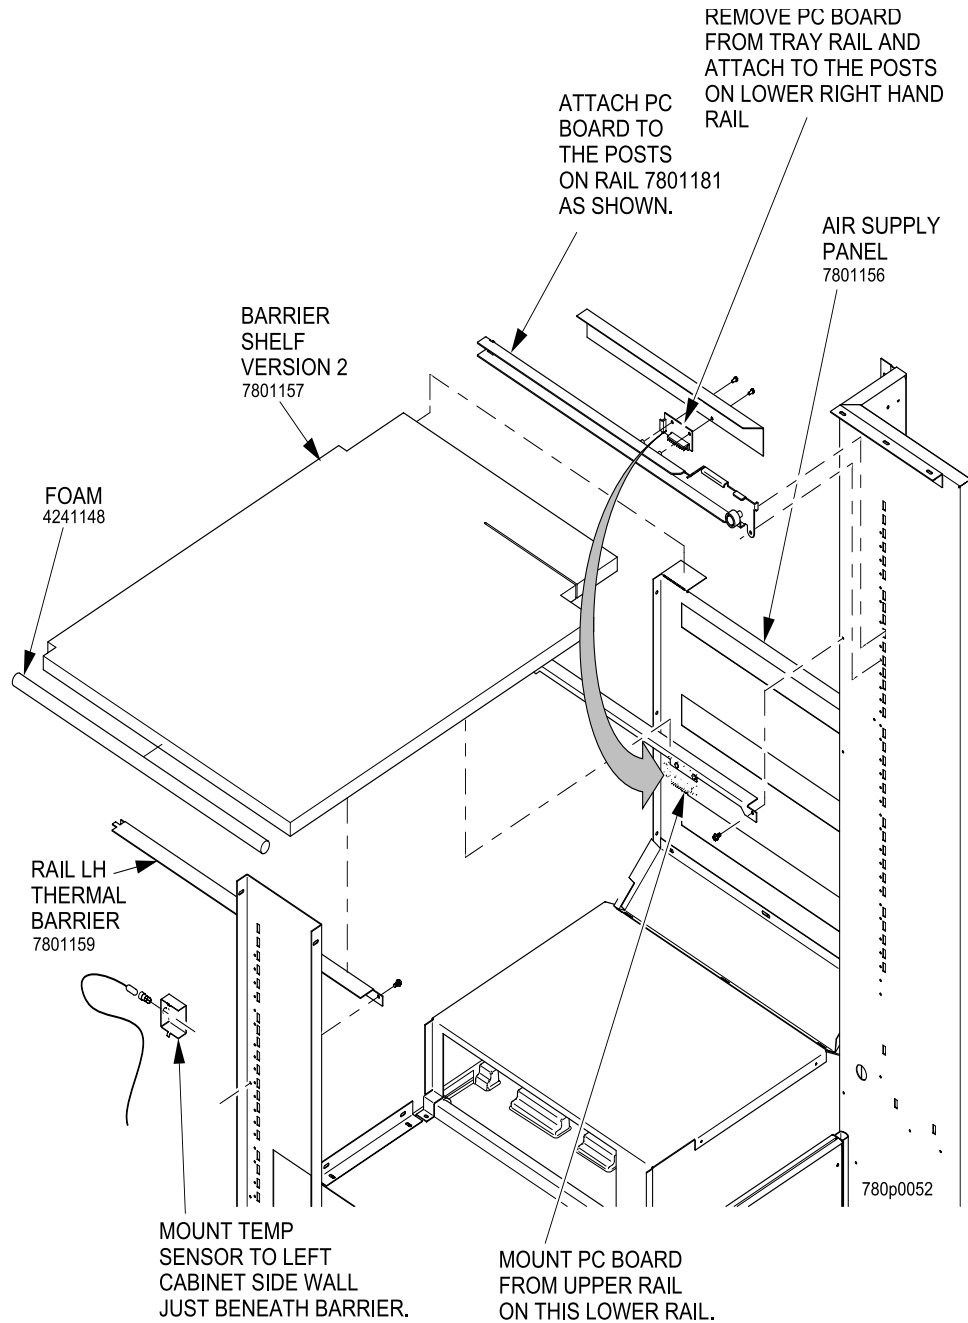

VERSION 2