

COKE MARKETING MACHINE

Bill Validator Guard and Guard Extension

M027.0

SUBJECT: Bill Validator Guard and Guard Extension

ORDER: 1 - 624,010,40x.x4 Bill Validator Guard Enhancement Kit

A.	1 - 805,700,98x.x1	Bill Validator Guard
B.	1 - 805,701,28x.x1	Bill Validator Guard Extension
C.	3 - 624,050,84x.x3	Validator Spacer
D.	1 - 805,700,94x.x1	Feature Button Stop
E.	4 - 902,001,02x.x1	Bill Validator Gasket
F.	3 - 900,201,54x.x1	Carriage Bolt, 1/4-20x ³ / ₈
G.	1 - 900,201,56x.x1	Carriage Bolt, 1/4-20x ³ / ₄
H.	4 - 900,800,67x.x1	Keps Nut 1/4-20

(See figure 1 for parts)

Installation Instructions:

1. Unplug the vender.
2. Remove the validator.
3. Remove the existing bill validator guard.
4. Remove the existing bottom feature button stop.
5. Remove the select switch and insulator from the bottom feature button stop.
6. Install the select switch and insulator on the *new* bottom feature button stop.
7. Install new bottom feature button stop.
8. Install new bill validator guard using the following steps. (See D, figure 2 on page 2.)
 - A. Place in position.
 - B. Install front two screws. (See A, figure 2 on page 2).
 - C. Install two ¹¹/₃₂ keps nuts.
 - D. Use a 1/4" drill bit and drill a lower rear hole.
 - E. Insert a carriage bolt (900,201,56x.x1) and keps nut (900,800,67x.x1) to secure. (See B, figure 2 on page 2.)
 - F. Insert screw in the top rear hole. (See C, figure 2 on page 2.)
9. Install a gasket (902,001,02x.x1) on the front of the bill validator guard extension.
10. Install the bill validator guard extension. Secure the bill validator guard extension to the bill validator guard using three carriage bolts (900,201,54x.x1) and keps nuts (900,800,67x.x1). (See E, figure 2 on page 2.)
11. Install the validator.

Note: Extra validator spacers (624,050,84x.x3) and gaskets (902,001,02x.x1) are provided for different validator installations. Use as needed.

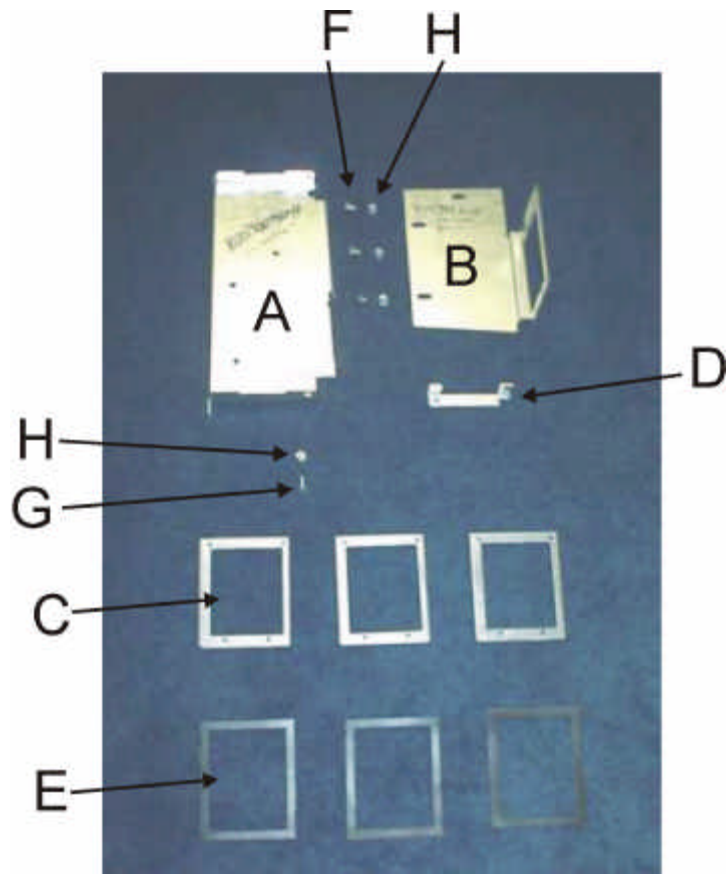


Figure 1

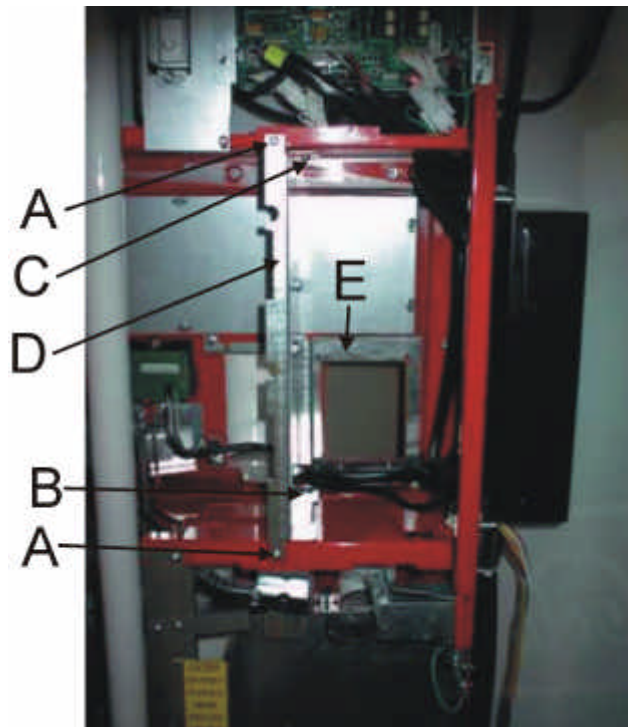


Figure 2