

500 ml PET POWERADE (AUSTRALIA) SETUP S023.0

Models Affected: All E-models

Installation Instructions:

Wide Column: 2 deep




3/32 short flat shim (1 each side)
2 - 801,804,81x.x1


Cam Setting #3.
Rear Spacer set #18.

To install:

1. Place oscillator paddle extension in position as shown.
2. Secure with screw provided.

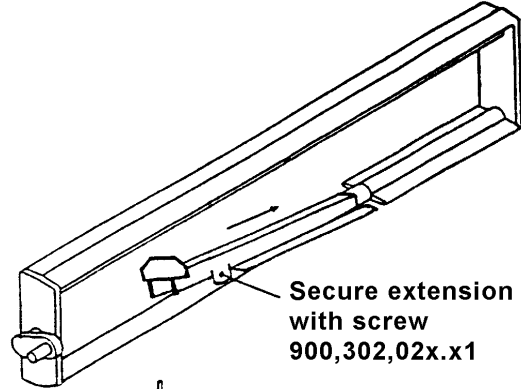


Secure extension
with screw
900,302,02x.x1

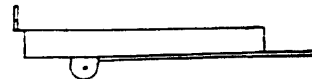


Extension Oscillator Paddle w/ Bottle Stop
(1 per wide column)
1 - 324,010,21x.x3

Narrow Column: 2 deep

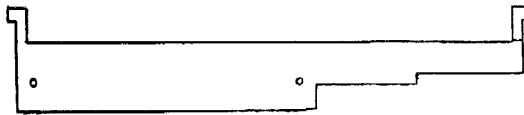

Towards front of
vender

Bottle Shim w/ Extended Lip
(1 right side next to column wall)
1 - 609,070,65x.x1

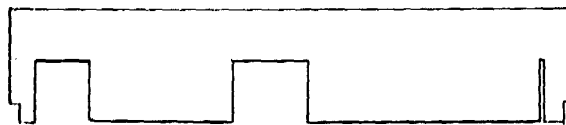

towards back of vender

3/32/ Flat Shim
(1 right side next to bottles)
1 - 801,811,05x.x1

- 1 - 432,070,27x.x3 large product sold out paddle
- 1 - 801,201,66x.x1 special rotor (or remove rear can retainer from existing rotor)
- 1 - 609,070,30x.x3 rod & spring assembly
- 1 - 801,903,23x.x1 red tube

Place rod with red tube in hole "B" of rotor.

Cam Setting #5.

Rear Spacer set #18.