

## INSTALLATION OF PEPSI HIGH SECURITY SELECTION GUARD M034.1

<b>Parts Required:</b>	1 - 592,151,00x.x3	Assembly Selection Guard
	1 - 801,813,05x.x1	Lens Selection 9 Select HS
	1 - 592,051,29x.x3	Bracket Lens HS
	1 - 592,051,27x.x3	Retainer, Selection 9-10 Select
	1 - 592,150,20x.x3	Assembly coin cup HS
	7 - 900,800,67x.x1	Nut 1/4 x 20
	9 - 900,800,50x.x1	Nut #8-32

<b>Tools Required:</b>	7/16" socket	11/32" socket
	Ratchet for socket	drill
	3/8" drill bit	center punch
	Hammer	Phillips screwdriver

**NOTE: PLEASE READ ALL INSTRUCTIONS THOROUGHLY PRIOR TO BEGINNING WORK.**

### Instructions:

Note: Prior to installing the selection guard, ensure that the wide vandal panel has been installed on the door.

1. Unplug the vender.
2. Referencing figure A, mark the first hole location on the outside of the select panel. Take care when marking the location as all other holes will be based on this first one.
3. Drill one 3/8" hole in the location marked in step 2. **Use caution when drilling to ensure that no wires are damaged.**
4. Using the selection retainer as a template, mark the location of the remaining six holes. Note that the next hole down should be approximately 3 1/2" below the first hole.
5. Drill the six remaining 3/8" holes marked in step 4.
6. Preassemble the selection guard by:
  - a. Install the Lexan lens in the selection guard.
  - b. Install the lens bracket on the bottom two studs over the lens.
  - c. Secure the lens and bracket with seven nuts.
  - d. Mount the coin cup assembly and secure with two nuts.
  - e. Mount the selection retainer over the studs of the selection guard.
7. Remove the coin cup and opener bezel from the main door.
8. Mount the selection guard assembly over the select panel and vandal panel and secure with carriage bolts and nuts.

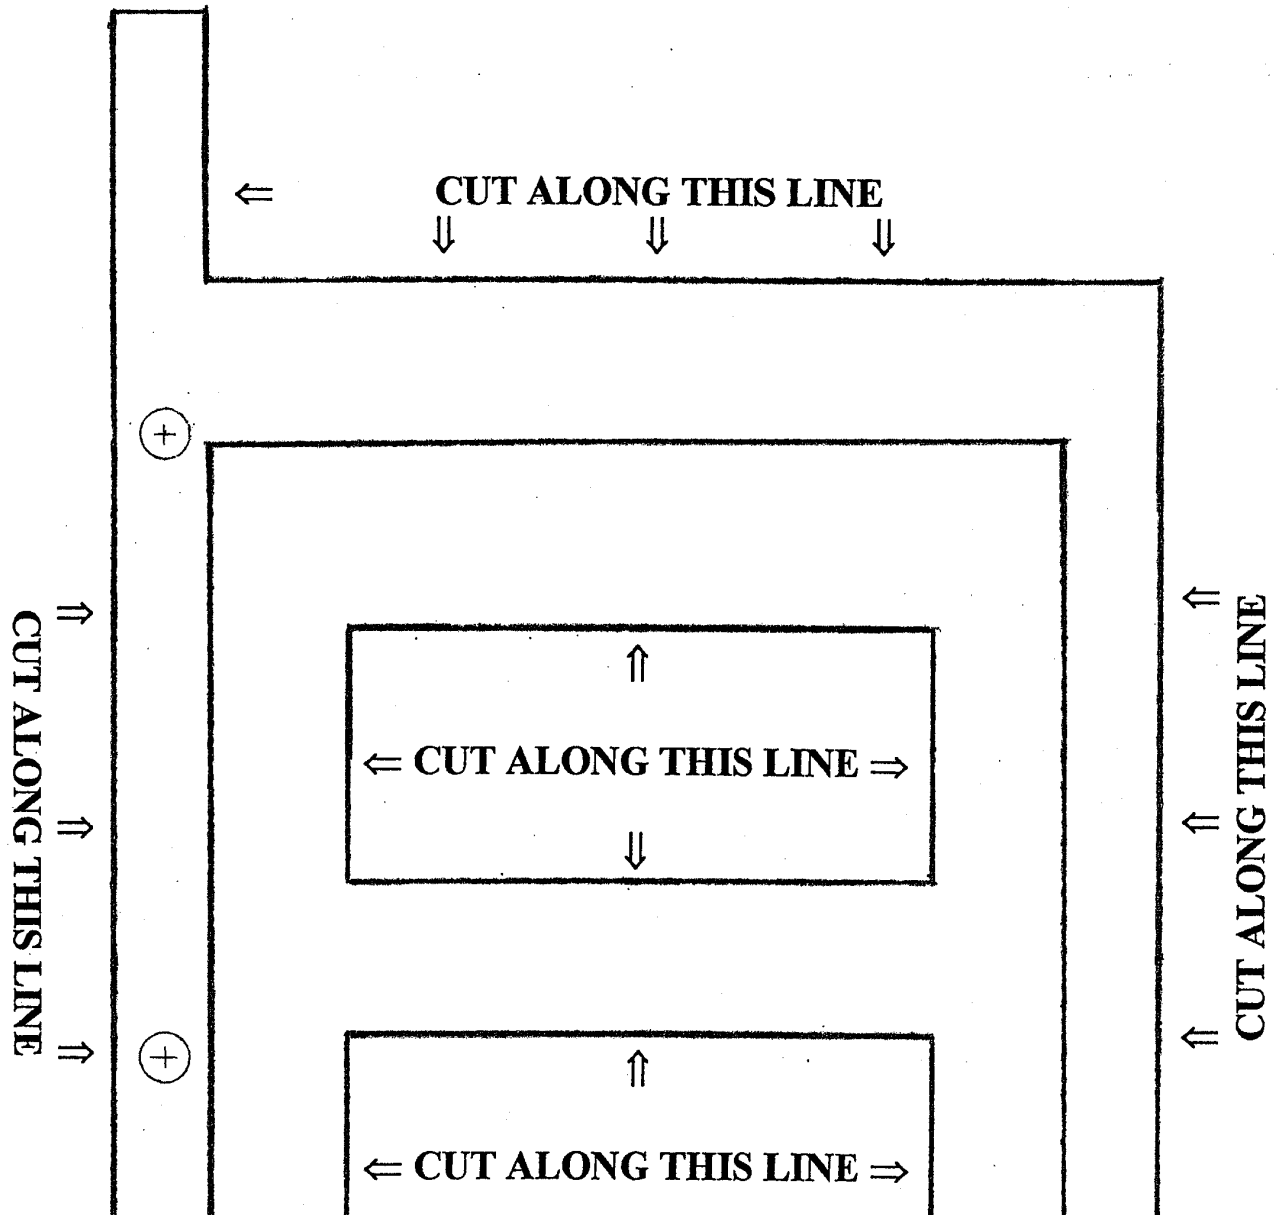


Figure A