

DIXIE-NARCO, INC.
SERVICE BULLETIN #103

Pg 1 of 2

Date: November 12, 1969

MODELS: DN354-6


SUBJECT: "Rewiring" so that after Vender has been "coined", one (1) time, the push button must be pushed to vend a can before the changer will accept more coins.

D803,804,660.11

REFER TO: D803,804,660.01-A Wiring Diagram. Part of these instructions.

- DO THIS:
1. Locate Reset Switch.
 2. Remove lines E2 and E24 from C of Reset Switch.
 - a. Insulate E2 and E24 well with electrical tape. Push back into harness.
 3. Locate Sold Out Switch 6A
 - a. Cut line E4, 3 inches from Sold Out Switch 6A.
 - b. Insulate the remaining long length of E4 with electrical tape and push back into harness.
 - c. Attach stripped end of jumper (D) provided to the 3 inch length of E4. Attach other end of jumper (slide on terminal end) to C of the Reset Switch.
 4. Locate Line D4 indicated by (*).
 - a. Trace D4 from plug to where it enters a wire nut.
 - b. Remove D4 from wire nut and insulate wire end with electrical tape. Do Not Remove D-68 - - - D-18.
 - c. Attach stripped end of jumper (E) provided to D-68 - - - D-18 at wire nut.
 - d. Locate N.C. of SW 1 in Relay Box indicated by (+).
 - e. Attach other end of jumper (E) (slide on terminal end) to N.C. of SW 1 in relay box.
 5. Kit Parts Provided:
 - a. Two (2) wire nuts (part number 904,800,230.01).
 - b. One (1) wire lead, with one (1) slide on terminal, One (1) stripped end, 36" long (D jumper).
 - c. One (1) wire lead, with one (1) slide on terminal, One (1) stripped end, 12" long (E jumper).

Dixie-Narco, Inc.
Service Department

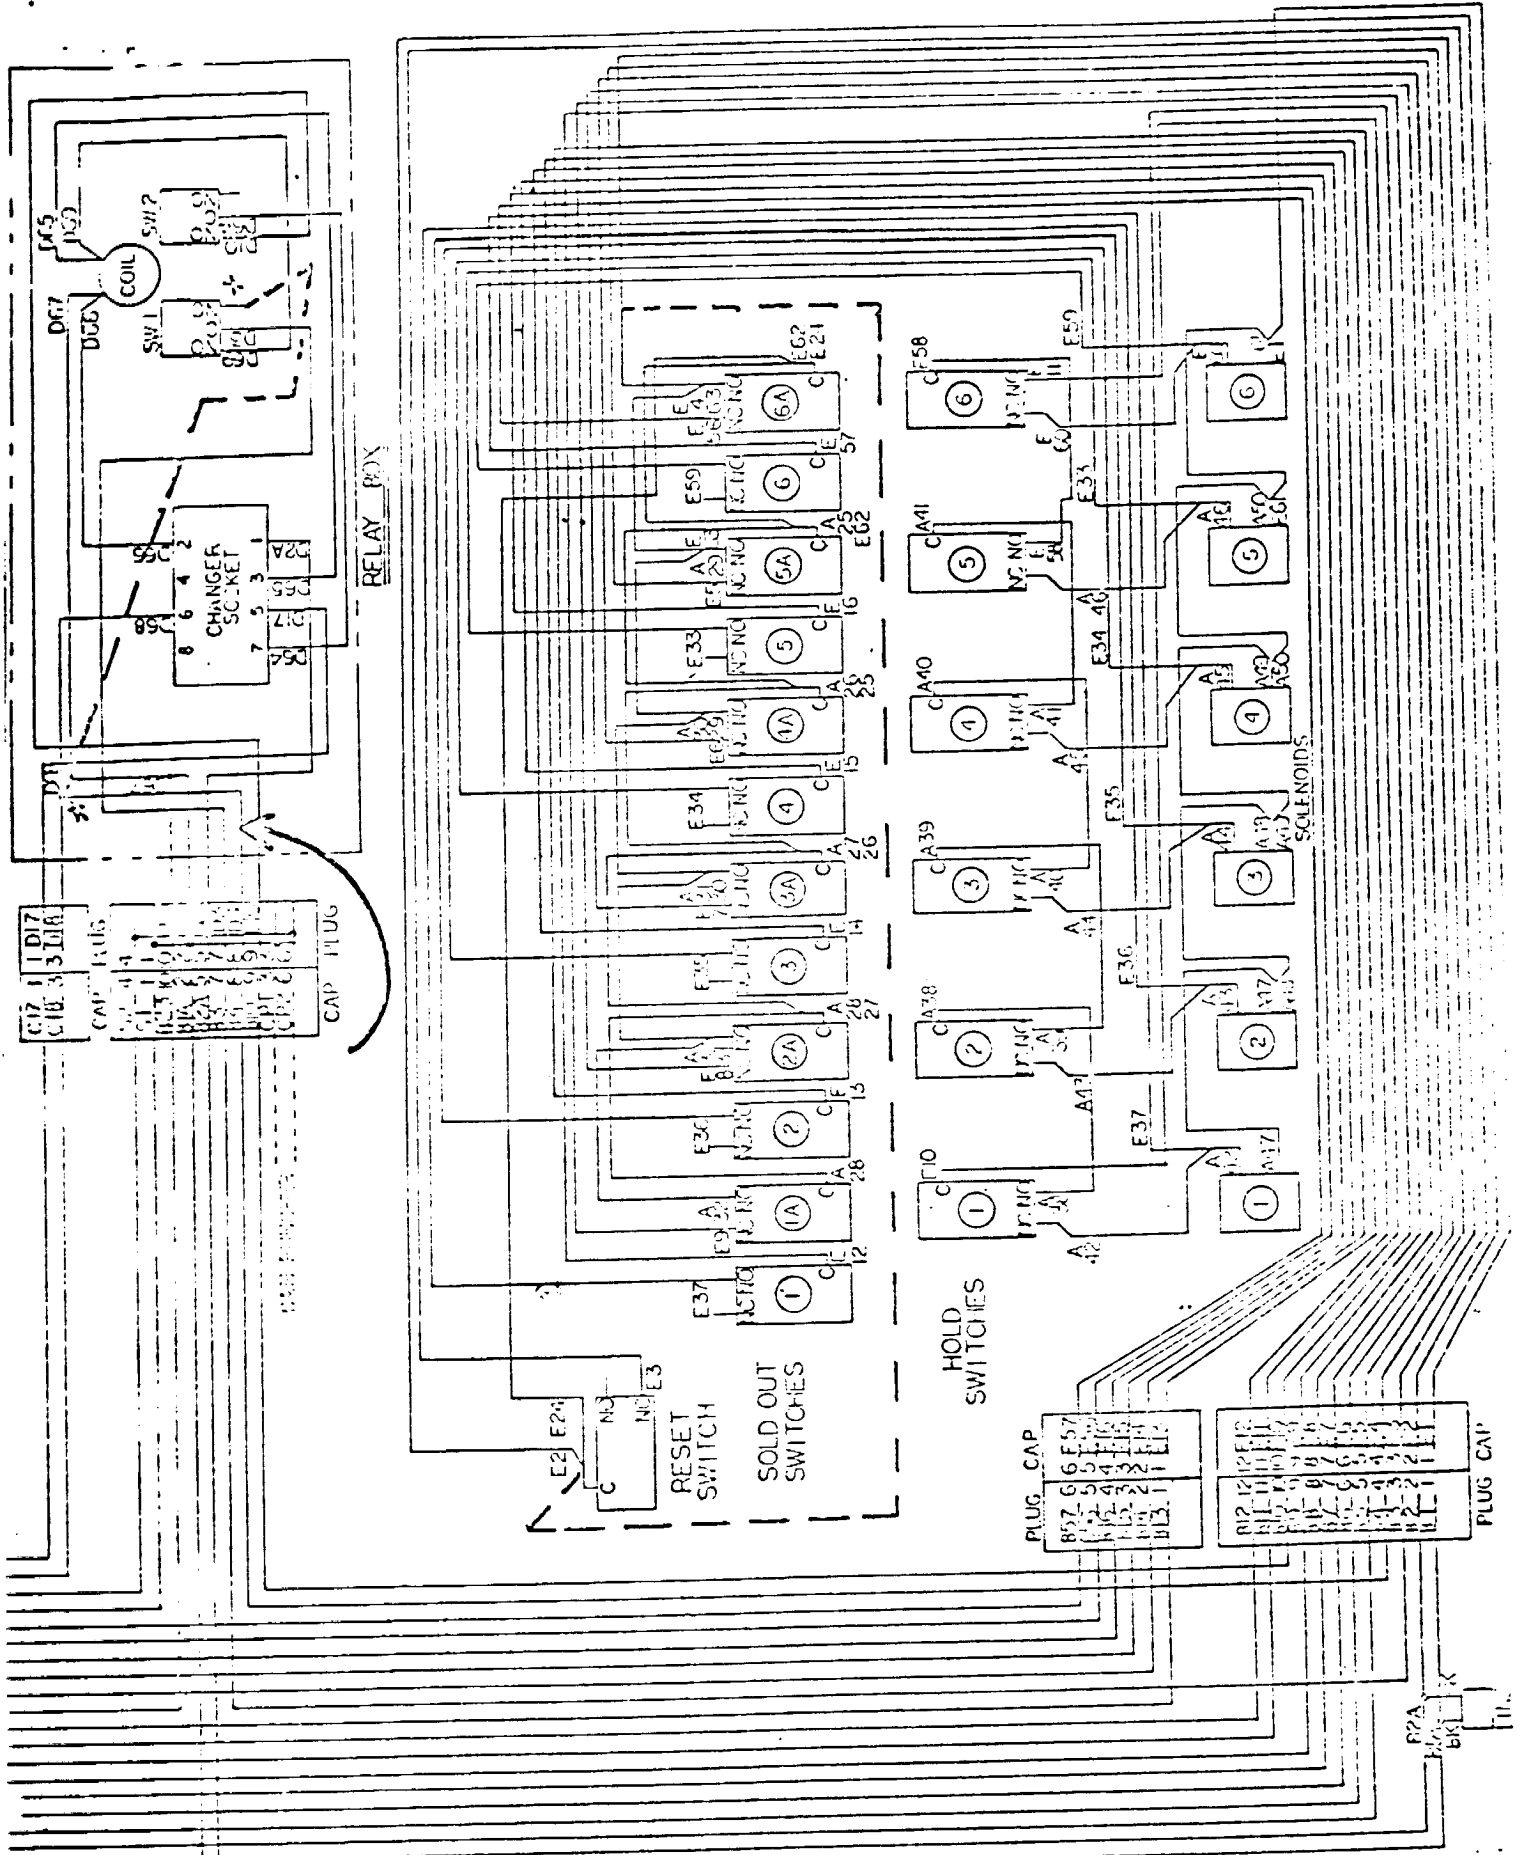

Wiring Diagram
Serpentine Model DX554-6

U003, 804, 660.11 1970X
U003, 804, 660.01-A 1989X