DIXIE-NARCO, INC. SERVICE BULLETIN #106

January 30, 1970 Supercedes Service Bulletin #99

MODEL NUMBERS: Brookwood III and Brookwood IV

SUBJECT: Drain Tray Kit

REASON: To provide a means for simple installation and removal of the drain tray for purposes of cleaning.

KIT NUMBER: 94,011,800.04

To convert Brookwood with <u>Metal Drain Tray</u> or Brookwood with <u>Plastic</u>

<u>Drain Tray</u> but without the "Lift Out" removable feature the following parts


are provided:

1	A94,030,310.03	Support Tray, Left Hand
1	1 94,030,320.03	Support Tray, Right Hand
	900,700,270.01	#10 Shakeproof Washer
	900,300,370.01	Sheet Metal Screw #8 x 1/2 - Type B
1	D94,030,250.33	Drip Tray
1	B94,030,160.33	Cup Grid
1	AS 1090.06	Installation Instructions (see back side of this sneet).


NOTE: Lock strip is no longer needed, discard it.

= NEW DRIP TRAY AND SUPPORTS =

DRILL TWO 1/8" HOLES IN EACH SIDE OF BOTTOM AS SHOWN BELOW: (FULL SIZE)

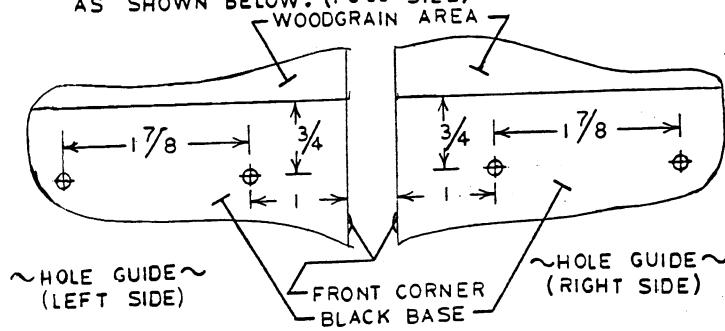

2) MOUNT TRAY SUPPORTS WITH SCREWS AND WASHERS PROVIDED AS SHOWN BELOW:

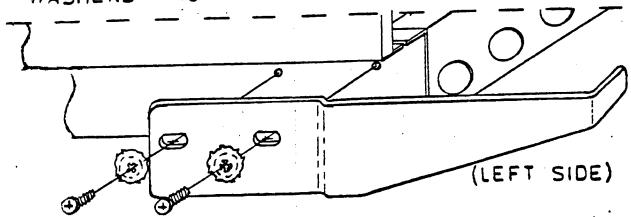

- 3) ATTACH DRAIN TUBE TO NEW DRIP TRAY
- 4) INSERT DRIP TRAY ON SUPPORTS
- 5) INSERT CUP GRID IN DRAIN TRAY
- 6) IT MAY BE NECESSARY TO ENLARGE HOLE IN CABNET BASE TO FREELY ACCEPT DRAIN - TUBE