


Technical Bulletin

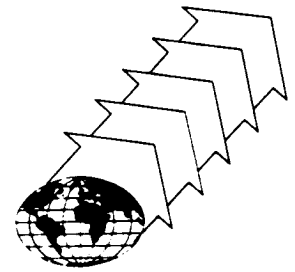

TOMORROW'S
MANUFACTURING
LEADERSHIP
TODAY

Bulletin Number: 142 Revision Number: R-02


Release Date: June 19, 1972 Revision Date: Sept. 26, 1994

SUBJECT: **INSTALLATION OF JUMPER WIRE ASSEMBLY**
PART NUMBER B172,010,200.03

MODELS: DN100-5 - Serial Number 1668100 and under require "Jumper" when installing replacement Vend Motor Sub-Assembly.

DN145-5 - Serial Number 1669100 and under require "Jumper" when installing replacement Vend Motor Sub-Assembly.

REASON: To provide a "Jumper" for (a replacement) Vend Motor Sub-Assembly with the "bottom mounted" hold switch since on the models serialized as above, the existing wiring harness is too short.

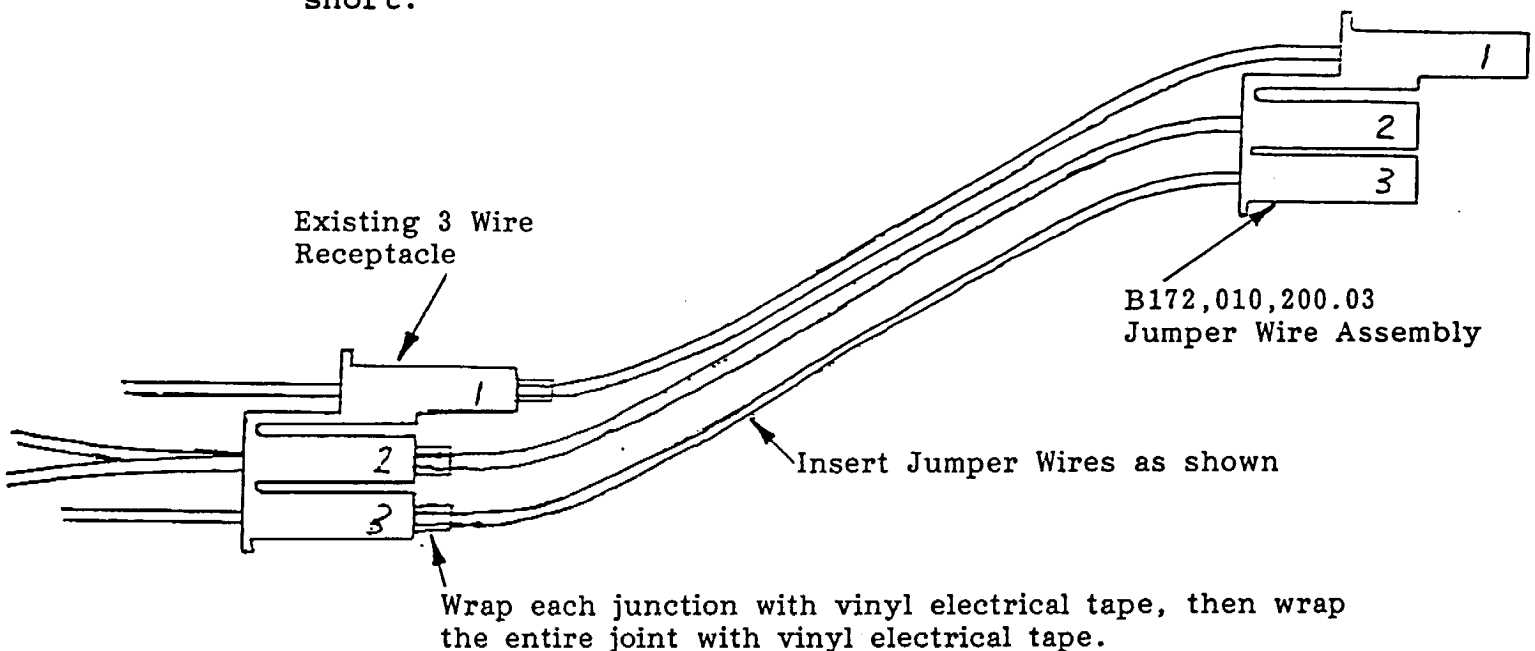

Do This: After the Motor Assembly has been changed, attach the Jumper Wire Assembly to the existing three wire receptacle (as shown), wrapping each connection with Vinyl Electrical Tape (Dixie Narco Part Number 902,302,900.01) then wrap the entire joint with vinyl electrical tape.

Kit Consists Of:

- | | |
|---------------------|--------------------------------|
| 1 - B172,010,200.03 | Jumper For Motor Hold Switch |
| 1 - 902,302,900.01 | Black Electrical Tape (60 ft.) |

For Reference Only: B/M 172,010.300.04

Page 1 of 1