

Technical Bulletin

Bulletin Number: 346 Revision Number: R-05

Release Date: February 2, 1988 Revision Date: January 17, 2000

SUBJECT: CASH BOX LOCK KITS

MODELS: All Dr Pepper D3 models, All 7UP B7 models, Redesigned Magnum Circular

BEGINNING SERIAL NUMBER: 0001-3007DL Dr. Pepper D3
0001-3028AM 7UP B7
0001-3101AN and higher except 3102 - Magnum Circular

ORDER: 432,011,50x.x4 Lock Kit - Cash Box

KIT CONTENTS:

1	801,501,94x.x1 Lock & Keys
1	801,502,04x.x1 Cam
2	901,100,61x.x1 Pop Rivet, Steel 1/8 "
1	432,010,29x.x3 Coin Deflector
1	900,800,88x.x1 Nut, Lock Barrel
1	900,700,83x.x1 Washer, Flat 18 GA
1	900,801,17x.x1 Nut, Cam

To install:

1. Insert the lock in the hole provided in the cash box.
2. Thread the lock nut onto the barrel and tighten it.
3. Install the cam on the end of the barrel and secure it with a screw.
4. Locate the two prepunched holes to the right of the lock hole.
5. Place the coin deflector inside the cash box (joggle up), align the holes in the two parts and secure with the rivets provided. (The deflector will only fit one way.)

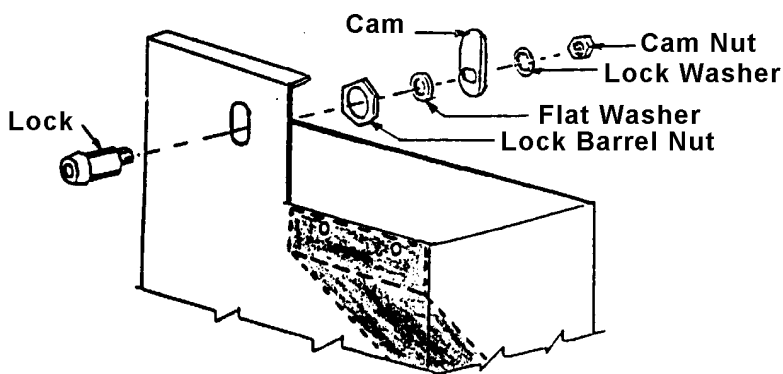


Figure 1

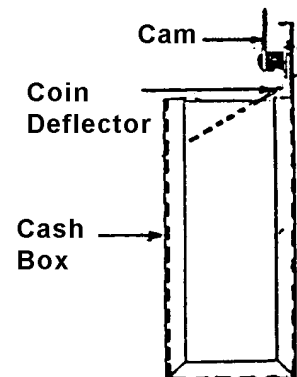


Figure 2