

Technical Bulletin

Bulletin Number: 496 Revision Number: _____

Release Date: January 2, 1996 Revision Date: _____

SUBJECT: COIN INSERT DECAL COVER FOR COKE VRV

MODELS AFFECTED: All Coke VRV models.

SERIAL BREAK: All Coke VRV models serialized xxxx-6119AR and higher.

REASON: To provide a barrier to prevent vandals from peeling the coin insert decal.

- ORDER:**
- | | |
|--------------------|---------------------------|
| 1 - 570,050,020.03 | Coke VRV Decal Cover |
| 5 - 900,201,560.01 | Carriage Bolt, 1/4-20x3/4 |
| 5 - 900,800,670.01 | Keps Nut, 1/4-20 |
- or
- | | |
|--------------------|--|
| 1 - 570,050,030.03 | Coke VRV Decal Cover (used when lock cover is installed) |
| 5 - 900,201,560.01 | Carriage Bolt 1/4-20x3/4 |
| 5 - 900,800,670.01 | Keps Nut, 1/4-20 |

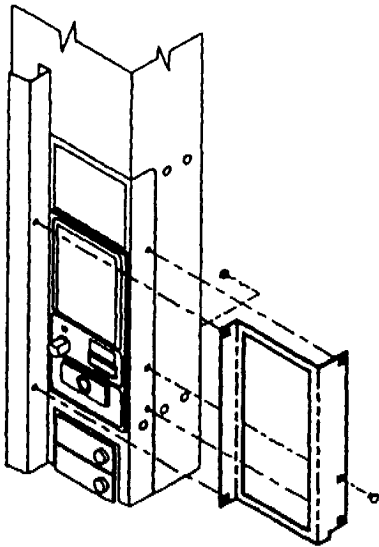


Figure 1

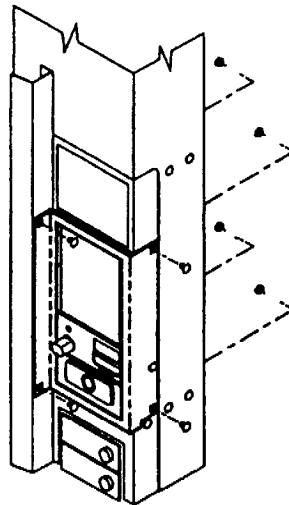


Figure 2

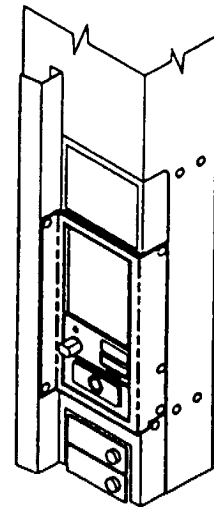


Figure 3

INSTALLATION INSTRUCTIONS:

1. Unplug the vender.
2. Remove the existing carriage bolt on the side of the door as shown in figure 1, page 1.
3. Use the carriage bolt to align the frame on the door as shown in figure 2, page 1.
4. Using the decal frame as a template, mark the holes to be drilled.
5. Remove the decal frame from the coin insert.
6. Drill five 5/16" diameter holes.

Caution: Be careful not to damage in any wiring, parts, or accessories while drilling.
Take all necessary precautions to prevent metal filings from falling on electrical components.

7. Place the decal frame in position. See figures 1 and 2 on page 1.
8. Secure the decal frame with carriage bolts and nuts.
9. Plug in the vender and test for proper operation.