

Technical Bulletin

Bulletin Number: 501 Revision Number: R-02

Release Date: September 1, 1997 Revision Date: November 4, 1997

SUBJECT: REAR CONDENSATION PLATE

MODELS AFFECTED: E-Models and DMV's

SERIAL BREAK: E-Models serialized 0001-6428CV and higher (Kydex)
E-Models serialized 0001-6368DU to 0001-6428CV (Metal)
DMV's with Rear Condensation Plate prior to 0001-6428CV (Metal)
DN-700CV Confectionary Venders 0001-7500CV to 0001-7502CV (Metal)

REASON: To provide serial breaks on the installation of the Kydex Rear Condensation Plate and instructions on the installation of edge guard on the metal Rear Condensation Plates.

801,903,520.01 Kydex, Rear Condensation Plate

For Venders with Metal Rear Condensation Plate Order:

2 - 801,810,330.01 Trim, Rear Condensation Plate (for metal Rear Condensation Plates)

To Install:

1. Loosen the four screws that secure the metal Rear Condensation Plate to the back of the vender.
2. Carefully snap the trim over the two vertical edges of the metal condensation plate. See figure 1 below.
3. Tighten the four screws loosened in step 1.

Important: *Installing the trim as instructed will secure the trim between the plate and the frame of the vender.*

To remove power cord from the back of the vender.

1. Pull the vender away from the wall.
2. Locate the power cord in the lower right side of the vender.
3. Pull the power cord out of the vender and plug in the electrical outlet.
4. Carefully place the vender 4" (10 cm) from the wall.

Caution: *Do not damage power cord while moving vender.*

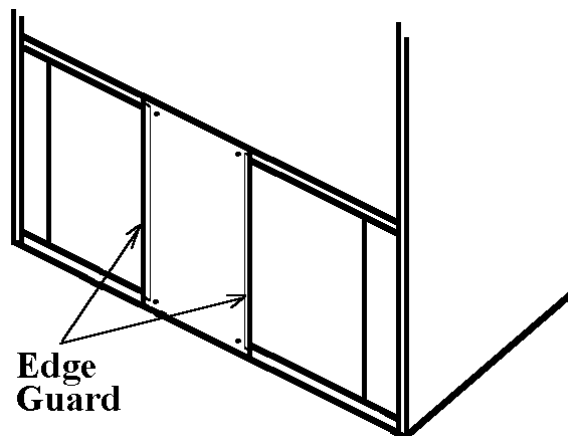


Figure 1