

KIT PART NUMBER 3154082

INSTRUCTIONS FOR INSTALLING A REPLACEMENT AGITATOR KIT IN A COLDTRON

**CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST  
IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING,  
CONTACT NATIONAL VENDORS' PARTS DEPARTMENT IMMEDIATELY.**

Read these instructions carefully before installing the kit.  
Retain these instructions for part numbers and for future reference.

This kit contains the following:

PART NUMBER	DESCRIPTION	QUANTITY
3154077	Agitator - Upper	1
3154079	Agitator - Lower	1
3154078	Hub - Agitator	1
3154083	Instructions - Installation	1

REPLACING THE ICEMAKER AGITATOR

Refer to Figure 1 while performing the following procedure.

1. Remove the top cover of the icemaker.
2. Operate the icemaker to remove ice from the hopper.
3. Turn off power to the icemaker.
4. Remove the existing agitator and hub from the auger shaft in the icemaker.
5. Assemble the new agitator assembly in the following order:
  - a. Place the lower agitator on the new hub.
  - b. Take one (1) agitator arm from the old agitator assembly and place on the new hub at right angle to the lower agitator.
  - c. Place the upper agitator on the new hub at right angle to the lower agitator. Secure the agitator arms to the hub using the existing screw and washer.

6. Install the new agitator and hub assembly in the icemaker hopper.

**NOTE**

When installing the new agitator assembly in the hopper, check to be sure the agitator arms do not contact the bolt heads or the hopper baffle assembly.

7. Clearance between the agitator arms and the bolt heads, hopper baffle assembly and drip ring should be 1/8inch - 1/4inch. Slight forming of the agitator arms may be necessary. View the agitator arms thru the door in the hopper assembly to check clearance.

8. Place top cover on the icemaker and secure.

9. Restore power to the icemaker.

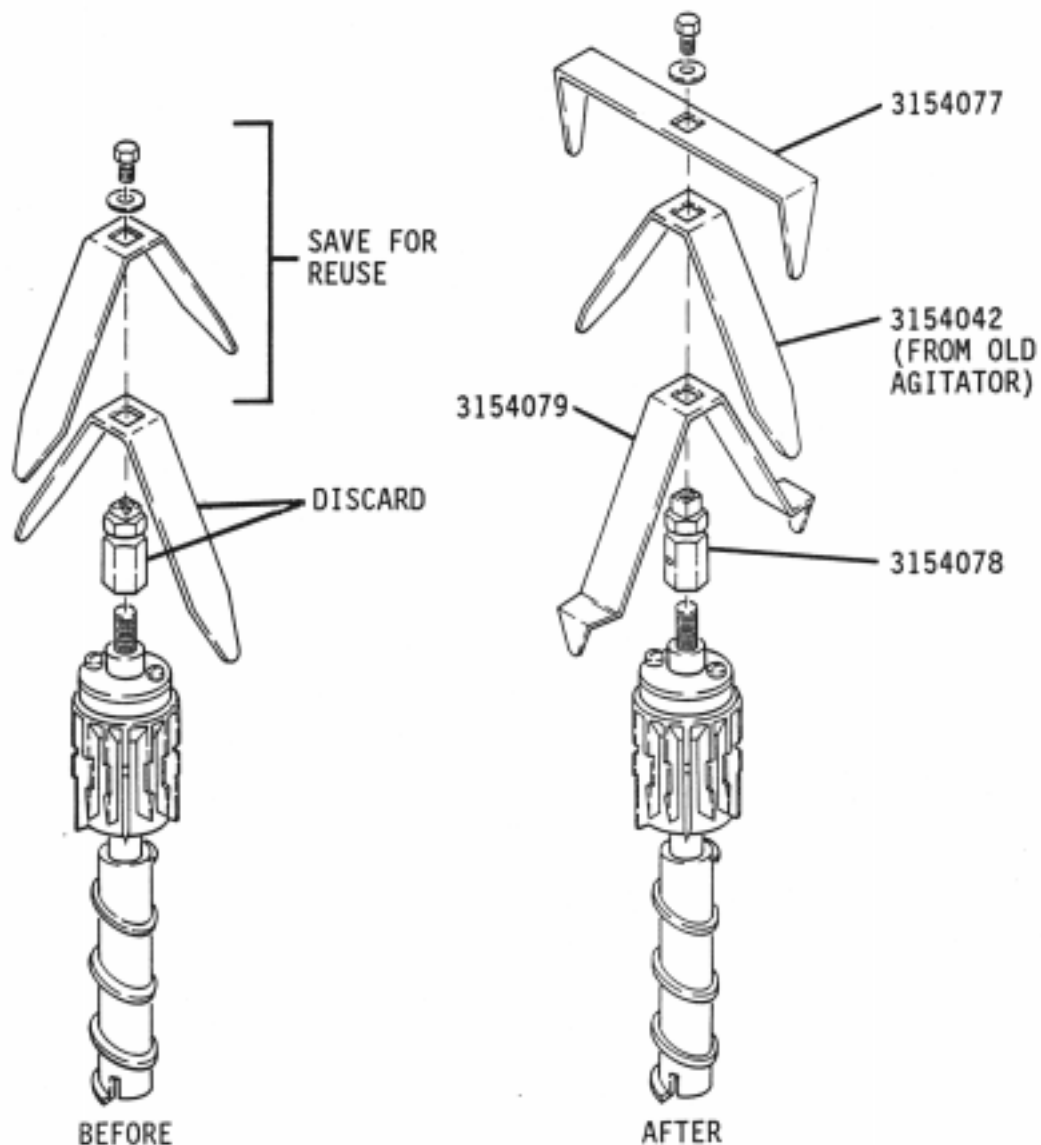


Figure 1.