



## CAFE' SYSTEM 7 BASE CABINET LIQUID DRAIN SYSTEM SETUP INSTRUCTIONS

With this option, your Cafe' System 7 can be configured to drain continuously from the liquid drain tray. This insures long hours of vending without filling the drain tray, thus preventing the machine from going out of service until the tray is manually emptied. This option also eliminates the possibility of spilling fluid from the tray as it is carried to a sink or drain to be emptied.

This kit contains the following:			
INDEX	PART NUMBER	DESCRIPTION	QUANTITY
1	6401010	LIQUID DRAIN TRAY - THRU HOLE	1
6	6401855	TUBING - 3/8" SILICONE x 72"	1

Proceed as follows (see figure 1):

1. Remove the liquid drain tray (3) from the Cafe' System 7.
2. Remove the metal grate (2) from the tray.
3. Place the grate (2) into the new liquid drain tray with the thru-hole spout (1).
4. Install the new liquid drain tray (1) and grate (2) into the Cafe' System 7, and place the float/chain assembly (8) into the liquid drain tray.
5. Push the drain tubing (6) onto the drain spout of the new liquid drain tray (1).

### NOTE

The base cabinet shelf (4) must be located in the recommended mounting holes (4th set of holes from the top).

6. Route the drain tubing between the base cabinet shelf (4) and the left side wall of the base cabinet, directly behind the front channel (5), as shown. Be sure there are no "traps" in the tubing.
7. Remove the hole plug (7) from the lower left rear corner of the base cabinet. Route the tubing through this hole to a floor drain. Provide a downward pitch line per local code with an air gap of at least 2" above the floor drain.

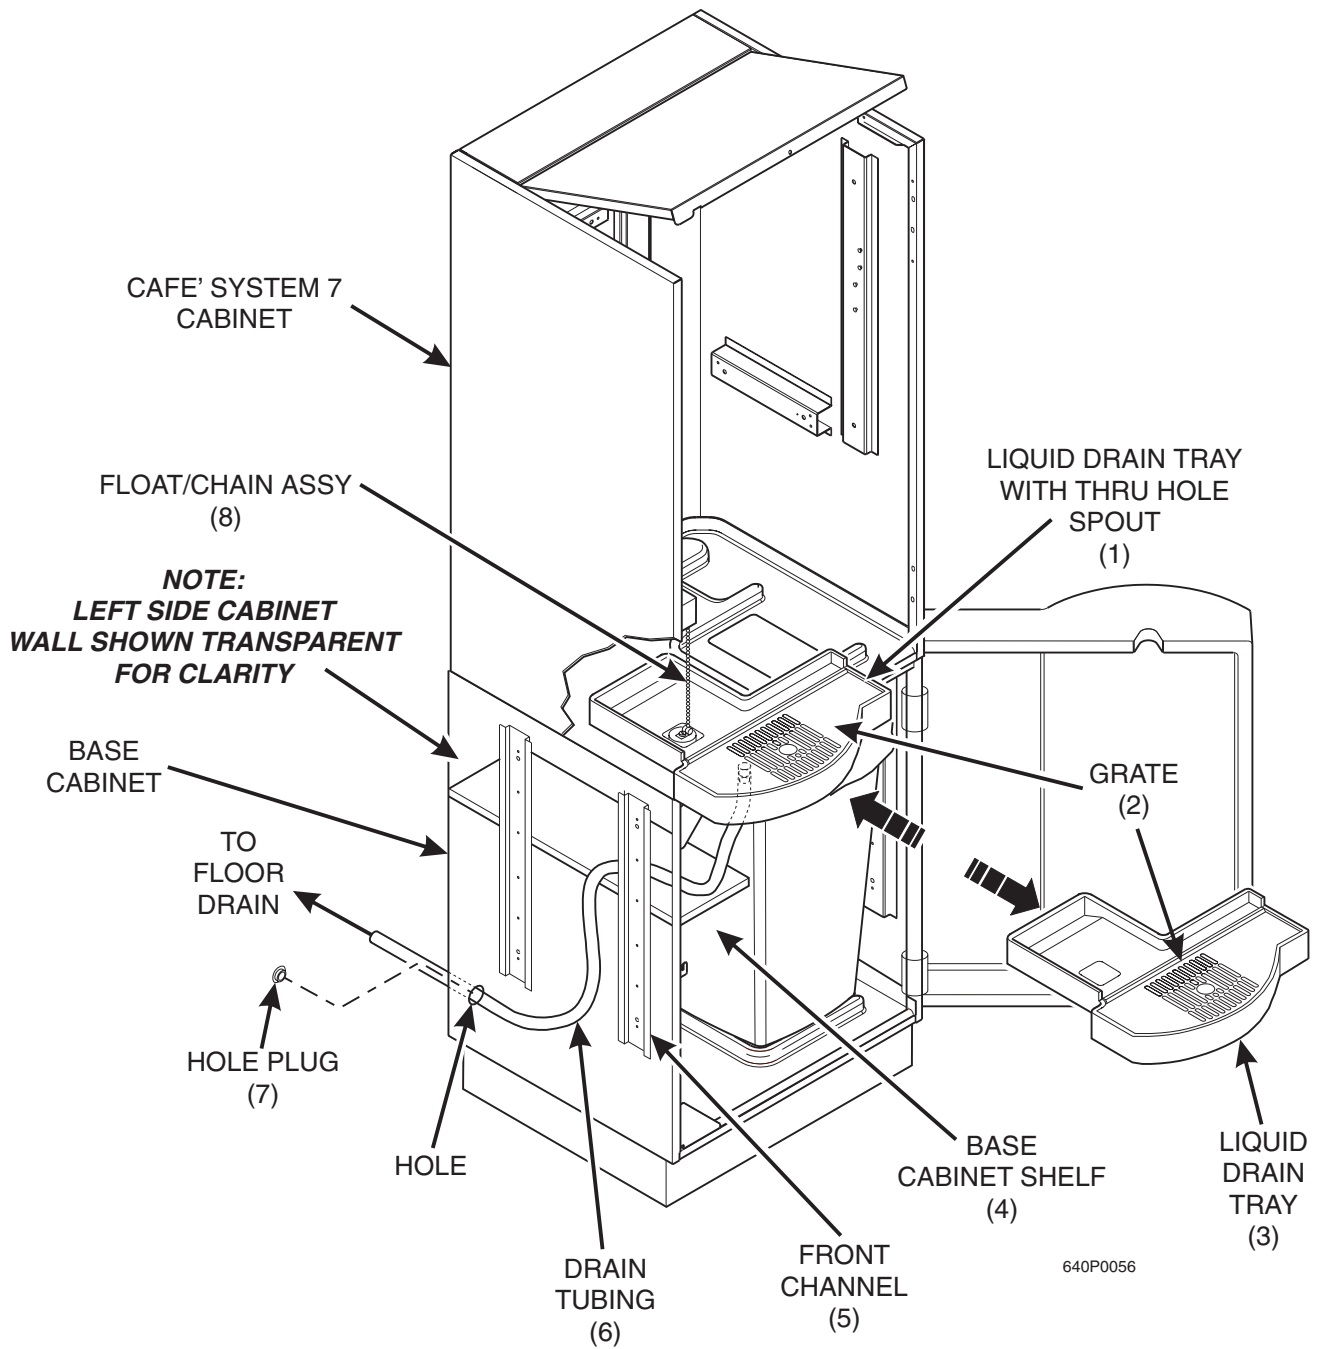


Figure 1