



3330 Dixie-Narco Blvd.  
Williston, SC 29853  
www.dixienarco.com

## M088.0

### Snap-On Ferrite for BevMax 2 and BevMax 3 Venders

12/7/07

**Models Affected:** All BevMax 2 and BevMax 3 Venders manufactured between 8611-0001 to 8637-0001 .

**Reason:** To provide instructions for installing a Ferrite on the Display Harness to improve communication between the Display and Control Board.

**Order:** 804,801,23x.x1

**Introductions:** Read entire instructions before beginning installation. If you have any questions, contact the Dixie Narco Customer Support Center before proceeding.

1. Open the Service Door.
2. Toggle Main Power Switch on the AC Distribution Box to the OFF Position.
3. Locate the Display Board on the Service Door. If the machine has a Bill Validator installed, the Display will be located directly behind the Bill Validator.
4. Locate the Display Harness.
5. Inspect the Display Harness near the Display to confirm there currently is no ferrite installed.
6. Follow the Display Harness towards the hinge side of the Service Door.
7. Open the latch on the side of the Ferrite (See Figure 1). Place the Display Harness in the groove of the Ferrite approximately 4" from the Display Connection (See Figure 2).

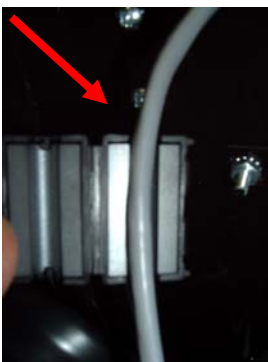


Figure 1

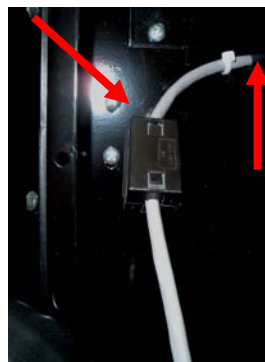


Figure 2 (Without Bill Validator installed)

8. Snap Ferrite closed and ensure the latch locks the Ferrite in position.
9. Figures 2 and 3 show the final Ferrite placement with and without a Bill Validator installed.



Figure 3  
With Bill Validator installed

10. Close Service Door, toggle Main Power Switch to the on position, and test vender for proper operation.