

3330 Dixie-Narco Blvd.
 Williston, SC 29853
 www.dixienarco.com

M115.0
DN5800-4/3800-4 BevMax 4
HEARTLAND CARD READER INSTALLATION
with MILLED BEZELS

09/28/10



Models Affected: All DN5800/3800 (BevMax 4) Model Venders

Instructions on installing a Heartland Card Reader in DN5800-4/3800-4 (BevMax 4) machines.

BM4 Card Reader Kit: Part No. 65700420

Contents

Part No.	Description	Quantity
CR0005881	Assy. Pem stud card reader bracket	1
800,304,21x.x1	Screw, 8-32x1/2	4
800,801,54x.x1	Hex nut, 8-32	4
M115.x	Installation Instructions	1

*Installation also requires a milled top bezel not included with kit. Order as required:

Top Coke Bezel ass'y. milled - CR0005574 and Decal 803,887,87x.x1

Top Dasani Bezel ass'y. milled with decal - CR0005575

Top Gray Bezel ass'y. milled - CR0005760

Note: Because of the rounded nature of the bezel, the milled bezels help set the reader nose piece out farther to allow card swipe access.

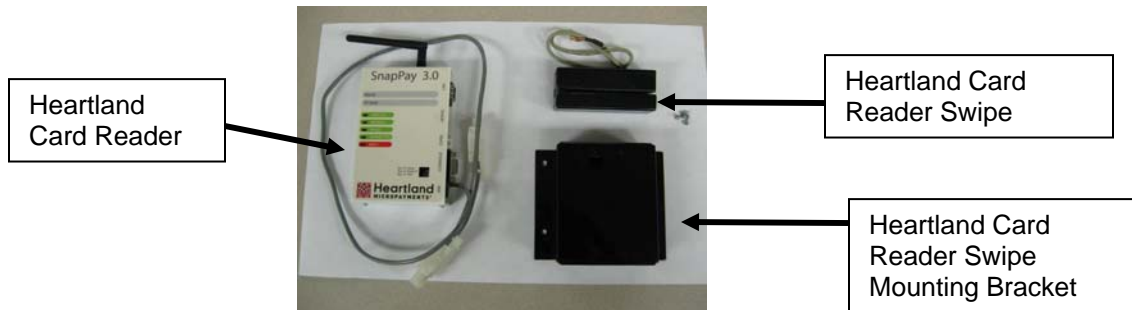




Figure 1

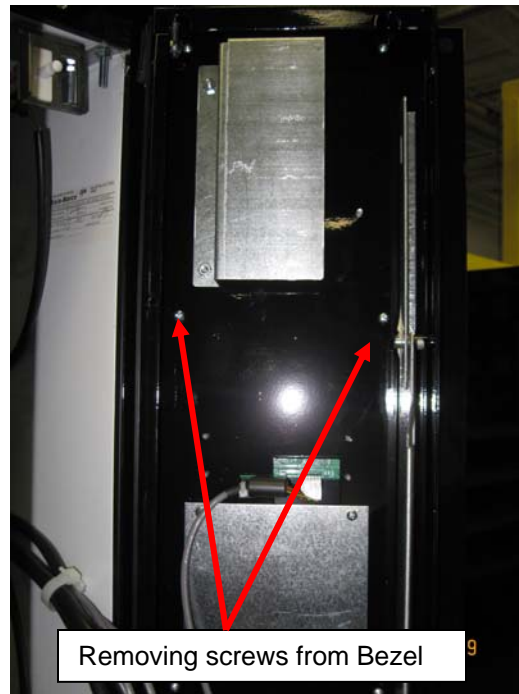


Figure 2

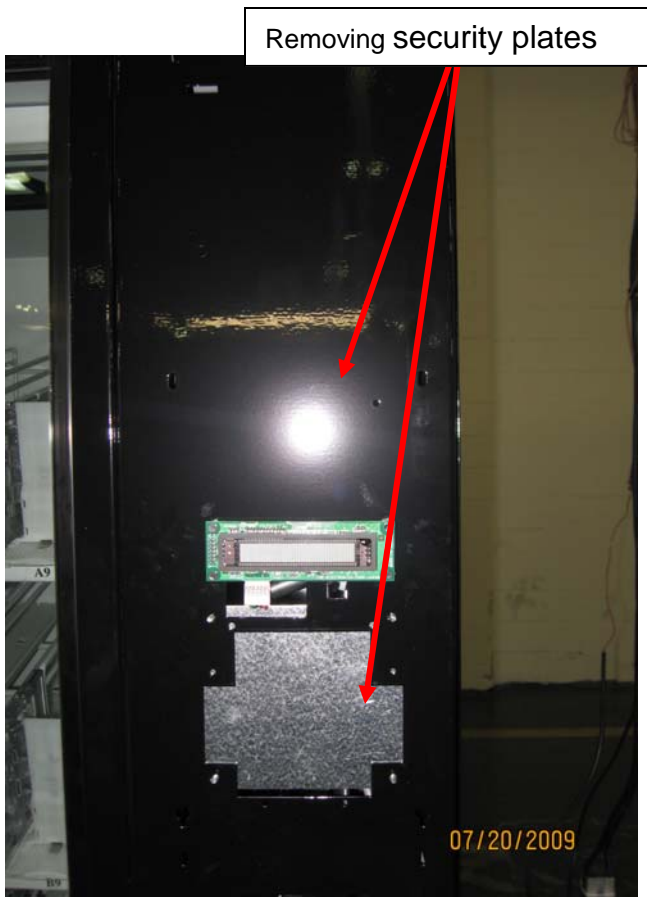


Figure 3



Install the Card Reader
Swipe to the Card Reader
Swipe Mounting Bracket.

Figure 4



Secure using 8-32 x
1/2 screws

Figure 5



Secure the 8-32
screws with the four
8-32 Hex Nuts

Figure 6

Installation Instructions Heartland Card Reader Mounting:

1. Toggle the on/off switch to the off position or unplug the main power cord to the vender.
2. Remove the existing Top Bezel by removing the six screws on the inside of the service door. **See Figure 1 & 2.**
3. Remove the door display security plate. **See Figure 3.**
4. Install the Card Reader Swipe to the Heartland Card Reader Bracket Assembly with four of the 8-32 Hex Nuts included in the kit. **See Figure 4.**
5. Place the Card Reader and Bracket Assembly in position on the out side of the Service Door and secure using the four 8-32 x 1/2 screws. On the inside of the service door secure the 8-32 screws with the four 8-32 Hex Nuts Included in the kit. **See Figure 5 & 6.**
6. Install the Milled Top Bezel in position and secure with the six screws removed in step 1.
7. Other Card Reader components are to be mounted inside the service area as far away from the controller as possible. The Card Reader Manufacturer should provide the needed brackets or Velcro strips and mounting instructions.
8. **IMPORTANT: DO NOT ROUTE OR TIE THE CARD READER HARNESSING TO THE VENDER HARNESSING.**
9. If a Validator is being used, the 2 Validator Spacers are to be used if needed to space the Validator Stacker back out of the way of the back of the card reader and its harnessing.
10. Check to ensure all wiring is plugged in to proper locations. Check for any damaged wiring.
11. Plug in vender.
12. Test vender for proper operation.