

Technical Bulletin

Bulletin Number: 202 Revision Number: R-01


Release Date: August 1, 1977 Revision Date: August 31, 1977

NOTE: ATTACH SERVICE BULLETIN 201 TO THIS BULLETIN.

MODELS: Adaptable – 6 Select – Vend Relay Page 1 Only
Adaptable – (Red Cam) 5 Select and 6 Select – Vend Relay Page 2 Only


SUBJECT: To setup above models for Free Vend when desired.

CAUTION: "Unplug" the vender from wall receptacle.

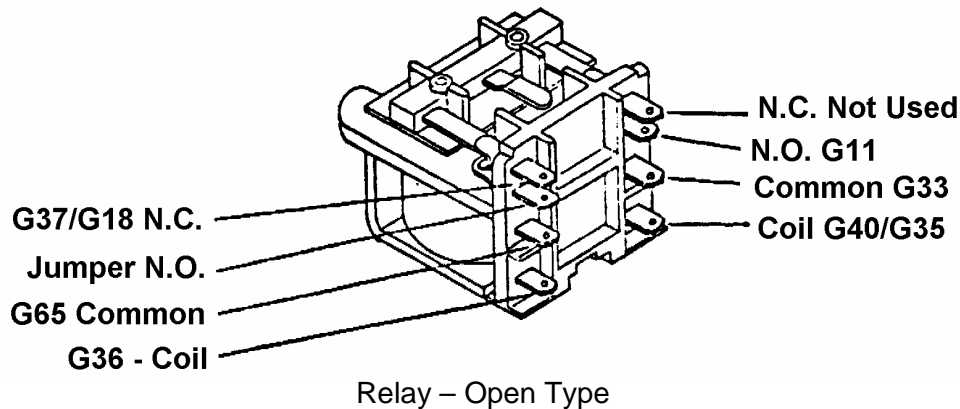

DO THIS:

- A. Unplug the coin changer – leave it unplugged.
- B. Locate switch #1.
- C. Remove lead G37/G18 from N.C. terminal.
- D. Leave it off - - electrical tape its end.
- E. Locate switch #2.
- F. Remove lead G 11 from N.O. terminal.
- G. Attach lead G 11 to N.C. terminal, switch #1.

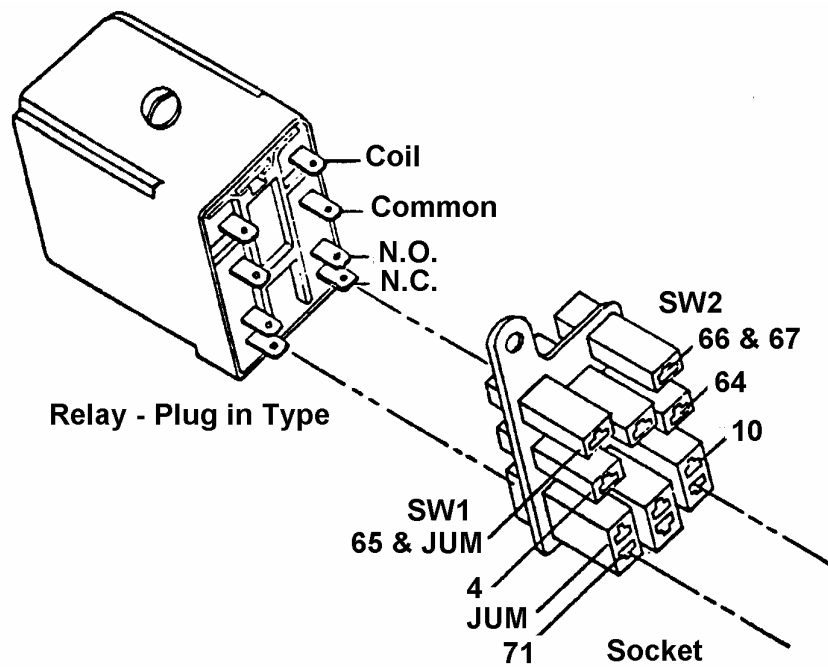

DO THIS:

- A. Unplug the coin changer – leave it unplugged.
- B. Locate switch #1.
- C. Remove terminal lead 71 from N.C. socket.
- D. Leave it off - - electrical tape its end.
- E. Locate switch #2.
- *F. Remove terminal lead 10 from N.O. socket.
- *G. Insert terminal lead 10 in N.C. socket, switch #1.

Note: See Service Bulletin 201, dated July 27, 1977 relative to removal of terminal leads from socket.

* Reference

- F. Changing lead 64 to lead 10.
- G. Changing lead 64 to lead 10.