



P.O. Drawer 719  
 Williston, SC 29853  
 www.dixienarco.com

## S030.0

### 8.4 oz / 8.3 oz Can

#### Shimming Instructions for Narrow Column E-Models

**Height:** 5.29" (134mm)  
**Width:** 2.08" (53mm)

**Models Affected:** Series 90 276E, 501E, and 600E E-Model Venders (Narrow Column)

**Reason:** To supply set-up information to vend the 8.3 oz Sobe / Amp Can in Series 90 E-model venders.


**Parts required per vender:** 610,012,40x.x4 Kit, 8.3oz/8.4oz Can 276E/501E  
 610,012,50x.x4 Kit, 8.3oz/8.4oz Can 600E

600E Kit Contents	276E/501E Kit Content	Part #	Description
1	1	610,070,05x.x3	Shim Angle
1	1	609,070,62x.x3	Can Stop Extended Wide Lip Shim
0	1	609,010,10x.x3	Column Wall Assy. (276E/501E)
1	0	610,011,50x.x3	Column Wall Assy. (600E)
1	1	609,070,63x.x3	Filler Shim
2	2	801,903,24x.x1	White Tube
2	2	800,503,00x.x1	Rod and Spring Assy.
1	1	432,070,17x.x3	Narrow Column Sold Out Paddle

#### VENDER SET-UP FOR NARROW COLUMNS:


1. Unplug the vender.
  2. Install shim angle (610,070,05x.x3) on top of can stop extended wide lip shim (609,070,62x.x3). (See figure 1, page 2.)
  3. Install can stop extended wide lip shim with shim angle on right side of column wall. (See figure 2, page 2.)
  4. Install column wall assy. (609,010,10x.x3) on right side of column wall. (See figure 3, page 2.)  
 Note: Rear spacer must be removed.
  5. Install filler shim (609,070,63x.x3) on left side of narrow column. (See figure 4, page 2.)
  6. Reinstall rear spacer and adjust in hole #17.
  7. Insert white tubes (801,903,24x.x1) on rod & spring assy. (800,503,00x.x1). (See figure 5, page 2.)
  8. Place one rod with white tube in hole "A" of rotor.
  9. Place one rod with white tube in hole "C" of rotor.
  10. Install narrow column sold-out paddle (432,070,17x.x3). (See figure 6, page 2.)
  11. Set brown cam in hole #1.
  12. Set rear spacer in hole #17.
- Note: Cans will vend triple depth.

Vender Capacities			
	276E	501E	600E
Wide Column	0	0	0
Narrow Column	57	57	69
Total Capacity	399	456	552

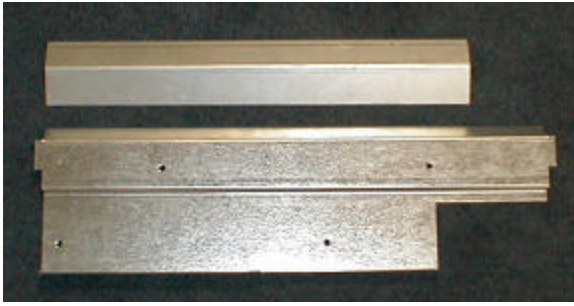

**Figure 1**  
 Shim Angle  
 Can Stop Extended Wide Lip Shim

610,070,05x.x3  
 609,070,62x.x3

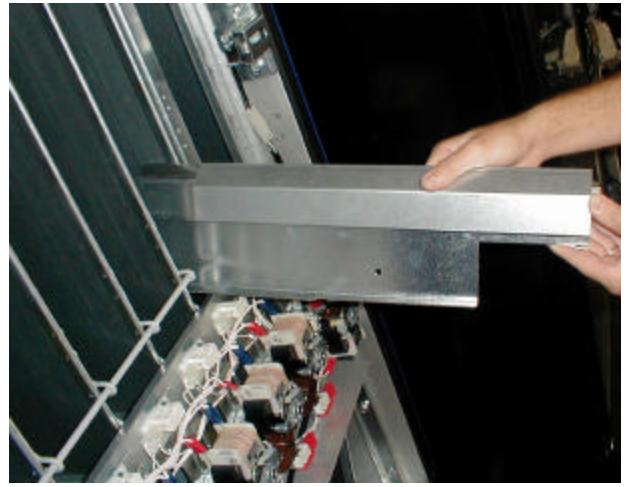


**Figure 2**  
 Can Shim Installation



**Figure 3**  
 Column Wall Assembly

609,010,10x.x3

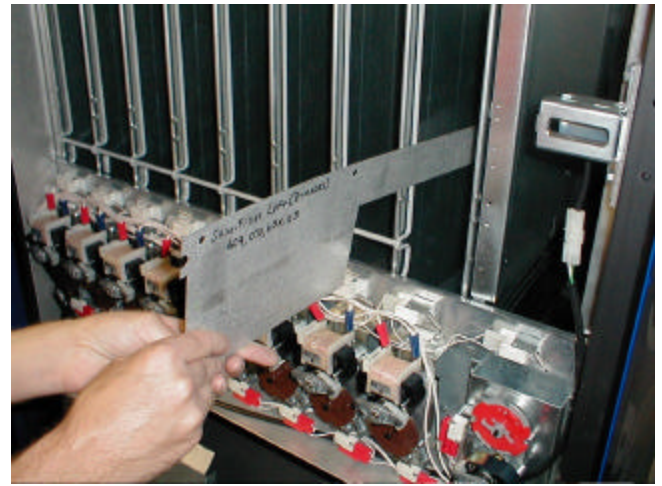

**Figure 4**  
 Filler Shim

609,070,63x.x3



**Figure 5**  
 Rod & Spring Assembly  
 White Tube

800,503,00x.x1  
 801,903,24x.x1



**Figure 6**  
 Narrow Column Sold-Out Paddle

1 - 432,070,17x.x3