

Dixie-Narco®



Lawrence Street
Ranson, West Virginia 25438

(304) 725-3481
(800) 624-0553

Service Bulletin # 306

Date: July 28, 1986
Revised: June 14, 1989

MODELS: DNCB Adaptable- All Standard Wide Columns - 1 1/4" Deeper
DNCB Dual Adaptables - Wide and Narrow Columns - 1 1/4" Deeper

SUBJECT: Motts Shimming Information - 10 oz. Rimmed Can & 10 oz. Rimless Can.

SETTING WIDE COLUMN: These venders are shipped to vend the Motts 10 oz. Rimless can and are shimmed as indicated, i.e., a, b, and c.

- a. Two flat black shims each side = 4 Black each wide
Two gray shims each side = 4 Gray column
- b. One rear spacer for each wide column.
- c. Rear spacer is located in hole #19.

- SETTING NARROW COLUMN:
- a. One left formed shim Left side each narrow column
(For rimmed or rimless cans)
 - b. Two right hand flat shims Right side narrow column
(For rimless cans only)
 - c. One rod assembly In vend rotor in B hole position
(Use Part #267,012,300.03) each narrow column.
 - d. Rear space is located in hole #19.

- TO SET FOR RIMMED CANS - WIDE COLUMN:
- a. Remove one (1) Gray shim from each side of wide columns.
 - b. Make sure that the Gray shim is facing the inside of the column.


- TO SET FOR RIMMED CANS - NARROW COLUMN:
- a. Remove the two right hand flat shims from the narrow column.

- BEGINNING SERIAL NUMBER: ----2980
- b. Replace rod-267,012,300.03 with rod-267,012,200.03

PART NUMBERS: 801,804,960.01 Flat Black Shim Wide Column
801,805,120.01 Flat Gray Shim

267,010,150.13 Left Formed shim - Rim or Rimless
901,303,630.11 Right hand flat shim - Rimless Only Narrow Column
267,012,300.03 Rod Assembly - Rimless Can
267,012,200.03 Rod Assembly - Rimmed Can

REAR SPACER ADJUSTMENT HOLES

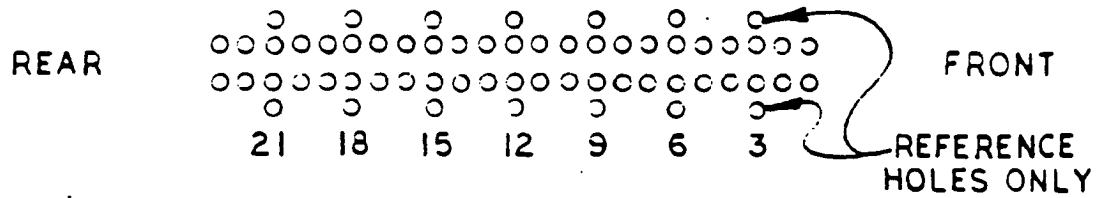

NOTE: Views shown are for reference only. See page 1 for type and quantity of shims.

