INSTRUCTIONS FOR INSTALLING A BASE SUPPORT KIT, P/N 1461029, IN A NATIONAL VENDORS® SNACKTRON 2TM MERCHANDISER

This kit contains the following:

Part Mumber.	Description	Quantity	INSTALLATION
1461028	Installation Instructions	1	Remove the trays from the Merchan- diser and place the cabinet on its back. Remove all four leg assemblies and install the Base Support Plates as
1172 021	1/4-20 Whiz Lock Nut	4	
1461 026	Base Support Plate	4	
1461027	.250-20 x 2.25 Hex Head Bolt	4	shown in Figure 1.
4242 145	Lower Hinge Thrust Bearing	4	If added support is required, drill holes through the cabinet base and add
613 1066	5/8 0.D. x 2.65 I.D. x .048 Washer	•	a bolt, washer, and nut as shown in Figure 2.

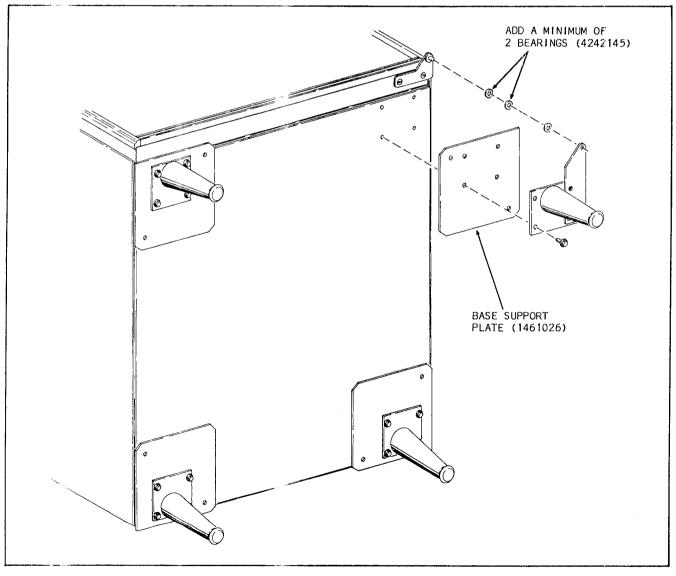


FIGURE 1

X2 X3 X

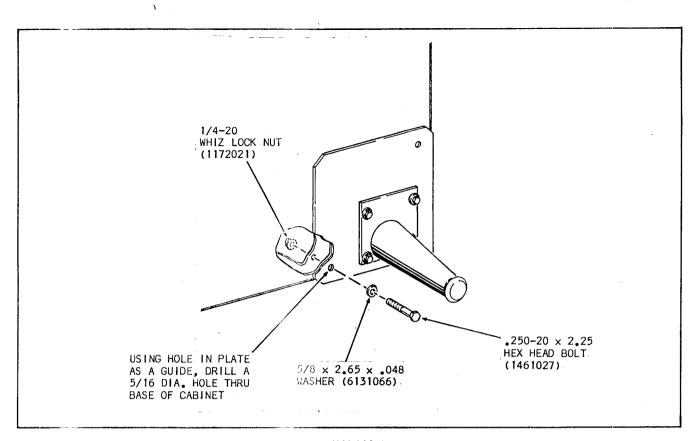


FIGURE 2