
# FoodKing

# Set-Up Guide

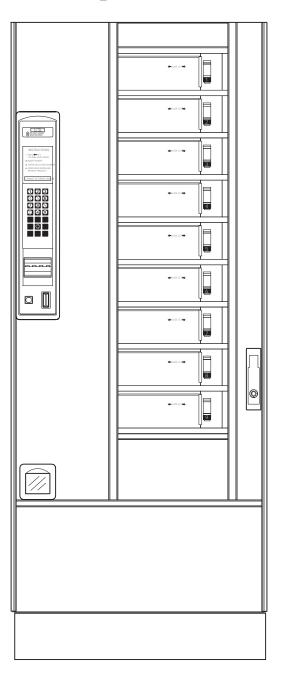

12955 Enterprise Way Bridgeton, MO 63044-1200 (314) 298-3510 This merchandiser has been engineered to our own rigid safety and performance standards. It has earned a "Letter of Compliance" from NAMA indicating that it complies with sanitation and health guidelines recommended by the Automatic Merchandising Health-Industry Council (AMHIC) and it conforms with all other NAMA safety recommendations. This merchandiser has been FCC verified.

This merchandiser has been manufactured in accordance with the safety standards of both Underwriter's Laboratories and the Canadian Standards Association. To maintain this degree of safety and to continue to achieve the level of performance built into this machine, it is important that installation and maintenance be performed so as to not alter the original construction or wiring and that replacement parts are as specified in the parts manual. Your investment in this equipment will be protected by using this *Set-Up Guide* in your operation, service, and maintenance work. By following prescribed procedures, machine performance and safety will be preserved.

This merchandiser is warranted for one (1) year against defective parts and workmanship. Any part or parts which are proven to be defective within one (1) year of the date of shipment will be repaired or replaced free of charge when the defective part is returned, with transportation charges prepaid, to the destination designated by the Warranty Department.

This warranty applies only to the original purchaser of this merchandiser and is null and void if the merchandiser is sold during the period of warranty.

This warranty is also null and void for all electrical components, wiring, or circuits and/or for all mechanical parts or assemblies damaged as a result of operating the merchandiser at other than the voltage and current specifications set forth in this *Set-Up Guide*. This warranty is null and void in the event of vandalism, fire, or negligence on the part of the operator.

No warranty is given or implied on incandescent lamps, neon lamps, fluorescent lamps, ballasts, starters, or other expendable items. No warranty will be given when other manufactured components are installed in the merchandiser.

Further, the manufacturer is not responsible for any cost of service rendered or repairs made on merchandisers or parts by anyone other than an authorized distributor, unless authorization to incur such expense has been given in writing prior to incurring such expense.

This warranty is in lieu of all warranties expressed or implied, including, without limitation, warranties of merchantability and all other obligations or liabilities on the part of the manufacturer. Furthermore, the manufacturer neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale of said equipment or any part thereof.

### TABLE OF CONTENTS

Internal Parts Location	2
Initial Set-Up	
Unpack and Inspect	4
Utility Requirements	
Installation	
Install the Coin Mechanism	6
Install Labels	
Install the Door Lock	8
Load the Merchandiser	
Programming	9
Getting Around	9
The Selection Switch Panel	9
Special Programming Keys	9
The Displays	10
The MODE Switch	
Flowcharts	11
DATA	13
PAY OUT	13
PRICE	14
TEST	14
FAULTS	15
CONFIGURE	16
Routine Service and Sanitation	
General	
Daily Service	
Daily Sanitation	
Weekly Service	
Weekly Sanitation	
Monthly Sanitation	
Semi-Annual Service	
Semi-Annual Sanitation	
Cleaning the Coin Validator and Coin Chute	
Cleaning the Bill Validator	
Adjusting the Product Dividers	
Clearing a Carousel Jam	
Timing the Carousel	24

### **Specifications**

**DIMENSIONS:** Height - 183 cm (72 in.)

Width - 73.6 cm (29 in.) Depth - 88.3 cm (34 <sup>3</sup>/<sub>4</sub> in.)

**WEIGHT**: 266.3 kg (587 lbs.)

**ELECTRICAL** 

(U.S.): 115 Volts AC, 60 Hertz, 12 Amps, Single Phase (INTERNATIONAL): 230 Volts AC, 50 Hertz, 6 Amps, Single Phase

**REFRIGERATION:** Refrigerant - 134a

Charge - 255 g (9 oz.)

MISCELLANEOUS: Minimum ambient temperature 5° C (41° F)


Maximum ambient temperature 32° C (90° F)


### FOR INDOOR USE ONLY

### **Special Operating Notes**

- Once the customer makes a selection and the selection door is unlocked, that door can be closed and reopened for up to 30 seconds (with no additional money required). This condition is contingent on the turrent not being moved, or another selection made.
- The turret will automatically move approximately 1/3 of a revolution every 30 minutes while the machine is idle. Any keypress will reset the 30 minute delay time.

PAGE 2 4270057

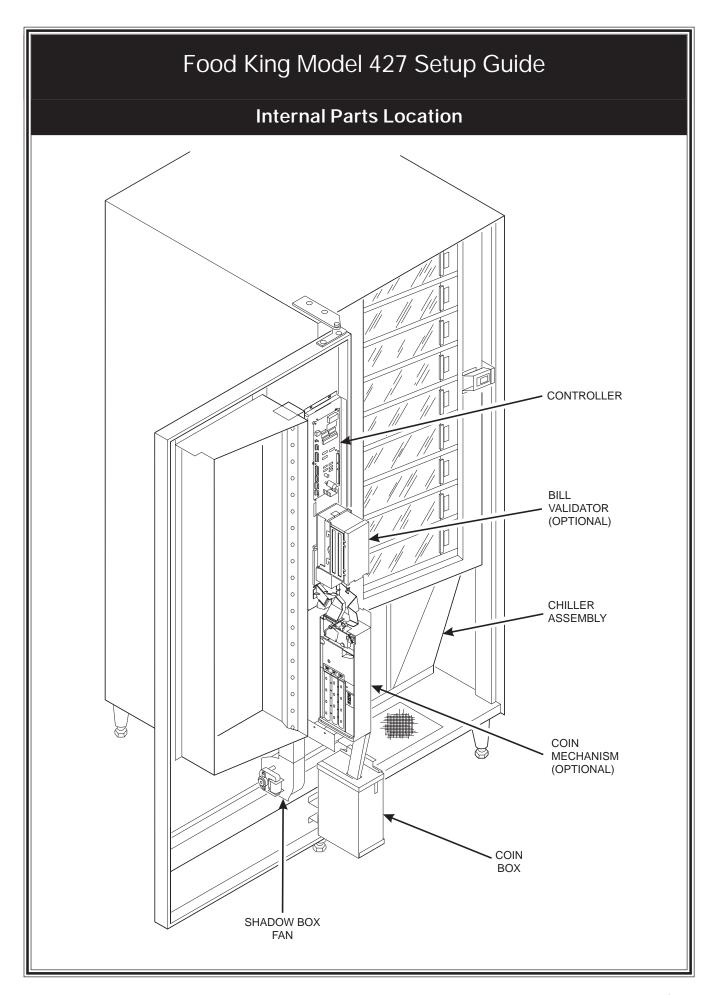

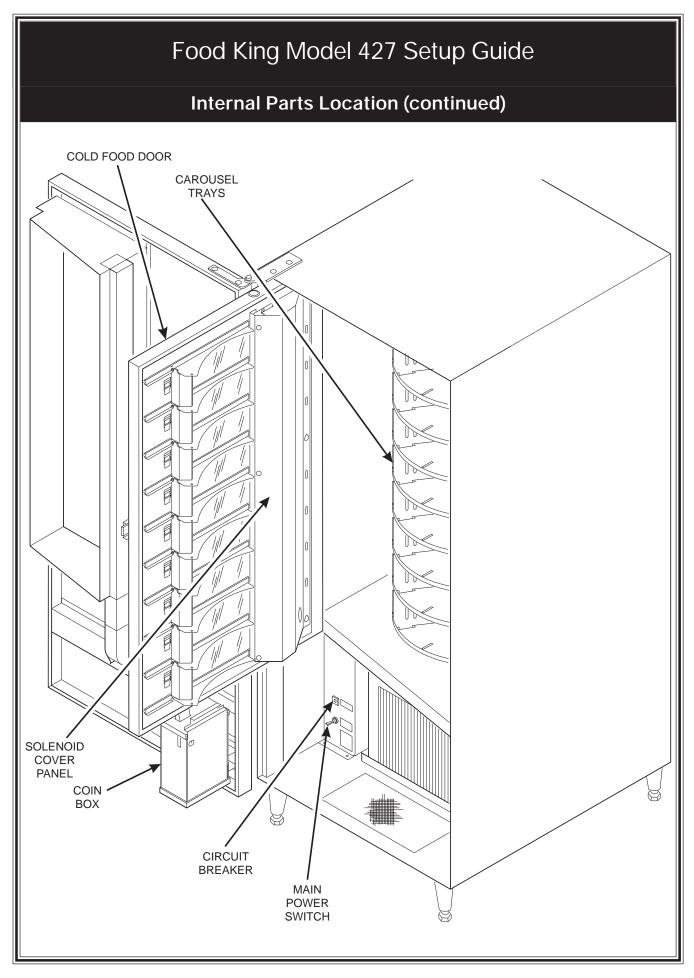

PAGE 4 4270057

### **Initial Set-Up**

#### **UNPACK AND INSPECT**

- 1. Carefully remove the merchandiser from its shipping carton and place it on a level surface.
- 2. Inspect the outside of the merchandiser for dents, scratches, or any damage resulting from improper handling.
- 3. If the merchandiser has the optional door lock, the key will be in the coin return receptacle.
- 4. Inspect the inside of the cabinet. Observe the location and position of the packing material should you need to reuse it. Carefully remove all packing material.

#### **IMPORTANT**

If you see any damage when you unpack the merchandiser, file a claim immediately with the carrier.

- 5. Instructions for installing the optional Base Plate are included with the Base Plate Assembly when shipped.
- 6. Inspect the merchandiser's electrical connectors and components.

#### **ELECTRICAL REQUIREMENTS**

The merchandiser is supplied with a service cord for the country of use and is terminated in a grounding type plug. The wall receptacle used or this merchandiser must be properly polarized, grounded, and of the correct voltage. Operating the merchandiser from a source of low voltage will **VOID YOUR WAR-RANTY**. Each merchandiser should have its own electrical circuit and that circuit should be protected with a circuit breaker or fuse conforming to local regulations.

**Voltage Check -** Place the test leads of a voltmeter across the LINE (LIVE) and NEUTRAL terminals of the wall receptacle. The meter should indicate 110 - 130 volts ac for 120 volt, 60 Hz locations, or 220 - 240 volts ac for 230 volt, 50 Hz locations.

**Polarity Check -** Place the test leads of a voltmeter across the LINE (LIVE) and GROUND terminals of the wall receptacle. The meter should indicate 110 - 130 volts ac for 120 volt, 60 Hz locations, or 220 - 240 volts ac for 230 volt, 50 Hz locations.

**Noise Potential Check** - Place the test leads of a voltmeter across the NEUTRAL and GROUND terminals of the wall receptacle. The meter should indicate 0 volts ac. A measurement greater than 1.5 – 2.0 volts ac could result in problems for the merchandiser's electronic circuitry caused by electrical noise.

Any deviation from these requirements could result in unreliable performance from your merchandiser.

### Installation

### NOTICE

This merchandiser is intended for INDOOR use only.

#### **CAUTION**

Make sure the merchandiser is properly leveled on a flat, solid, stable floor or base foundation. <u>IF THIS IS NOT DONE, PERSONAL INJURY AND/OR DAMAGE TO EQUIPMENT MAY RESULT!</u>

- 1. Move the merchandiser to the desired location.
- Position the merchandiser at least 6 inches (15 cm) from any wall.
- 3. Level the machine:
  - a. Place a spirit level on the top front edge of the cabinet with the door fully closed. Adjust the front legs only until the cabinet is reasonably level, as shown.
  - b. Hold the door open about 4 inches.


### **WARNING:**


HAVE AN ASSISTANT HOLD THE MERCHANDISER WHILE YOU ADJUST THE LEG LEVELERS.

- c. Adjust the back legs so that the back leg leveler on the hinge side is off the floor just enough so a piece of paper can slide under it with only a bit of resistance.
- d. For proper weight distribution on all four legs, raise the back leg on the hinge side by unscrewing the leveler 1½ turns.

#### NOTICE

You may need to use pliers or channel locks to loosen the leg levelers.

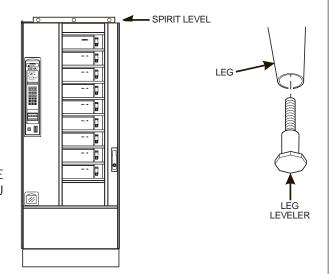

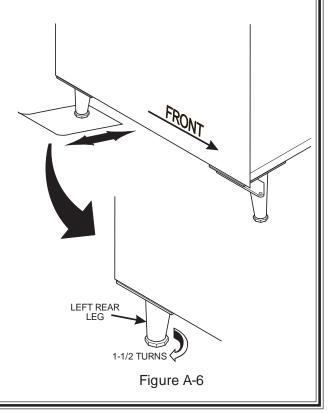

PAGE 6 4270057

- 4. For "bank style" installations of multiple merchandisers:
  - a. Position the first machine in the location, or at the highest spot if the floor is not level. Extend the leg levelers only as required to level the machine.
  - b. Position and level the remaining machines.
- 5. Set the main power switch to OFF.

#### **IMPORTANT**

Do not apply power to the merchandiser until you have done the power source checks outlined above. Possible equipment damage could result from improper supply voltage.

- 6. Plug in the merchandiser.
- 7. Turn the main power switch ON and close the cabinet door. The display lamp will light, and the shadow box fan motor will run.


### **INSTALL THE COIN MECHANISM**

Install the coin mechanism as follows:

#### WARNING

Make sure the main power switch is turned OFF before you work on the merchandiser. Failure to do so could result in death or injury.


- 1. Turn OFF the main power switch. Refer to the instructions provided with the coin mechanism and remove the coin validator assembly.
- 2. Loosen the coin mechanism mounting screws on the merchandiser so they stand off about 1/8" (0.3 cm).
- Position the coin mechanism so the three keyed holes fit over the mounting screws. Pull down on the coin mechanism to seat the screws in the keyways.
- 4. Tighten the mounting screws and reinstall the coin validator.
- 5. Turn ON the main power switch. Select the correct type of coin mechanism in the CONFIGURE procedure.
- 6. The coins may be loaded into the tubes using either of the following procedures:
  - a. High accuracy coin counting method (recommended): Enter the TEST procedure. Insert enough coins through the coin slot to cover the empty sensor. The amount of coins inserted will be internally recorded.
  - b. Quick fill method: Insert enough coins through the coin slot to COM-PLETELY FILL the tubes. OR For coin mechs with removable tube cassettes, remove the cassette and fill the tubes directly. Replace the casette.
- 7. Enter the TEST procedure. Using one coin of each tube denomination, insert all the coins through the front panel coin insert slot. Press the coin return and verify that the same coin denomiations are returned.
- 8. Visually check the coin tubes to make sure coins are lying flat.

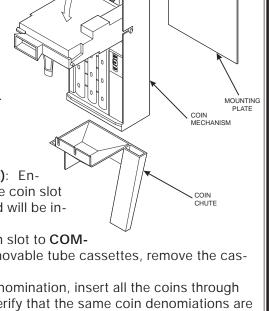

### **INSTALL LABELS**

A SET OF "LOCATE FOOD HERE" LABELS ARE LOCATED IN THE PLASTIC BAG ASSEMBLY THAT CONTAINED THIS MANUAL. PLACE ONE LABEL ON EACH OF THE VEND DOOR GUIDES. POSITION THE LABEL SO IT IS CENTERED UNDER THE VEND COMPARTMENT.

### LOCATE FOOD HERE

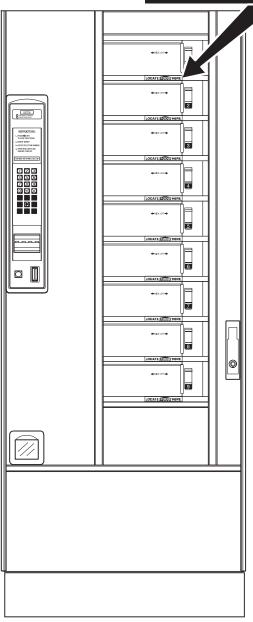

#### NOTE:

BEFORE APPLYING LABEL, CLEAN AND DRY THE SURFACE OF THE VEND DOOR GUIDE.

PAGE 8 4270057

### **INSTALL THE DOOR LOCK**


There are two optional door locks:

FLEX-ACE (P/N 9992000) Corresponding key (P/N 9994000)

VAN LOCK (P/N 3112163)
Coresponding key
(P/N 3112164)
Lock and key kit (P/N 3122165)

Install the door lock as follows:

- 1. Remove the lock spring.
- 2. Depress the lock pin and push the lock cylinder in the lever until the pin snaps into place.
- 3. Test the lock mechanism with the key.

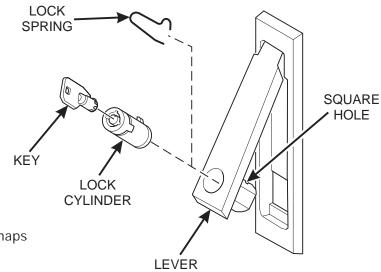

### LOAD THE MERCHANDISER


1. Adjust the product dividers, if necessary.

2. Set new prices, if desired.

NOTE

If the food carousel is loaded with items which are too large for the compartments, the carousel will not rotate properly.

- 3. Load any empty compartments.
- 4. Push in the load switch until the carousel rotates enough to expose more empty compartments.
- 5. Repeat steps 3 and 4 until the carousel is fully loaded.
- 6. Close the door.

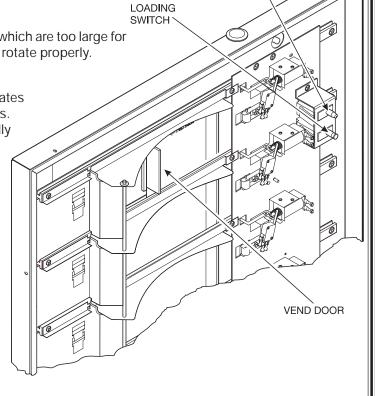

COLD FOOD

DOOR SWITCH

### **PROGRAMMING**

### **Getting Around**

Getting around the Food King software is pretty easy once you know the features that are available to you, and how to use them. The three main parts you will use are the SELECTION SWITCH PANEL, the DISPLAY, and the MODE switch.

### The Selection Switch Panel


The selection switch panel is located on the monetary panel. These are the keys customers use to make selections, but you will use these keys during programming procedures.

### **Special Programming Keys**

Some keys on the panel have jobs that only show up during programming. Three of them do not even appear on the panel, but they are active during programming, so the keypad shown at right is what you will be using. To help you remember the keys, this panel will be shown on each page in the programming section.

- # Press this key to move from one function to another.

  From within a function, press once to return to the beginning of the function; press and hold to return to the standby message.
- This key moves you around inside of a function.
- (F) This key allows you to switch between two or more choices.
- This is the "action" key. It will start tests, etc.
- $\widehat{\mathbb{C}}$  This key is used to clear certain data or errors.



PAGE 10 4270057

### The Displays

The display group consists of a 4-character digital display which performs two functions, and is referred to in this book as "the display":

seconds after a vend.



- It shows the customer's selection and how much credit is in the machine, as well as the standby message.
- 2. It provides information and feedback to the service person during maintenance.

### **Standby Messages**

Several standard messages can be displayed under certain circumstances. These are called "Standby Messages". They are:

.00 OUE OF Ordr door OPEN

= This is the normal display. The numbers will change when credit is added.

This is a fatal error - the machine will not run. See the error list.A vend door is not closed all the way. This will not appear until several

40° F

= Shown in the display (zero credit and no errors), if this option is chosen.

### TEMPERATURE AND HEALTH CONTROL DISPLAY

Pressing # displays the temperature from any standby message. Some of the following conditions may appear:

40° F. 40° 2

The trailing decimal point means that the compressor is running.
 The question mark represents an invalid temperature (temperature sensor)

10<sup>0</sup> c 20 H

error).

= This means that the health control grace period has 28 minutes remaining. The machine must be able to reach an internal temperature of 45°F (7.2°C) within 30 minutes of door closure. The grace period can be reset to 30 minutes by opening and closing the cold food door. To test the health control, open the door and hold the temperature sensor. The machine should go out

of order.

#### NOTE

All displays shown in degrees Fahrenheit (°F) may be replaced by their equivalents in degrees Celsius (°C), depending upon how you have configured your machine.

The display group also contains two lamps which light up under certain conditions:

- 1. The "USE EXACT CHANGE" lamp lights when there are insufficient coins in the merchandiser to provide change for a vend. You can set the criteria for this condition in the programming section.
- 2. The "SELECTION PRICE" lamp lights when the customer has inserted insufficient credit into the machine to vend the selected product. In conjunction with this lamp lighting, the selection's price flashes in the digital display.


#### NOTE

During programming modes, these lights blink whenever a key is pressed as a test of the lamps.

### The MODE Switch

All programming procedures begin with this switch. Until you push the switch, the special programming keys will not work, especially the "invisible" keys.

The MODE switch is a large square white button located on the rear of the controller board as shown.

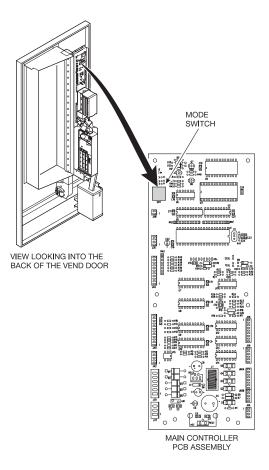

### **Flowcharts**

Think of a flowchart as a "roadmap" to the programming functions. Once you become familiar with the programming procedures, you can use the flowcharts as a quick reference.

The boxes represent the different functions, and the symbols between the boxes represent the keys you need to press in order to move between the functions.

PAGE 12 4270057

### Food King Model 427 Setup Guide **OVERALL** CONFIGURATION **PROGRAMMING OPTIONS FLOWCHART FLOWCHART STANDBY** CONFIGURE **MESSAGE** MODE # Errors List of all Select coin active errors (If any) mechanism # Select bill Total cash Sales by sales selection validator ₩ # Hold # # Total vend Vend count by Select card or reader selection count Press MODE switch # # Payout coins Change (NDQ = 123)options # Exact change # Test vend message options ₩ # Price Declining # Price individual balance selections options # Select Configure temperature # Set ID # number

### **DATA**

View several types of sales data:

#### **NOTE**

All data is not resettable.

- 1. Press the MODE switch on the main controller.
- 2. Press (#) until the display shows CRSH. The display will flash the total cash sales:

CASH...XXXX...XX.XX

- 3. If you have the DEX option, press  $(\mathbf{\hat{D}})$  to transfer data into your DEX device.
- 4. Press (\*\*). The display shows I-, then flashes 4 to 8 digits. This is the dollar and cents amount of door 1 sales.
- 5. Press  $(\mathbf{X})$  to view cash sales for doors 2 through 9.
- 6. Press (#). The display shows [1] the display will flash the total vend count:

CUF XXXX XXXX

- 7. Press  $(\mathbf{X})$ . The display shows 1-, then flashes 4 to 8 digits. This is the number of door 1 vends.
- 8. Press  $(\mathbf{x})$  to view vends for doors 2 through 9.
- 9. Press (#) to exit.

### PAY OUT (Does not apply to machines with EXEC coin mechanisms.)

Pay out coins:

- 1. Press the MODE switch on the main controller.
- 2. Press # until the display shows PRY. Press 1 to pay out nickels, press 2 to pay out dimes, and press 3 to pay out quarters. Press 4 to pay out from the 4th MDB tubes.
- 3. Press the appropriate key once to pay out one coin.
- 4. Press and hold the appropriate key to pay out coins continuously.
- 5. Press and hold (#) to return to the standby message.




PAGE 14 4270057

### **PRICE**

Set prices for all the selections in your merchandiser:

The price display:





- 1. Press the MODE switch on the main controller.
- 2. Press (#) until the display shows Prc.
- 3. Press (x), and the display shows I-, then .XX. "XX" is the price for door number 1.
- 4. Press (\*\*) until the selection you want to price is displayed.
- 5. Enter a new price with the number keys.
- 6. Repeat steps 4 and 5 until you have priced all the selections.

OR

7. Press (#) to return to the Prc display, or hold (#) to exit.

### **TEST**

View machine status and test certain functions:

- 1. Press the MODE switch on the main controller.
- 2. Press (#) until the display shows £55£.
- 3. Make a selection and open the door (if you deposit money, the credit is shown in the display). The selection number flashes momentarily in the display to indicate the door solenoid activates. This is followed by the number with two dashes: Example, !- for selection #1. The dashes indicate that the door switch is made.
- 4. Do not close the door yet. You can either wait 12 seconds. The display shows 0 , indicating that the vend timer has timed out. OR, you can press ① rather than wait the 12 seconds. The display will still indicate that the machine recognizes that the door has not closed. In this condition, the carousel will not rotate.
- 5. The display returns to  $\xi \xi \xi$  when the door is closed.
- 6. Repeat steps 3 and 4 for the remaining doors.
- 7. Press and hold (#) to return to the standby message.

### **FAULTS**


Display all the <u>active</u> faults on your merchandiser:

- 1. Press the MODE switch on the main controller.
- 2. Press (#) until the display shows Err. Note: If no faults are present, this will not be displayed.
- 3. If errors are present, press  $(\cancel{*})$  to see the list of faults:

Er. U3	The EPROM is bad.
Er. U4	RAM is not initialized or is not compatible with the currently loaded software. If this message appears, initialize your RAM by performing the following procedure:  NOTE: Initializing RAM will erase all your data. Be sure you have written this information down before continuing.
	Press AND HOLD $\widehat{\mathbb{C}}$ . You will see $\operatorname{\mathtt{cLr}}$ in the display. Continue
	holding until the display shows dONE.
HCE <i>r<b>xx</b>□</i> F	The health control has been set. "XX°F" is the maximum temperature reached.
Ł,rEF	The temperature reference on the main PCB cannot be read.
Ł SNS	The temperature sensor cannot be read.
Էրոն	The temperature sensor is out of range.
Er,bL	Problem with the bill validator.
Er,Cd	Problem with the card reader.
Er,Cn	Problem with the coin mechanism.
UOUE''' 4AA	All selections are out of service.
E,Prc	Illegal price is detected. Clear by checking prices.
J58,1	Cannot read switch inputs. Disconnect J58 at the main controller and scroll through the error list. If the error persists, replace the main controller. Otherwise, check the switch harnesses.
Er.d <b>X</b>	Did not read the vend door lock switch when door solenoid X was energized.

When the first fault item (if any) repeats, you have seen all the faults.

4. Press  $(\cancel{x})$  to see more faults or  $(\cancel{\#})$  to exit.



PAGE 16 4270057


### **CONFIGURE**

Configure various machine functions:

- 1. Press the MODE switch on the main controller.
- 2. Press (#) until the display shows CONF.
- 3. Press  $(\mathbf{x})$ . The display shows the coin mechanism options:
  - [n,d] = dumb mech
  - [n] = MDB
  - $Cn_{E} = Exec mech$
  - Cn.0 = No mech
  - Press (F) to switch between the coin mech choices.
- 4. Press  $(\mathbf{X})$ . The display shows the bill validator options:
  - **b** L. P = Pulse validator (not supported at this time)
  - 11.12.5 = MDB validator. Press 1, 2, or 5 to enable/disable acceptance of that denomination bill.
  - **b**L.0 = No validator
- 5. Press  $(\cancel{*})$ . The display shows the card reader options:
  - [d, d] = Dumb
  - $Cd_1\Pi = MDB_1$
  - $Cd_{\cdot}0$  = No card reader
- 6. Press (\*\*). The display shows <sup>C</sup>.XX. Change will be given for coins or bills up to this amount without the customer having to make a selection. For example, if **1.00** is displayed, the machine will give the customer change for a dollar without requiring a selection. Entering **0.00** means that no change will be given.
- 7. Press ①. The display shows: EX.XX. The customer will see the USE EXACT CHANGE lamp lighted when the amount of available change in the coin mechanism falls below the level you set for X.XX. Enter a value with the number keys. For example, if EI.00 is selected, the customer sees the USE EXACT CHANGE lamp when less than a dollar's worth of change is in the coin mechanism.
- 8. Press  $(\mathbf{X})$ . The display shows either:
  - db.on = More than one vend is allowed, with a declining balance. This means that the customer can choose multiple products until the amount of credit is lower than the lowest priced product in the machine.

OF

db. 0F = A declining balance is not allowed. Press (F) to switch between these two choices.



- 9. Press  $(\cancel{X})$ . The display shows  $\cancel{XX}^{0}$  F. This is the machine temperature setpoint.
  - Press (1) to increase through the allowed temperature range (in 1°F steps).
  - Press (0) to return to the factory setpoint.
  - Press (F) to change display units from °F to °C.
  - Press ① to display temperature in the standby message. A trailing decimal point is displayed if this option is selected.
- 10. Press (\*\*). The display shows the machine ID number. This number is sent to a DEX device when transferring data.
- 11. If not present, enter the 6-digit machine ID number with the number keys. The number will fill in from the right.

PAGE 18 4270057

### **ROUTINE SERVICE AND SANITATION**

Sanitation is an important phase of merchandiser operation. The lack of proper service and sanitation can cause merchandiser malfunction and loss of sales.

The periods and suggested procedures for service and sanitation are daily, weekly, monthly, and semi-annually. These periods and procedures are given as guides only, and are not to be construed as absolute or invariable. Local conditions must always be taken into consideration. Certain installations require that some or all of the steps under Monthly Service and Sanitation be performed weekly. Each merchandiser must be maintained individually in accordance with its particular requirements. We, however, stress "A CLEAN MERCHANDISER IS THE MOST PROFITABLE MERCHANDISER".

Sanitizing means effective bactericidal treatment of clean surfaces of equipment and utensils by a process which has been approved by the health authority as being effective in destroying microorganisms, including pathogens.

Sanitizing processes generally accepted by the health authority are as follows:

- 1. Immersion for at least one-half minute in clean hot water at a temperature not lower than 170° F (77° C).
- 2. Immersion for a period of at least one minute in a sanitizing solution containing:
  - a. At least 50 ppm of available chlorine at a temperature of not lower than 75° F (24° C); or
  - b. At least 12.5 ppm of available iodine in a solution having a pH not higher than 5.0 and a temperature not lower than 75° F (24° C); or
  - c. Any other chemical-sanitizing agent which has been proven to be effective and non-toxic under usage conditions, and for which a suitable field test is available.

The following warnings and cautions are applicable to the service and sanitation procedures given in this section:

#### **CAUTION**

Milk and other foods are perishable products. Follow local health authorities' rules and regulations for storage and handling of these items.

#### **IMPORTANT**

All loose food particles or spillage, whether wet or dry, must be removed from the inside and outside of the merchandiser.

#### **CAUTION**

Do not get electrical connections or electrical components damp or wet.

### **NOTICE**

Do not uses waxes or lubricants which contain silicone on or in the merchandiser. Silicone or silicone vapors can cause electrical failure.

#### **GENERAL**

Set the main power switch OFF before cleaning or servicing the merchandiser. Use aerosol spray cleaners or spray waxes only in well-ventilated areas. NEVER use any spray product containing silicone. Silicone sprays can coat electrical contacts, causing a machine malfunction.

### WARNING

Before using any liquid cleaner, unplug the merchandiser power cord or shut off power to the wall receptacle to avoid any possibility of electrical shock. Make certain all components are thoroughly dry and properly installed before restoring power.


Refer to the Parts Manual for additional service information and replacement parts. For factory assistance, contact the nearest service representative.

Contact the local health authorities and obtain their acceptance of the sanitizer you intend to use when cleaning and sanitizing the merchandiser.

When cleaning and sanitizing the merchandiser, use CLEAN, DISPOSABLE PAPER WIPES rather than cloths.

#### **DAILY SERVICE**

- 1. Replace burned-out or discolored light bulbs.
- 2. Replenish coin tubes in the coin mechanism.
- 3. Empty the bill validator.
- 4. Test vend the merchandiser.
- 5. Check the temperature of the cabinet.
- 6. Follow the daily sanitation procedures, then reload the merchandiser.

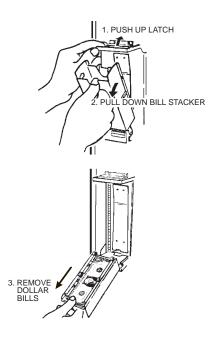

Removing a Dollar Bill From The Bill Validator

PAGE 20 4270057

#### DAILY SANITATION

- 1. Remove all past-date merchandise from the merchandiser.
- 2. Check for liquid spillage on the merchandiser modules. If there is spillage, remove the module shelves and dividers affected. Wash and sanitize the shelves and dividers with a clean, damp disposable paper wiper or a clean soft-bristle brush. Rinse with clean hot water and dry thoroughly.
- 3. Wipe the exterior of the merchandiser with a damp disposable paper wiper and dry thoroughly.
- 4. Fill in the appropriate columns on the record of cleaning card.

#### **WEEKLY SERVICE**

- 1. Follow the daily service instructions.
- 2. Brush the vent screens.
- 3. Inspect the refrigeration screen. Remove any accumulated dust.
- 4. Inspect the coin mechanism, coin validator, and bill validator. Clean if necessary.

#### WEEKLY SANITATION

- 1. Follow the daily sanitation instructions.
- 2. Inspect the merchandiser for overall cleanliness, especially the corners.
- 3. Wash and sanitize the merchandiser food compartment with a clean, damp disposable paper wiper. Dry thoroughly.
- 4. Fill in the appropriate columns on the record of cleaning card.

### **MONTHLY SERVICE**

1. Follow the weekly service instructions.

#### WARNING

Be sure the area is well ventilated and no open flames are present before using any aerosol spray can.

#### WARNING

Use protective glasses or a protective shield if an air hose is used for drying.

- 2. Clean the coin chute and coin validator.
- Clean the bill validator.
- 4. Remove the screen asemblies. Clean the screens with a dry cloth, then wash with a warm detergent solution. Rinse, dry, and reassemble.

### **MONTHLY SANITATION**

- 1. Follow the weekly sanitation procedures.
- 2. Fill in the appropriate columns on the record of cleaning card.

#### **SEMI-ANNUAL SERVICE**

- 1. Follow the weekly service instructions.
- 2. Inspect the merchandiser for worn parts and replace where necessary.

#### **NOTICE**

Do not use silicone lubricants. Silicone can cause electrical contact failures.

We recommend using Lubriplate Portable Tool Grease No. 905 (or equivalent), available from:

Industrial Lubricating Company, Inc.

P.O. Box 3871

St. Louis, MO 63122

3. Lubricate all moving parts that do not come into contact with food.

#### **SEMI-ANNUAL SANITATION**

1. Follow the monthly sanitation instructions.

#### CLEANING THE COIN VALIDATOR AND COIN CHUTE

Inspect the coin validator and coin chute at regular intervals. Clean them on approximately a monthly schedule.

- 1. Remove the coin validator assembly from the merchandiser.
- 2. Clean the coin chute with a tube cleaning brush to remove any accumulated dust and foreign matter.
- 3. Refer to the coin validator instruction booklet and follow the recommended cleaning procedure.

#### **CLEANING THE BILL VALIDATOR**

1. Refer to the bill validator instruction booklet and follow the recommended cleaning procedure.

PAGE 22 4270057


### ADJUSTING THE PRODUCT DIVIDERS


Add or remove product dividers to accomodate various size products. Each tray segment can be left alone or divided into as many as 6 compartments, allowing the machine to vend up to 12 products per level.

Proceed as follows:

### 1. Remove tray segment:


- a. Align the carousel as shown.
- b. Pull down on the spring clip to release the pin.
- c. Pull the tray segment directly out from the center.

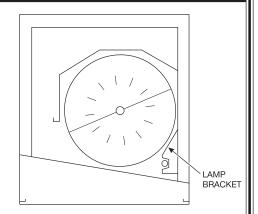

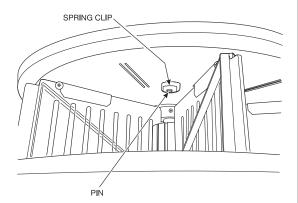

### 2. Adjust tray divider:


- a. Loosen all the retainer screws.
- b. Remove all of the metal retainers.
- c. Remove the plate holder.
- d. Remove, add, or move tray dividers as needed.
- e. Reassemble the tray segment in the reverse order of disassembly.

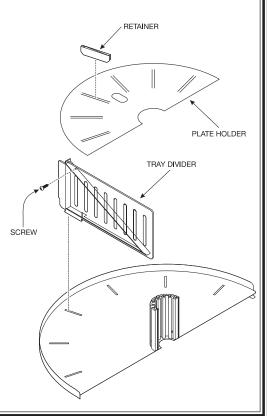

### ADJUSTING THE PRODUCT DIVIDERS (continued)


### 3. Install tray segment:

- a. Make sure the carousel is still aligned as
- b. Carefully move the tray segment into position. Make sure the tabs on the ends of the tray segment line up with the tabs on the mating tray segment.
- c. Pull down the spring clip in order to allow the pin to seat into the hole in the spring clip.
- d. Push the tray segment the rest of the way home.
- e. Check to be sure that the tray segment is secure and will not come out.

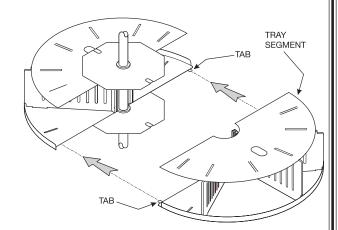

### **CLEARING A CAROUSEL JAM**

- 1. Turn the main power switch OFF.
- 2. Manually push in the brake. Manually turn the carousel until you can remove the cause of the jam.
- 3. Close the door and move the carousel and ensure that all tray dividers will align with the right side of the vend doors.

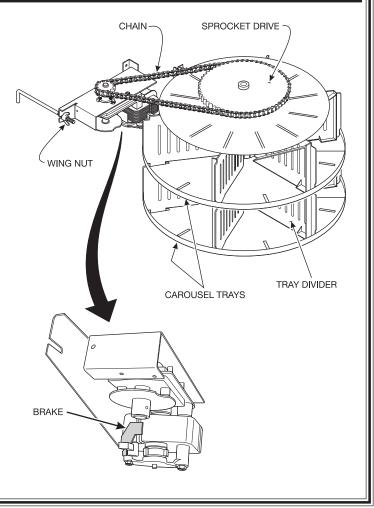

PAGE 24 4270057

### TIMING THE CAROUSEL

The tray dividers should be aligned with the adjacent edge on the vend door stop. If they are not aligned properly, follow the steps listed below:

- 1. Turn the main power switch OFF.
- 2. Remove the chain guard cover and the motor cover.
- 3. Verify that the motor is positioned so that the switch lever is bottomed out in one of the two cam detents. (This determines the motor's stop position. You may have to release the brake and manually move the carousel.)
- 4. Loosen the wing nut on the carousel motor and bracket assembly.
- 5. Support the chain to keep it engaged on the carousel motor sprocket.
- Hold the chain motionless while rotating the carousel (work the chain around the carousel sprocket). Continue rotating the carousel until the tray dividers are aligned with the adjacent edge on the vend door stop.
- 7. Apply tension to the chain by tightening the wing nut on the carousel motor and bracket assembly. MAKE SURE THAT THE CAROUSEL DOES NOT ROTATE WHILE TENSIONING. DO NOT OVERTIGHTEN THE CHAIN, OR THE CAROUSEL MOTOR MAY BIND.
- 8. Close the cold food door and verify the alignment.
- 9. Install the covers you removed in step 2.
- 10. Return the machine to service.

