

Row Harness Cover

M009.0

To Install:

1. Install one row harness cover per module.
2. Release the vend mechanism at the bottom by pressing on the two lock tabs that secure it in place.
IMPORTANT: YOU DO NOT NEED TO REMOVE THE VEND MECH TO INSTALL THE COVER.
3. Place the row harness cover so the tab(s) are wedged between the vend mechanism and the bottom cap of the module.
4. Snap the vend mechanism back in position so the lock tabs secure it to the bottom cap of the module.
5. Place the top edge of the row harness cover under the bottom edge of the lower ramp where it attaches to the module.

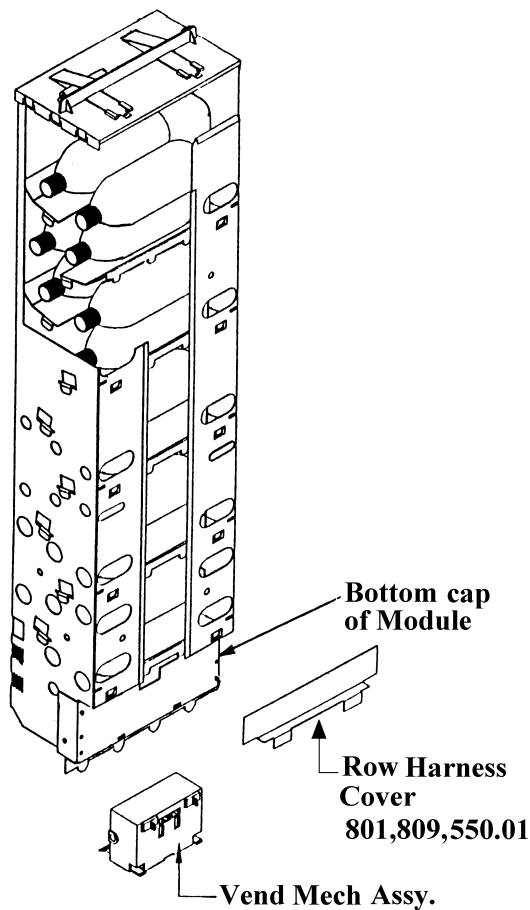


FIGURE 1
20 oz. MODULE

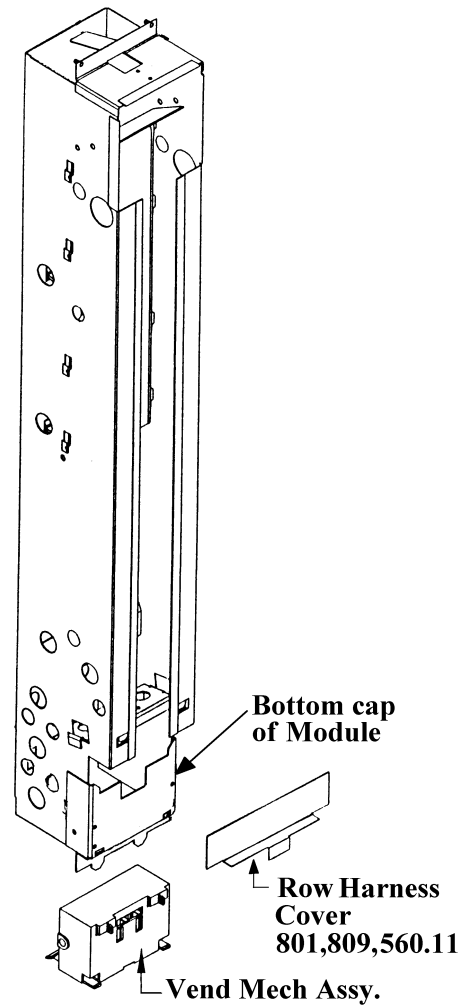


FIGURE 2
12 oz. MODULE