

DIXIE-NARCO, INC.
SERVICE BULLETIN #143

Date: June 27, 1972


MODELS: DN174-6, DN204-6 and DN246-6 Adaptables (DOUBLE PORT MODELS ONLY)

SUBJECT: 10 oz. Can Shim - Accessory Kit (Reference B/M164,011,000.04).

REASON: To provide 10 oz. Can Shims so that this size can, can be dispensed satisfactorily.

KIT CONSISTS OF: 1 C164,010,120.03 10 oz. Can Shim, Right
1 C164,010,130.03 10 oz. Can Shim, Left

DO THIS: The lower tab on the can divider must be bent at approximately 15° as shown in Figure I, to allow for the additional metal thickness of the 10 oz. can shim.

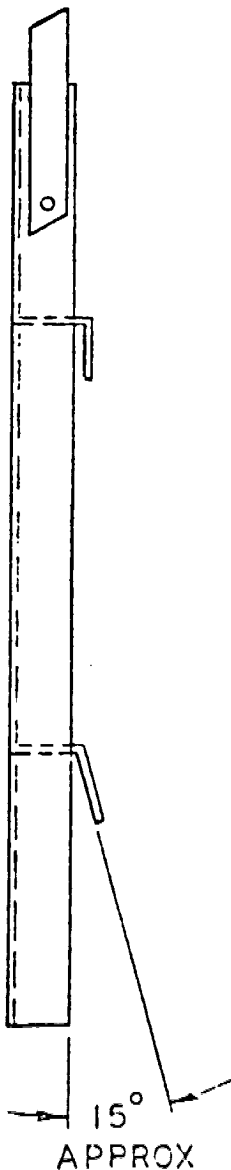

In order to vend 10 oz. cans, follow the instructions, shipped with the vender, Section B, Page 7, entitled "Adjustment Can Vending". In addition to these instructions, the right and left shims included in this kit shall be installed as follows:

The lower tab on the can divider after being bent, as above, shall be inserted through the rectangular hole in the shim, with the longer side of the shim forward, as installed in the vender, and the upper portion of the shim flat against the column wall.

These two pieces, the can divider and the 10 oz. can shim are then installed in the vender in accordance with the instructions, Page 8, referred to above. See also Figure II, Page 2, of these instructions.

FIGURE I

(Reference Instructions
A903,806,690.01)

Dixie-Narco, Inc.
Service Department
Page 1 of 2

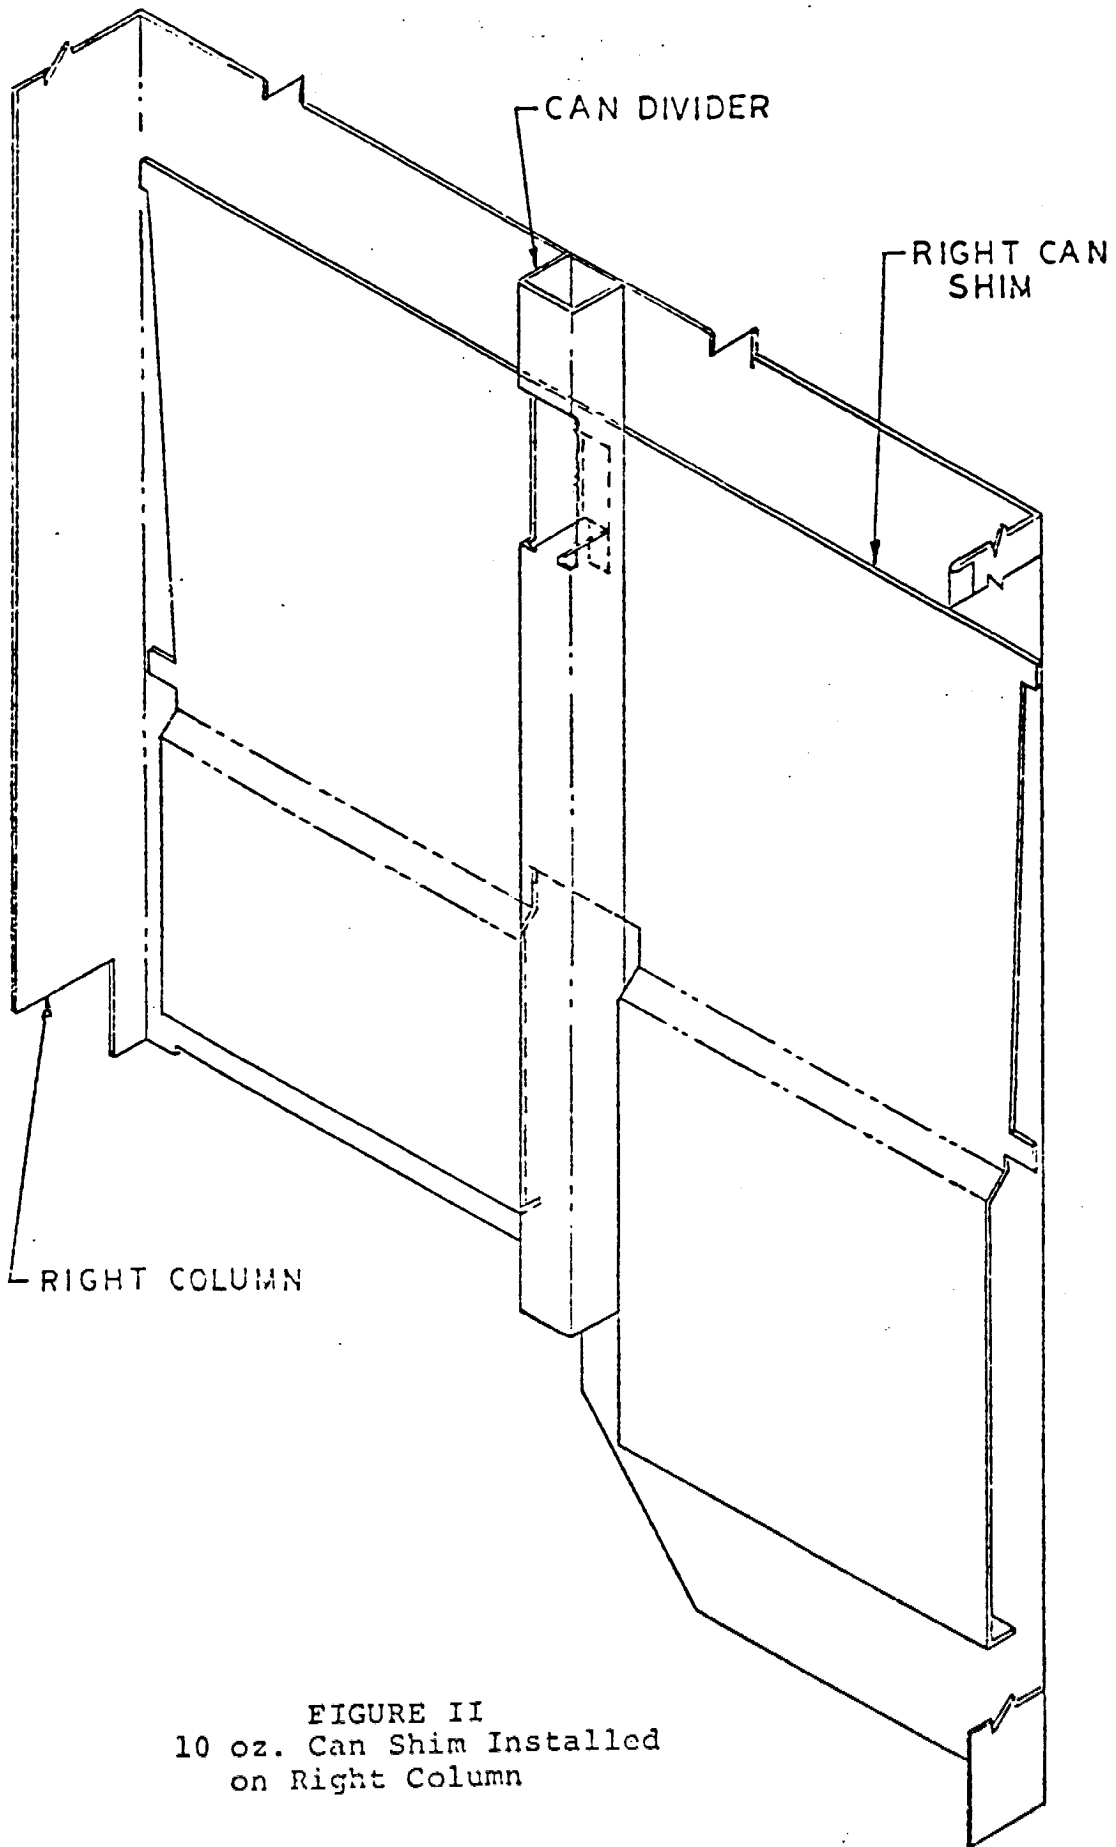


FIGURE II
10 oz. Can Shim Installed
on Right Column