

Technical Bulletin

Bulletin Number: 394 Revision Number: R-01

Release Date: December 22, 1989 Revision Date: January 31, 1997

SUBJECT: DISCHARGE MEMBER

MODELS: All 36" Circular Venders except Circular Pepsi

OBSOLETE
REFER TO TECHNICAL BULLETIN 397

DO THIS:

1. Remove the nuts and bolts that secure the discharge member to the delivery chute.
2. Slide the discharge member forward until the holes are aligned with holes A and B on figure 1.
3. Secure the discharge member with the nuts and bolts previously.

ORDER PART: B360,050,370.33 Discharge Member

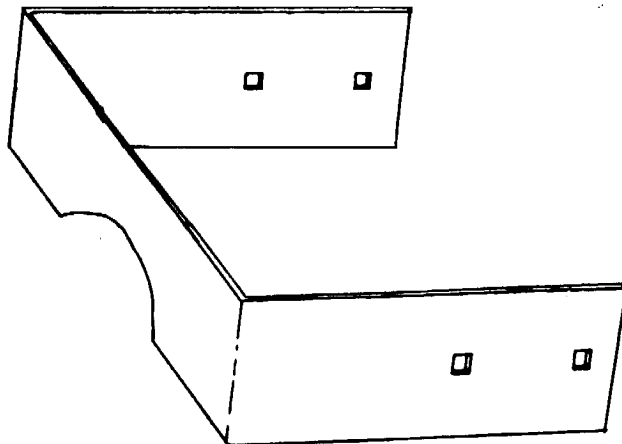


Figure 1