

# *Refreshment Center*

*(Expanded Can Capacity)*

## **PROGRAMMING GUIDE**





## TABLE OF CONTENTS

Programming Index .....	ii
Specifications .....	vi
Figure 1. Control Panel .....	1
Figure 2. Selection Panel .....	1
The Displays .....	2
The Function Keys .....	2
Other Keys .....	2
Control Panel Switch Functions Explained .....	3
Programming Flow Charts .....	4
Gain Access to the Supervisor Mode .....	7
Enter a New Supervisor Code .....	7
Lock or Unlock Mode or Payout Keys .....	8
Lock or Unlock Data Clearing Access .....	8
Set Printer or Dex Options .....	9
Select Printer Baud Rate (Printer Mode Only) .....	9
Select Coin Mechanism and Options .....	10
Select Bill Validator and Options .....	11
Select Display Language .....	11
Set up Winner Mode .....	12
Set Machine Configuration .....	13
Identify the Trays in the Merchandiser .....	14
Couple/Decouple Tray Motors .....	14
Select When the Can Unit Goes out of Service .....	15
View and Control Defrost Mode (Frozen Food Module Only) .....	16
Set Temperature (Supervisor Mode Only) .....	17
View Software Version .....	17
Set Day of Week and Time of Day .....	18
Set Month, Day, and Year .....	18
Set Time-of-Day Inhibited Vending .....	19
Set Time-of-Day Free Vending .....	19
Set Time-of-Day Discount Vending .....	19
Time Interval Editing .....	20
Select a Standby Message .....	22
Select an Out-of-Service Message .....	22
Select a Freevend Message .....	23
Edit Custom Messages .....	24
View Can or Food Unit Temperature .....	26
Payout Coins .....	26
Set Prices .....	27
View Nonresetable Sales and Vend Data .....	28
View Total Paid Sales .....	28
View Total Paid Sales by Tray .....	28
View Discount Sales by Time Interval .....	29
View Total Paid Vends .....	29
View Total Unpaid Sales .....	29
View Total Unpaid Sales by Tray .....	30
View Free Vends .....	30
View Winners .....	30
View Amount in Coin Box .....	31
View Amount in Validator .....	31
View Number of Test Vends .....	31



View Freevend Sales by Time Interval .....	32
View Time Data .....	32
View Machine ID Number .....	34
Clear All Resettable Data .....	34
Clear Paid Sales Data Only .....	34
Test Vend Selections and Verify Credit Added .....	34
Test the Display .....	35
Test the Motors .....	35
View Motor Status by Tray .....	36
Test the Food Door .....	37
Download Data to a PDCD .....	37
View Diagnostic Messages .....	38
Set Freevend Options .....	39

**PROGRAMMING INDEX**

Amount in	
Coin Box, View .....	31
Validator, View .....	31
Baud Rate, Select .....	9
Bill Validator and Options, Select .....	11
Can Unit	
Out of Service, Select When .....	15
Temperature, View .....	26
Clear	
Paid Sales Data Only .....	34
Resettable Data .....	34
Clearing Access, Data, Lock or Unlock .....	8
Code, Supervisor, New .....	7
Coin	
Box, View Amount .....	31
Mechanism and Options, Select .....	10
Payout .....	26
Configuration, Machine, Set .....	13
Control Defrost Mode .....	16
Couple Tray Motors .....	14
Credit Added, Verify .....	35
Custom Messages, Edit .....	24
Data	
Clearing Access, Lock or Unlock .....	8
Download to a PDCD .....	37
Nonresettable Sales and Vend, View .....	28
Resettable, Clear All .....	34
Time, View .....	32
Day Set .....	18
Day of Week, Set .....	18
Defrost Mode, View and Control .....	16
DEX Options .....	9
Diagnostic Messages, View .....	38
Discount	
Sales by Time Interval, View .....	29
Vending, Time-of-Day, Set .....	19
Display	
Test .....	35
Language, Select .....	11



Door, Food, Test ..... 37  
Download Data to a PDCD ..... 37  
Edit Custom Messages ..... 24  
Food  
    Unit Temperature, View ..... 26  
    Door, Test ..... 37  
Free Vend  
    Message, Select ..... 23  
    Options, Set ..... 39  
    Sales by Time Interval, View ..... 32  
    Time-of-Day, Set ..... 19  
    View Data ..... 30  
ID Number, View ..... 34  
Identify the Trays ..... 14  
Inhibited Vending, Time-of-Day, Set ..... 19  
Language, Display, Select ..... 11  
Lock  
    Data Clearing Access ..... 8  
    Mode or Payout Keys ..... 8  
Machine  
    Configuration, Set ..... 13  
    ID Number, View ..... 34  
Message  
    Custom, Edit ..... 24  
    Diagnostic, View ..... 38  
    Freevend, Select ..... 23  
    Out-of-Service, Select ..... 22  
    Standby, Select ..... 22  
Mode Keys, Lock or Unlock ..... 8  
Month, Set ..... 18  
Motor  
    Status, View by Tray ..... 36  
    Test ..... 35  
    Tray, Couple/Uncouple ..... 14  
New Supervisor Code ..... 7  
Nonresettable Sales and Vend Data, View ..... 28  
Options  
    DEX ..... 9  
    Printer ..... 9  
    Set Freevend ..... 39  
Out-of-Service  
    Message, Select ..... 22  
    Can Unit ..... 15  
Paid Sales  
    Data, Clear ..... 34  
    View Total ..... 28  
    View by Tray ..... 28  
Paid Vends, View Total ..... 29  
Payout  
    Coins ..... 26  
    Keys, Lock or Unlock ..... 8  
PDCD, Download Data to ..... 37  
Prices, Set ..... 27



Printer	
Baud Rate, Select .....	9
Options .....	9
Resettable Data, Clear All .....	34
Sales	
Data, Clear Paid .....	34
Data, View Nonresettable .....	28
Freevend, View by Time Interval .....	32
View	
Discount by Time Interval .....	29
Total Paid .....	28
Total Paid by Tray .....	28
Total Unpaid .....	29
Total Unpaid by Tray .....	30
Select	
Bill Validator and Options .....	11
Coin Mechanism and Options .....	10
Display Language .....	11
Freevend Message .....	23
Out-of-Service Message .....	22
Printer Baud Rate .....	9
Standby Message .....	22
When Can Unit Goes Out of Service .....	15
Selections, Test Vend .....	35
Set	
Day .....	18
Day of Week .....	18
DEX Options .....	9
Freevend Options .....	39
Machine Configuration .....	13
Month .....	18
Prices .....	27
Printer Options .....	9
Temperature .....	17
Time-of-Day Discount Vending .....	19
Time-of-Day Free Vending .....	19
Time-of-Day Inhibited Vending .....	19
Time of Day .....	18
Winner Mode .....	12
Year .....	18
Software Version, View .....	17
Standby Message, Select .....	22
Status, Motor, View by Tray .....	36
Supervisor	
Code, New .....	7
Mode, Gaining Access .....	7
Temperature	
Set .....	17
View	
Can Unit .....	26
Food Unit .....	26
Test	
Display .....	35
Food Door .....	37
Motors .....	35



Test Vend  
 Selections ..... 35  
 View ..... 31

Time-of-Day  
 Discount Vending, Set ..... 19  
 Free Vending, Set ..... 19  
 Inhibited Vending, Set ..... 19  
 Set ..... 18

Time Data, View ..... 32  
 Time Interval Editing ..... 20  
 Total Unpaid Sales, View ..... 29  
 Tray Motors, Couple/Uncouple ..... 14  
 Trays, Identify ..... 14  
 Uncouple Tray Motors ..... 14

Unlock  
 Data Clearing Access ..... 8  
 Mode or Payout Keys ..... 8

Unpaid Sales  
 View by Tray ..... 30  
 View Total ..... 29

Validator, View Amount ..... 31  
 Vend Data, View Nonresettable ..... 28  
 Vends, View Total Paid ..... 29  
 Verify Credit Added ..... 35  
 Version, Software, View ..... 17

View  
 Amount in Coin Box ..... 31  
 Defrost Mode ..... 16  
 Diagnostic Messages ..... 38  
 Discount Sales by Time Interval ..... 29  
 Free Vends ..... 30  
 Freevend Sales by Time Interval ..... 32  
 Machine ID Number ..... 34  
 Motor Status by Tray ..... 36  
 Nonresettable Sales Data ..... 28  
 Nonresettable Vend Data ..... 28  
 Number of Test Vends ..... 31  
 Paid Sales ..... 28  
 Paid Sales by Tray ..... 28  
 Paid Vends ..... 29  
 Software Version ..... 17  
 Temperature, Can Unit ..... 26  
 Temperature, Food Unit ..... 26  
 Time Data ..... 32  
 Unpaid Sales by Tray ..... 30  
 Unpaid Sales ..... 29  
 Validator Amount ..... 31  
 Winners ..... 30  
 Winner Mode, Set Up ..... 12  
 Winners, View ..... 30  
 Year, Set ..... 18



**SPECIFICATIONS**

**SPECIFICATIONS COMMON TO ALL MACHINES**

<b>DIMENSIONS</b>	72" (183 cm) high 40" (96.8 cm) wide 35.4" (90 cm) deep
<b>WEIGHT</b>	757 lbs (343.4 kg)
<b>AMBIENT TEMPERATURE</b>	Minimum: 41° F (5° C) Maximum: 90° F (32° C)
<b>OPERATING ENVIRONMENT</b>	For Indoor use only
<b>CAPACITIES</b>	E - Selections: 12 Items F - Selections: 31 or 32 Items Module Minimum - 215 items, Maximum - 220 Items
<b>OPTIONS AND ACCESSORIES</b>	
Coin box lock Base grille kit Flex Ace door lock & key Van door lock & key Data printer Debit card reader (future)	

**SPECIFICATIONS UNIQUE TO 115 VOLT MACHINES**

<b>ELECTRICAL</b>	115 Volts AC 60 Hertz 12 Amps Single phase
<b>REFRIGERATION</b>	Refrigerant 134a Charge - 10.9 oz
<b>OPTIONS AND ACCESSORIES</b>	
<b>COIN MECHANISM</b>	MARS TRC-6000 COINTRON 3000 MARS MC 5000 COINCO 9300L MARS TRC-6010XV (24 V) Maka/Conlux Model USLX-00401F (24 V) Coin Acceptors Model 9302-LF (24 V)
<b>BILL VALIDATORS</b>	Maka NB-10-400 Mars VFM1-L1-U4C Mars VN2521-U3E



**SPECIFICATIONS (continued)**

**SPECIFICATIONS UNIQUE TO 220 - 240 VOLT MACHINES**

<b>ELECTRICAL</b>	220-240 Volts AC 50 Hertz 6 Amps 750 Watts
<b>REFRIGERATION</b>	Refrigerant 134a Charge - 290 grams
<b>OPTIONS AND ACCESSORIES</b>	
<b>COIN MECHANISM</b>	Executive coin mechanism interface







## Introduction

How to program your RCX.

Some setup, test, and maintenance operations are computer controlled. The control panel switches (see figure 1) and the selection panel switches (see figure 2) regulate these operations.

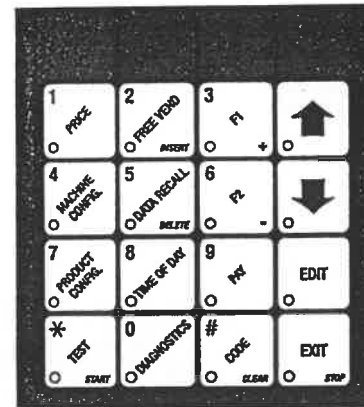


Figure 1. Control Panel

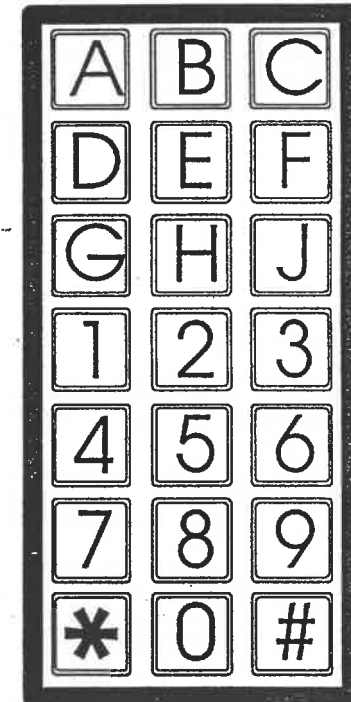


Figure 2. Selection Panel



## The Displays

The 10-character display performs two functions, and is referred to in this book as "the display":

1. It shows the customer's selection and how much credit is in the machine, as well as the ready, service, and time of day messages.
2. It provides information and feedback to the service person during maintenance.



## The Function Keys

The keys on the control panel can be used for up to three things:

**THE NUMBER**  
YOU MIGHT BE ASKED TO ENTER A NUMERICAL VALUE. PRESSING THIS KEY WILL ENTER A "5".



**THE PRIMARY PURPOSE**  
THIS IS THE MAIN JOB OF THE KEY. FROM THE STANDBY MESSAGE, IT WILL ALLOW YOU TO ENTER A PROGRAMMING MODE. IN THIS EXAMPLE, YOU CAN VIEW STORED SALES DATA.

**THE SECONDARY PURPOSE**  
THIS IS THE KEY'S "SECOND JOB". FOR EXAMPLE, THIS KEY CAN BE USED TO DELETE A CHARACTER WHEN YOU ARE EDITING CUSTOM MESSAGES.

## Other Keys

The MOVEMENT keys on the control panel let you move inside a mode, and back and forth between modes. To see how these keys let you move around, study the flow diagram on the next page.



The up and down arrow keys are your "legs", which let you move up and down the list of tasks. These keys are what let you continue from one step to the next in programming procedures.



This is your "activate" or "choose" key. It "opens a door" to additional information and lets you begin a programming task once you are inside of a mode. Sometimes, it is used as a toggle switch to show you your choices during a programming task.



This is your "end" key. Pressing it one or more times will move you back to the start of the mode, or all the way back to the standby message.



### Control Panel Switch Functions Explained

Each of the control panel switches has one or more jobs to do. This list will give you a short overview of those jobs.



Press this button to set the RCX into the Price Setting mode. You can see maximum and minimum machine prices, and change prices for entire machine, entire tray, or individual selection.



Press this button to select the Free Vend mode.



Press this button to view the temperature of a can, frozen, or refrigerated food unit, or software version number.



Press this button to:  
• Select display language • Select bill validator and options  
• Select coin mechanism and options • Set winner feature



Press this button to view total sales and vends by whole machine, tray, or selection. Clear resettable data.



Press this button to:  
• Download data into your portable data collection device (PDCD), OR  
• Set printer baud rate, depending upon which device you are using



Press this button to:  
• Set machine configuration • Couple and uncouple tray motors  
• Set which trays are active • Set food or can unit temperature



Press this button to:  
• Set time of day • Select display messages  
• Set day, month, year • Edit messages  
• Set up time of day intervals for inhibit, freevend, and discount vending



Press this button to pay one or more coins from the coin mechanism.



• Allows you to see any fault or condition that may place the machine out of service



Press this button to:  
• Perform TEST VENDS • Test displays  
• Test machine functions




Press this button to:  
• Enter the SUPERVISOR mode  
• Change the SUPERVISOR access code  
• Lock and unlock access to functions




## Programming Flow Charts

After you become familiar with the programming functions, you will be able to perform them without using the detailed, step-by-step tables. The following group of flow charts will give you a quick reference to the functions each key performs. If you need additional information, just refer to the page shown in the chart.


### Supervisor Functions

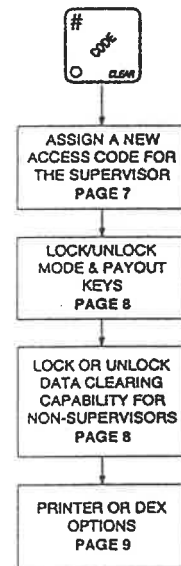

### Payout Coins

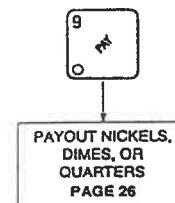

### Machine Configuration Functions

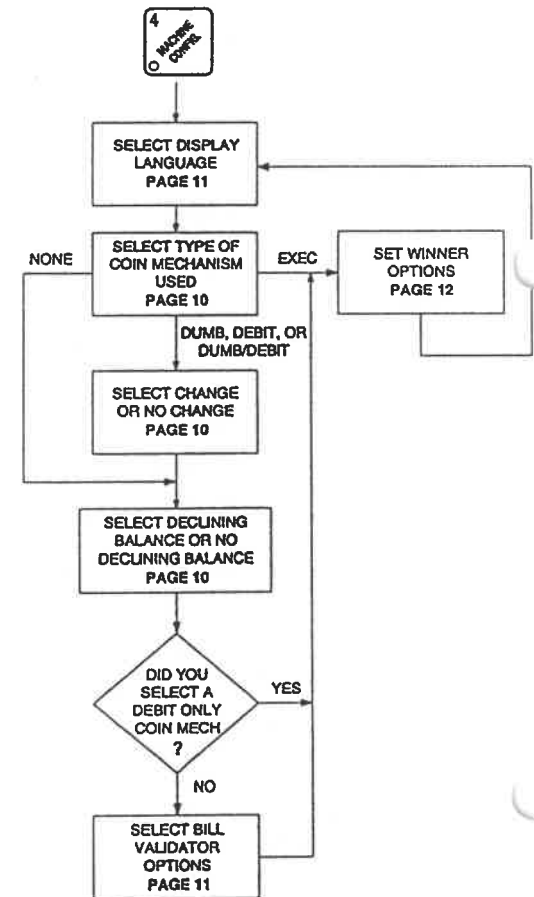




### Time of Day




### Pricing



### Tests

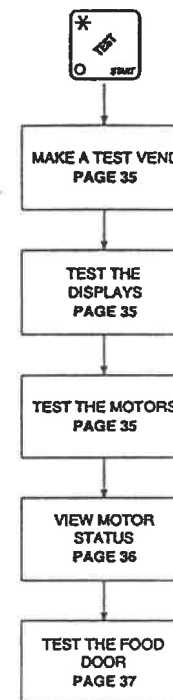


### Free Vend

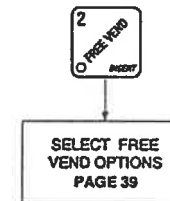





### Product Configuration Functions

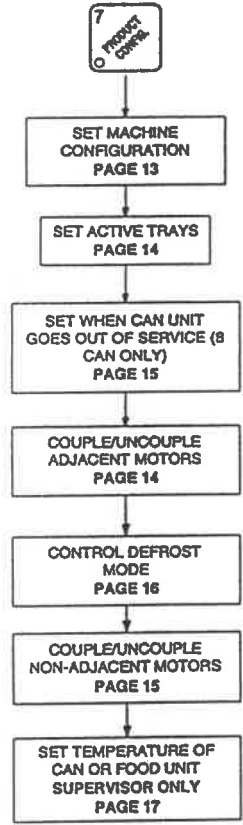


### Misc.

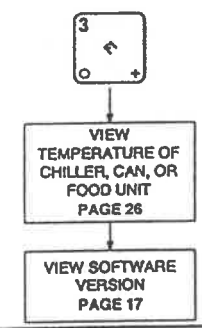


### View Diagnostics

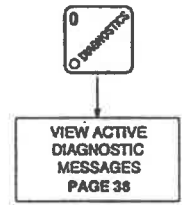


### View and/or Clear Data

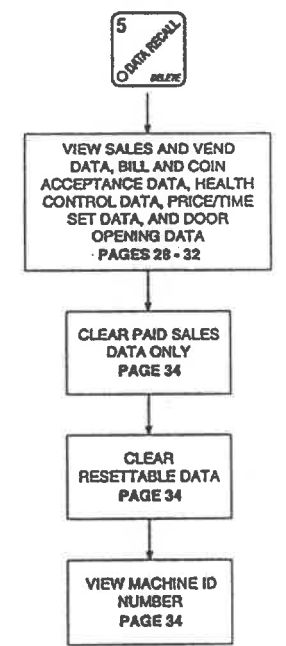

### DEX/Printer

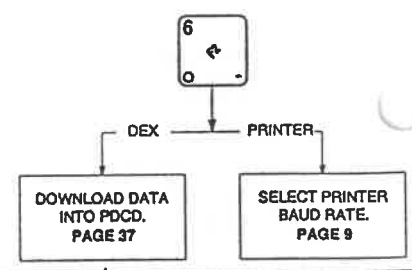

**GAIN ACCESS TO THE SUPERVISOR MODE**

1. Press . The display shows: **ENTER CODE**. You must enter the four-digit supervisor code within 6 seconds to gain access.


**NOTE**

A new machine has a factory-set supervisor code of 0000.

When you have entered the right code, you will hear two beeps and see **SUPERVISOR** in the display. After a few moments, the standby message returns.

2. At the standby message, press , then . You are now ready to perform various supervisor functions.

**ENTER A NEW SUPERVISOR CODE**

1. Follow the steps in GAIN ACCESS TO THE SUPERVISOR MODE.
2. Press  until the display shows **SUPER XXXX**. The X's represent the current supervisor code. Use the number keys to enter a new code.

**IMPORTANT!**


If you enter a new code, be sure to keep a written record of it. There is no other way to access the SUPERVISOR mode.

3. Press  until you have left the function.






 **LOCK OR UNLOCK MODE OR PAYOUT KEYS**

1. Follow the steps in **GAIN ACCESS TO THE SUPERVISOR MODE**.
2. Press  until the display shows either **X. LOCKED** or **X. UNLOCKE**


\*X\* refers to the number or character shown on the mode or payout key in question (1 through 9, # and \*). To see if a key is locked or unlocked, press that key.

3. Press  to change between locked and unlocked. When anyone other than the supervisor tries to enter a locked mode, the display shows **LOCKED**.


**NOTE**

The following mode keys cannot be locked out:



4. Press  until you have left the function.

 **LOCK OR UNLOCK DATA CLEARING ACCESS**


1. Follow the steps in **GAIN ACCESS TO THE SUPERVISOR MODE**.
2. Press  until the display shows either **UNLOCK CLR** or **LOCK CLR**.
3. **LOCK CLR** means that non-supervisors cannot clear resettable machine

sales and vend data from the  key.




4. Press  to switch between **UNLOCK CLR** and **LOCK CLR**.

**NOTE**

The supervisor can clear data regardless of this setting, provided the supervisor code was correctly entered first.




5. Press  until you have left the function.

**SET PRINTER OR DEX OPTIONS**

1. Follow the steps in **GAIN ACCESS TO THE SUPERVISOR MODE**.
2. Press  until the display shows **PRINTER, DEX ONLY**, or **DEX + CLR**.
3. **PRINTER** means that data will be sent directly to a printer.  
**DEX ONLY** means that data remains in memory after it is downloaded into a portable data collection device.  
**DEX + CLR** means that resettable data is cleared after it is downloaded into a portable data collection device.
4. Press  to switch between the three choices.
5. Press  until you have left the function.




**SELECT PRINTER BAUD RATE (PRINTER MODE ONLY)****BAUD RATE:**

The speed of data transfer, expressed in bytes per second. Your printer can receive data at a certain rate, and you must tell the machine what that rate is.

1. Press . One of the following is displayed:  
**BAUD 1200, BAUD 2400, BAUD 4800, BAUD 9600**
2. Press  until the correct baud rate for your printer is displayed.
3. Press  until you have left the function.



 **SELECT COIN MECHANISM AND OPTIONS**

1. Press  , then press  until the current COIN MECHANISM is shown in the display. Press  to choose the desired coin mechanism.

Your choices are: *DUMB MECH, DUMB/DEBIT, DEBIT ONLY, NO MECH, EXEC MECH, or FAST EXEC*

**NOTE**

If you selected *EXEC MECH* you can exit the function. If you selected *NO MECH*, go to step 3.

**CAUTION**

*FAST EXEC* should not be selected. It is designed for special circumstances in other model merchandisers.

2. Press  . One of the following is displayed:

*CHANGE.\$ 1.2.5* Change will be given for a \$1, \$2, or \$5 bill without a selection.

OR

*NO CHANGE.\$* Depending upon the bill validator you have installed, one of two possibilities exist when the coin return button is pressed: 1) The customer's bill is returned, or 2) A selection must be made to receive change.

Press  to display the desired choice.

If you selected *CHANGE.\$ 1.2.5*, press the appropriate key(s) (1, 2, or 5) to display the bill(s) for which change will be given.


**DECLINING BALANCE:** Once credit is established, multiple vends may occur until the credit is depleted below the price of the least expensive selection, or until the coin return is pressed.

3. One of the following is displayed:  
*DECLINE \$\$* - More than one vend is allowed, with a declining balance.

OR

*NO DECLINE* - A declining balance is not allowed.

Press  to display the desired choice.


4. Press  until you have left the function.

**SELECT BILL VALIDATOR AND OPTIONS**

1. Press , then press  until one of the following is displayed:

**OK. \$1.2.5.10.20** - The bill validator will accept \$1, \$2, \$5, \$10, and \$20 bills.

OR

**NO VALIDTR** - NO bills will be accepted, or there is no bill validator installed. (In that case, you can exit the function.) Press  to choose the desired

option. If you selected **OK. \$1.2.5.10.20**, you can press the 1, 2, 5, 6, or 7 key(s), respectively to display the bill(s) which will be accepted.

**NOTE:** If the display shows that only dollar bills will be accepted, and you press the 1 key, the display changes to **NO VALIDTR**.


2. Press . One of the following is displayed (If validator is enabled):

**\$1.ACC < 1.00** A \$1 bill will be accepted when there is less than a dollar's change available. **NOTE:** Selecting this could cause a customer to be short-changed.

OR


**\$1.INH < 1.00** Bills will not be accepted when less than a dollar's change is available.

Press  to display the desired choice.

3. Press  until you have left the function.

**SELECT DISPLAY LANGUAGE**

1. Press . The current LANGUAGE is shown in the display. Press

 to choose the desired language. Your choices are: **ENGLISH, DEUTSCH, FRANCAIS, ESPANOL, PORTUGUES, or SWEDISH.**

2. Press  until you have left the function.



 SET UP WINNER MODE

**WINNER:** At preselected intervals, a customer may receive a refund for a selection. You can select the intervals and qualifying selections.

**NOTE**

For simplicity, all grouped selections will be referred to as being on "trays". So, even though the cans are in a can module, these instructions will treat them as if they were on trays.

1. Press , then press  until one of the following is displayed:

*WINNER OFF* Winner function is disabled.


OR

*WIN XXX* Winners are allowed at certain intervals, represented by "XXX".

Press  to display the desired choice.



If you selected *WINNER OFF*, you can exit the function.

2. The display shows *WIN XXX*. XXX represents the number of vends which must occur per each winner vend. For example, an interval number of 50 means that a winner can happen any one time during the next 50 vends. Using the number keys, enter an interval number between 10 and 9999.

3. Press . The display shows \* - - - - - . The dashes in the display represent which trays are allowed winners. Press the appropriate letter key to enable a tray, press the key again to disable it. For example, pressing A, C, and E will cause the display to look like this: *A - C - E - - - -*, meaning that all A, C, and E selections can have a winner.





## ADVANCED OPTIONS:

- Press  to enable all trays.
- Press  to deactivate all trays.




## AN EXAMPLE . . .

You want to enable winners on all trays except E and F. Do the following:

- Press . The letters **A** through **J** appear in the display instead of the dashes.
  - Press "E" and "F". The letters **E** and **F** in the display are replaced by dashes.
- Press  until you have left the function.





## SET MACHINE CONFIGURATION


- Press . One of the following is displayed:  
**CNF.0 SNACK** (Machine with all trays)  
**CNF.1 CHLLD** (Chilled snack machine)  
**CNF.2 CAN** (Machine with can unit)  
**CNF.3 CH.CAN** (Chilled snack machine with can unit)  
**CNF.4 FOOD** (Any machine with refrigerated food module - includes chilled)  
**CNF.5 FRZN** (Any machine with frozen food module - includes chilled)
- Press  to select the configuration appropriate to your machine.  
**BE CAREFUL** to select the right configuration, because selecting the wrong one will affect other choices later on, and could cause problems.
- Press  until you have left the function.



 IDENTIFY THE TRAYS IN THE MERCHANDISER





1. Press  , then press  until the display shows something like this:  
**ABCDEFGHIJ**. This display means that all trays (A - J) are available for vending. An unavailable tray has its letter replaced by a blank space.
2. Press the appropriate letter to toggle the display on or off.

**NOTE**  
Unconfigured trays will not appear in the diagnostics.

3. Press  until you have left the function.

 COUPLE/UNCOUPLE TRAY MOTORS

Two motors may be electronically coupled to turn together to vend a wide product. In some cases, you may need to connect or disconnect the wire harness from a specific motor. See your Setup Guide for more information. **NOTE:** An even numbered motor (0, 2, 4, etc.) may only be coupled to an odd numbered motor (1, 3, 5, etc.)

1. Press  , then press  until the display shows **CPL MTRS**.
2. Press the letter of the tray you want to couple, or press  to couple motors on tray A, then press  to get to the desired tray.


COUPLE ADJACENT MOTORS:

- A. The display shows **+A.A.A.A.A.A.A.** This display means that on the A tray, all adjacent motors (0 and 1, 2 and 3, etc.) are coupled. **NOTE:** The +s and As represent motor positions 0 through 9.
- B. On the **CONTROL PANEL**, press the **EVEN** motor number of the pair you wish to couple or uncouple. In our example, to uncouple motors 0 and press 0. The display will now show **A.A.A.A.A.A.A.**







## COUPLE NON-ADJACENT MOTORS:

- A. Disconnect the motor(s) between the two you want to couple. Consult your Setup Guide for information on how to do this. The display shows **A.A.+ A.+A.+A.** This display means that on the A tray, adjacent motors 0 and 1 are NOT coupled, 2 is coupled to 5, 6 is coupled to 7, and 8 is coupled to 9. **NOTE:** The +s and As represent motor positions 0 through 9. If a motor is disconnected or not present (motors 3 and 4 in this example), its position is replaced by an empty space.
- B. On the CONTROL PANEL, press the motor number of the even motor of the motor pair you wish to couple or uncouple. For example, to uncouple motors 2 and 5, press 2. The + representing motor number 2 changes to a C. Please note that the left motor of a coupled pair **MUST** be an even-numbered motor.

3. Press  until you have left the function.

**SELECT WHEN THE CAN UNIT GOES OUT OF SERVICE  
(8 SELECT CAN UNIT ONLY)**

1. Press , then press  until the display shows either **E + F OFF @ 0** OR **E + F OFF @ 1**
2. **OFF @ 0** means that each can selection will go out of service when the last can is vended. **OFF @ 1** means that one can is left when the unit goes out of service.
3. Press  to switch between the two choices.
4. Press  until you have left the function.









**NOTE**

Do NOT manually remove cans from the can unit.






 **VIEW AND CONTROL DEFROST MODE (FROZEN FOOD MODULE ONLY)**



1. Press , then press  until the display shows:  
**DEFRST - H.MM** or **DEFRST + H.MM**
2. If a minus (-) sign is displayed, H.MM shows the hours and minutes until the next defrost cycle. If a plus (+) sign is displayed, H.MM shows how long the unit has been defrosting.
3. Press  to start a manual defrost cycle.
4. Press  to end a defrost cycle in progress.
5. Press . The display shows **DEFRST X/DY**. "X" indicates the number of defrost cycles per day (DY). Press  again to change the value of X.
6. Press  once to return to step 1.
7. Press  until you have left the function.





### SET TEMPERATURE (SUPERVISOR MODE ONLY)

1. If your machine is configured with a refrigerated module, press , then

press  until the display shows +/- +38°F. This means that 38°F is the current temperature setting.

2. Press  to raise the setting; press  to lower the setting.

3. Press  to choose between display in °F or °C.


4. Press  until you have left the function.

*Press START TO toggle "ON/OFF" temp will read out with the word ready*





### VIEW SOFTWARE VERSION

1. Press , and press  until the display shows VER XXXXXX.  
"XXXXXX" represents the current software version number.

2. Press  until you have left the function.


 **SET DAY OF WEEK AND TIME OF DAY**



1. Press . The display shows **DDDDD HH.MM**. "DDDDD" is the day of the week (up to 5 characters); HH.MM is the time of day in 24-hour format.
2. Press  until today's day is displayed.
3. Enter the current time using the number keys.

**NOTE**

9:00 am is entered with a leading zero, like this: 0900;  
9:00 pm is entered as 2100.



4. Press  until you have left the function.

 **SET MONTH, DAY, AND YEAR**

1. Press , and press  until the display shows **MM/DD YY**. "MM" is the month, "DD" is the date, YY is the year.
2. Enter the current month, date, and year using the number keys.



For example, press the following keys to enter February 22, 1996:

**0, 2, 2, 2, 9, 6**

3. Press  to switch between MM/DD and DD/MM formats.
4. Press  until you have left the function.



**SET TIME-OF-DAY INHIBITED VENDING**

Vending can be inhibited up to four times a day.

1. Press , then press  until the display shows *INHIB* - - - -.
2. Go to the TIME INTERVAL EDITING procedure for an example of how to set up time-of-day inhibited vending.



**SET TIME-OF-DAY FREE VENDING**

Vending can be free up to four times a day.

1. Press , then press  until the display shows *FREEV* - - - -.
2. Go to the TIME INTERVAL EDITING procedure for an example of how to set up time-of-day free vending.

**SET TIME-OF-DAY DISCOUNT VENDING**

Vending can be discounted up to four times a day. For example, this can be used to favor early-arriving employees.

1. Press , then press  until the display shows *DISCT* - - - -.
2. Go to the TIME INTERVAL EDITING procedure for an example of how to set up time-of-day discount vending.



# TIME INTERVAL EDITING

You can select up to four times of day for each special vending period.

**NOTE**

If two or more of these time periods overlap, the interval with the highest priority will overrule the other(s). This order of precedence is:

1. INHIBIT
2. FREEVEND
3. DISCOUNT


For example, if a DISCOUNT time period is scheduled for a certain area before the end of an INHIBIT time period, DISCOUNT does not begin until the INHIBIT interval has ended for that area.

The time interval editing procedure is almost the same for the INHIBIT, FREEVEND, and DISCOUNT intervals. There is one difference for the DISCOUNT time interval, so we will use it in our example. Assume you just finished the SET TIME-OF-DAY DISCOUNT VENDING procedure. Step 1 picks up where you left off . . .

1. The display shows *DISCT - - - -*. Press the number of the time interval you

want to edit, or  to edit time interval 1 (we'll use interval 1 for this example).

2. The display shows *1.DISCT ON* or *1.DISCT OFF*. This display tells you

whether your time interval (represented by 1) is on or off. Press  to change the condition of the time interval.








**NOTE**


If you turn an interval ON, it must be edited. You can edit a time interval now, then turn it OFF until another time.

3. Press . The display shows *1.DSCT X*. "X" represents the discount


percentage for this period. Enter a discount percentage of 25 with the number keys. (Discount percentages of from 0 to 99 are permitted.) The machine will apply a 25% discount to each price, rounding up to the nearest nickel (or whatever is the smallest coin accepted by the coin mechanism).



4. Press . The display shows **1.STRT X.XX**. X.XX is the currently set start time. Enter a new start time (24-hour format) for this interval. To enter the time for 3:30 pm, enter 1530.
5. Press . The display shows **1.STOP X.XX**. X.XX is the currently set stop time. Enter a new stop time (24-hour format) for this interval. To enter the time for 6:00 pm, enter 1800. You have now established a 25% discount that starts at 3:30 pm and ends at 6:00 pm.
6. Press . The display shows **1.@ - - - - -**. The dashes represent the days that this time interval is active. Pressing number keys 1 through 7 switches the days on/off. For example, press "2", "4", and "6". The display now shows **1.@ - 1 - 3 - 5 -**. This discount interval is only active on Monday, Wednesday, and Friday.
7. Press . The display shows **\* - - - - -**. The dashes represent the trays affected by this time interval. Press the appropriate letter key to enable a tray, press the key again to disable it. For example, pressing A, C, and E will cause the display to look like this: **A - C - E - - - -**, meaning that all A, C, and E selections are affected by this interval.  
 Press  to turn on all levels; press  to turn all levels off.
8. Press . The display shows **1. MESSG OFF** or **1. MESSG X**. "OFF" means there is no custom message selected, and "X" represents the custom message number set for this interval. Press the number key of the message (1 through 8) you want displayed, or press 0 to turn the message OFF for this time interval.

(You can also press  to scroll through the message list.)

**YOU CAN SET UP THE CUSTOM MESSAGE BY FOLLOWING THE CUSTOM MESSAGE EDITING PROCEDURE.**

9. Press  until you have left the function.



**STANDBY MESSAGE:** The message that is displayed during normal vending periods when there are no out-of-service faults on the machine.


### SELECT A STANDBY MESSAGE


1. Press , then press  until the display shows **STANDBY XX**.

\*XX\* represents the current message number selected for the standby message. Two dashes mean that the factory-set message is selected.

2. To select a message, just press the corresponding number (1 through 8). To display the factory-set message, press 0.

OR

Press  to scroll through all eight messages and the factory-set message.

3. Press  until you have left the function.


### SELECT AN OUT-OF-SERVICE MESSAGE


1. Press , then press  until the display shows **SERVICE XX**.

\*XX\* represents the current message number selected to display when the machine is out-of-service. Two dashes mean that the factory-set message is selected.

2. To select a message, just press the corresponding number (1 through 8). To display the factory-set message, press 0.

OR

Press  to scroll through all eight messages and the factory-set message.

3. Press  until you have left the function.


**SELECT A FREEVEND MESSAGE**


1. Press , then press  until the display shows *FREEVEND XX*.

\*XX\* represents the current message number selected for the message that displays when the machine is in the freevend mode. Two dashes mean that the factory-set message is selected.

2. To select a message, just press the corresponding number (1 through 8). To display the factory-set message, press 0.

OR

Press  to scroll through all eight messages and the factory-set message.

3. Press  until you have left the function.






## EDIT CUSTOM MESSAGES



1. Press , and press  until the display shows *EDIT MSG'S*.

Press the number of the message you want to edit. *MESSAGE X* is displayed (X represents the message number you pressed).


2. Press . The message text is displayed with the first character flashing.


3. To view the message, press . The message scrolls across the

display. To stop the scrolling, press .

4. When the character you want to change is flashing, either enter it directly, or use  and  to step through the character set until the desired character is displayed. Use the arrow keys to highlight different characters. See the section on the next page for an explanation of special keys and the character set.

### SHORTCUT

Instead of stepping through the whole character set to enter a letter that is not on your keypad, enter one close to the one you want, then step to it. Example: If you want to enter an L, first press .

then press  six times. Your L should now be displayed.

## THE END OF MESSAGE CHARACTER














This is the most important character in your message, because it tells the machine when the message is ended. If you don't use this character, your message will be followed by a bunch of zeros. This character can be selected either from the character set or by a direct key entry (see the next page).






### ENTERING YOUR MESSAGE

Most of the keys on the control panel have a special purpose to help you create and edit your messages:

-  Inserts an R at the flashing character.
-  Inserts a space at the flashing character.
-  Inserts an S at the flashing character.
-  Deletes the current character and closes up the space.
-  Inserts a T at the flashing character.
-  Deletes the current character and leaves the space.
-  Repeats the letter to the left of the flashing character.
-  Enters the special "end of message" character, which denotes the end of the message.
-  "Pages" through the message, ten characters (one screen) at a time.
-   Steps forward and backward through the message, one character at a time.
-   Steps forward and backward through the character list, one character at a time.


### THE CHARACTER SET

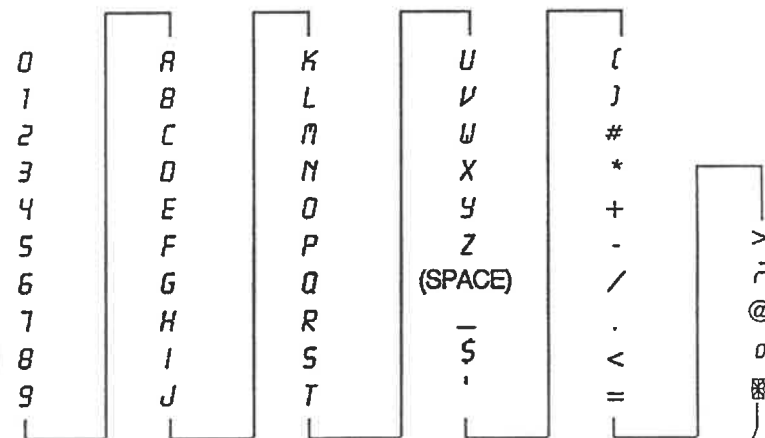

THIS IS THE END OF MESSAGE CHARACTER.





 **VIEW CAN OR FOOD UNIT TEMPERATURE**






1. Press . Depending on how your machine is configured, the display will show **TEMP 38 ° F**. This example shows that the temperature is 38 degrees Fahrenheit.

**NOTE**

If the food module door has been opened recently, the above display will include a numerical value indicating how many minutes remain in the health control grace period.


2. To change the display units, press . The display now shows **TEMP 6 ° C**.
3. Press  until you have left the function.

 **PAYOUT COINS**

1. Press . The display shows **NDQ = 123**.
2. Press  to pay out one *Nickel*.
3. Press  to pay out one *Dime*.
4. Press  to pay out one *Quarter*.
5. To continuously pay out coins, hold down the appropriate key.
6. Press  until you have left the function.




### SET PRICES



1. Press . The display shows **\*\* 2.50 .25**. This display shows the maximum and minimum prices set in the machine. In this example, the maximum price is \$2.50 and the minimum is \$0.25.

2. Enter prices as using one of the following methods:


#### SET ENTIRE MACHINE TO ONE PRICE . . .

- a. Press . The display shows **\*\* X.XX**. Enter a price using the number keys. All selections in the machine are now set to this price.

#### SET ALL SELECTIONS ON A TRAY TO ONE PRICE . . .




- a. Press the letter key (A - J) corresponding to the tray you want to price. The display shows **B\* X.XX .YY**. This display shows the maximum (X.XX) and minimum (.YY) prices set for the B tray.
- b. Press . The display shows **B\* X.XX**. Enter a price using the number keys. All selections on this tray are now set to this price.
- c. Press another letter key, or  to price another tray.

#### SET THE PRICE OF AN INDIVIDUAL SELECTION:




- a. Press the number of the selection to be priced. (Example: B1.) The display shows **B1 X.XX**. Enter a price using the number keys. The selection is now priced.
- b. Press another letter key, or  to price another selection.








### VIEW NONRESETTABLE SALES AND VEND DATA

1. Press . The display shows **NR\$ XX.XX**. "XX.XX" is a dollar and cents figure showing the total of all sales in the machine. This is a running total, and is not resettable.
2. Press . The display shows **NR X**. "X" is the total number of sales made by the machine. This is a running total, and is not resettable.
3. Press  until you have left the function.






### VIEW TOTAL PAID SALES

1. Press , then press  until the display shows **\*\*\$ XX.XX**. "XX.XX" is a dollar and cents figure showing the total of all PAID sales in the machine (as opposed to unpaid sales like winner and free vends). This is the total since the last time it was cleared.
2. Press  until you have left the function.




### VIEW TOTAL PAID SALES BY TRAY

1. Press , then press  until the display shows **\*\*\$ XX.XX**.
2. Press the letter of the tray you are interested in. The display shows **L\* XX.XX**, where "L" is the tray number and "XX.XX" is the total for the entire tray. Press  or  to switch between all trays, or press another tray letter.
3. Press  until you have left the function.

**VIEW DISCOUNT SALES BY TIME INTERVAL**




1. Press , then press  until the display shows **\*\*\$ XX.XX**.
2. Press . The display shows **1.DISC .00**. This is the total sales for discount interval 1 (not shown if zero).
3. Press  to view intervals 2 through 4.
4. Press  until you have left the function.

**VIEW TOTAL PAID VENDS**

1. Press , then press  until the display shows **\*\* XX**. "XX" is the total number of paid vends for the entire machine.
2. Press  until you have left the function.

**VIEW TOTAL UNPAID SALES****NOTE**

This does not appear if the total of unpaid sales is zero.






1. Press , then press  until the display shows **00\$ XX.XX**.  
"XX.XX" is the total unpaid sales (free vends, winner vends, 100% discounts, zero price vends) for the entire machine.
2. Press  until you have left the function.








 **VIEW TOTAL UNPAID SALES BY TRAY**

**NOTE**






This does not appear if the total is zero.

1. Press , then press  until the display shows **-0\$ XX.XX**.
2. Press the letter of the tray you are interested in. The display shows **0L XX.XX**, where "L" is the tray number and "XX.XX" is the total for the entire tray. Press  or  or press another letter to switch between trays.
3. Press  until you have left the function.




 **VIEW FREE VENDS (NOT SHOWN IF ZERO)**

1. Press , then press  until the display shows **-0\$ XX.XX**.
2. Press , then press  until the display shows **FRV XX.XX**.  
\*XX.XX\* is the total machine-wide freevends, shown even if zero.
3. Press  until you have left the function.






 **VIEW WINNERS (NOT SHOWN IF ZERO)**

1. Press , then press  until the display shows **-0\$ XX.XX**.
2. Press , then press  until the display shows **WIN XX.XX**.  
\*XX.XX\* is the total machine-wide winners, shown even if zero.
3. Press  until you have left the function.




 **VIEW AMOUNT IN COIN BOX (NOT SHOWN IF ZERO)**

1. Press , then press  until the display shows *CBX XX.XX*.  
\*XX.XX\* is the dollar and cents amount in the coin box.
2. Press  until you have left the function.

 **VIEW AMOUNT IN VALIDATOR (NOT SHOWN IF ZERO)**

1. Press , then press  until the display shows *DBV XX.XX*.  
\*XX.XX\* is the dollar amount in the bill stacker.
2. Press  to show the quantities of bills in the stacker. For example, the display shows *\$01 20*, meaning that there are 20 dollar bills in the bill stacker. Press  again to show the quantities of other bills, such as \$5s, \$10s, or \$20s.
3. Press  until you have left the function.







 **VIEW NUMBER OF TEST VENDS (NOT SHOWN IF ZERO)**

1. Press , then press  until the display shows *TST X*.  
\*X\* is the number of test vendes.
2. Press  until you have left the function.





**VIEW FREEVEND SALES BY TIME INTERVAL (NOT SHOWN IF ZERO)**

1. Press , then press  until the display shows *-0\$ XX.XX*.
2. Press , then press  until the display shows *1.FRV .00*. This is the total sales for freevend Interval 1, shown even if zero.
3. Press  to view intervals 2 through 4.
4. Press  until you have left the function.



**VIEW TIME DATA**

1. Press , then press  until the display shows *TIME DATA*.
2. Press . The following message scrolls across the display:

*MAIN.1 237M 01/30 10.13*

This example shows the latest time interval the main (machine) door was open (1). It was open for 237 minutes, and was opened on January 30 (01/30) at

10:13 am (10.13). Press . If applicable, similar displays will appear for intervals 2, 3, and 4. Otherwise, go to the next step.

3. The following message scrolls across the display:

*AUX.5 33M 01/30 10.58*

This example shows the latest time interval the auxillary (food module) door was open (5). It was open for 33 minutes, and was opened on January 30 (01/

30) at 10:58 am (10.58). Press . If applicable, similar displays will appear for intervals 6, 7, and 8. Otherwise, go to the next step.



4. The following message scrolls across the display:

**HEALTH OFF 01/30 14.09 MAX. 69 ° F**

This example shows that the health control timer turned off on January 30 (01/30) at 2:09 pm (14.09), and the maximum temperature reached was 69°F.

**NOTE**

The temperature display units will be in °C if you selected Celsius during the temperature display function.

5. Press . The following message scrolls across the display:

**LAST POWER 01/30 13.51 FOR 00. 0.23**

This example shows that the last time the machine lost power was on January 30 (01/30) at 1:51pm (13.51) for zero days, zero hours, and 23 minutes (00. 0.23).

6. Press . The following message scrolls across the display:

**LONGS.T POWER 01/30 10.58 FOR 00. 2.47**

This example shows that the longest time the machine was without power was on January 30 (01/30) at 10:58am (10.58) for zero days, 2 hours and 47 minutes (00. 2.47).

7. Press . The following message scrolls across the display:

**FULL CLEAR 01/30 8.58**

This example shows that the last time resettable sales was fully cleared was on January 30 (01/30) at 8:58am (8.58).

8. Press . The following message scrolls across the display:

**TIME SET 01/30 9.15**

This example shows that the last time the time or date was set was on January 30 (01/30) at 9:15 am (9.15).

9. Press . The following message scrolls across the display:





**PRICE SET 01/30 9.42**

This example shows that the last time prices were set was on January 30 (01/30) at 9:42 am (9.42).




10. Press  until you have left the function..







### VIEW MACHINE ID NUMBER

1. Press , then press  or  until the display shows *I.D. XXXXXX*. The X's represent the 6-digit machine ID number.
2. You can edit the machine ID number if the SUPERVISOR access code has been previously entered.
3. Press  until you have left the function.


### CLEAR ALL RESETTABLE DATA

1. Press . The display shows *NRS\$ XX.XX*. This is a running total, and is not resettable.
2. Press and hold . Two beeps sound and the display shows *CLEARING* momentarily, and then changes to *FINISHED*. All data is cleared.
3. Press  until you have left the function.

### CLEAR PAID SALES DATA ONLY


1. Press , then press  until the display shows *\*\*\$ XX.XX*.  
 \*XX.XX\* is a dollar and cents figure showing the total of all PAID sales in the machine (as opposed to unpaid sales like winner and free vends). This is the total since the last time it was cleared.
2. Press and hold . Two beeps sound and the display shows *CLEARING* momentarily, and then changes to *FINISHED*. All paid sales data is cleared; other data is not cleared.
3. Press  until you have left the function.

**TEST VEND SELECTIONS AND VERIFY CREDIT ADDED**






1. Press . The display shows *TEST .00*. You may now test vend selections. If you insert money into the machine, the zeros in the display will be replaced with the amount of the credit. After the item vends, your money will be returned.

**NOTE**






You may make one more test vend if you close the door while still in TEST VEND mode.

2. Press  until you have left the function.

**TEST THE DISPLAY**




1. Press  , then press  until the display shows *DSPLY TEST*.
2. Press  to light all display segments; press  to turn them off.
3. Pressing a NUMBER KEY on the control panel causes all segments to display that character.
4. Press  until you have left the function.

**TEST THE MOTORS**

1. Press  , then press  until the display shows *TEST MTRS*.
  2. Press  to run all snack motors one time.
- OR -
3. Press  to run only those motors not home or jammed. After motor is run, an error message will show if any motors are still jammed or not home.
  3. Press  until you have left the function.





 **VIEW MOTOR STATUS BY TRAY**

1. Press , then press  until the display shows *TST MTRS.*
2. Press  or the letter of the tray you want to view.
3. The display will show the status of all motors on the tray:
 


(Tray letter)	(If motor is present)
+	(If motor is present and coupled to the next odd motor)
(blank)	(If motor is not present and not coupled)
P	(If motor is coupled but not present)
.	(If the motor is home)
!	(If there is a motor error such as jammed, tray not detected or missing)

The following example is for tray C with 7 motors present and home with none jammed. Motors 1 and 3 are not present, 6 and 7 are coupled, and 8 is coupled to 9 but is not present nor home:




4. Press  to run all motors on this tray.
 

- OR -

 Press  to run only those motors in error.
 

- OR -



 Press a number key to run that motor only.
5. Press  until you have left the function.

 **TEST THE FOOD DOOR (FOOD OR FROZEN ONLY)**

1. Press , then press  until the display shows **FOOD 0123\***.

The display represents the states of various switches and display under the following conditions:

- 0** Vend door lock switch is locked
- 1** Loading door is closed
- 2** Food door is open
- 3** Food door is closed
- \*** Door is jammed or other error exists


2. Press  to move the vend door to a new position; vend door will lock if the door is opened.
3. Press  until you have left the function.

 **DOWNLOAD DATA TO A PDCD**

1. Connect your portable data collection device (PDCD) per its operating instructions.
2. Press . Data is downloaded into your PDCD.


**NOTE**

Depending upon the setting selected in set **PRINTER OR DEX OPTIONS**, data may be cleared after the download is complete.


3. Press  until you have left the function.



 **VIEW DIAGNOSTIC MESSAGES**

1. Press . the display shows any of the following diagnostic messages, depending upon any fault(s) present:

<b>KEYPAD XY</b> .....	Key(s) x, y stuck.
<b>ROM ERROR</b> .....	Error in the programming EPROM. Machine will not operate.
<b>TEMP REF</b> .....	The temperature reference on the main PCB cannot be read.
<b>TEMP SENSE</b> .....	The temperature sensor cannot be read.
<b>TEMP RANGE</b> .....	The temperature sensor is out of range.
<b>NO MECH</b> .....	Coin mech not detected - machine will not operate if configured for coin mech.
<b>MECH COMM</b> .....	Incomplete coin mech communications -- check harness.
<b>MECH.SENSOR</b> .....	Coin mech reporting a bad tube sensor - replace mech.
<b>DEBIT CARD</b> .....	Card reader reporting error - machine will not operate if configured for DEBIT ONLY
<b>CHECK DBV</b> .....	Bill validator reporting error - machine will not operate. Empty stacker, clear jams, etc.
<b>DBV COMM</b> .....	Incomplete bill validator communications -- check harness
<b>CHK PRICE</b> .....	Price error detected and changed to maximum - check prices.
<b>CHK CONFIG</b> .....	A PRODUCT CONFIG value was out of bounds and set to nominal - check all PRODUCT CONFIGs.
<b>HEALTH OFF</b> .....	Presently out of service because of a health control temperature error (MAX. xx0F). Machine will not operate.
<b>NO ERRORS</b> .....	None of the above errors are detected.
<b>ERR A B C</b> (etc) .....	Error exists on tray A, B, C, etc. Motor may be jammed, not home, or a couple error exists.
<b>FOOD 01234*</b> .....	Some errors associated with the food door exists.

2 Press  then Edit



## SET FREEVEND OPTIONS

1. Press  until one of the following is displayed:

**FREE OFF** - Normal vending mode. No items are on freevend. A closure on the keyswitch input causes the machine to go out of service.

- OR -

**FREE ALL** - All items are on freevend. The credit display shows  
**NO MONEY REQUIRED**

A closure on the keyswitch causes the machine to go out of service.


- OR -

**FREE W/KEY** - All items are freevended while there is a closure on the keyswitch input. Normal cash sales are supported when the keyswitch input is open.

- OR -

**FREE ONCE** - A closure on the keyswitch input causes only the next item to be freevended. Coin mechanism errors are ignored. This state is designed for card or token systems where one item is vended per token. Normal cash sales are also supported.

2. Press  until the option you want is displayed.

3. Press  until you have left the function.